

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Salter](#) /

› [Salter 396 SVXR Contour Digital Kitchen Timer Instruction Manual](#)

## Salter 396 SVXR

# Salter 396 SVXR Contour Digital Kitchen Timer Instruction Manual


## INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Salter 396 SVXR Contour Digital Kitchen Timer. Please read this manual thoroughly before operating the device and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

### **WARNING: This product contains a button/coin battery.**

Swallowing can cause severe or fatal injuries within 2 hours. Keep batteries out of reach of children (whether new or used). If you think batteries may have been swallowed or are inside any part of the body, seek immediate medical attention.

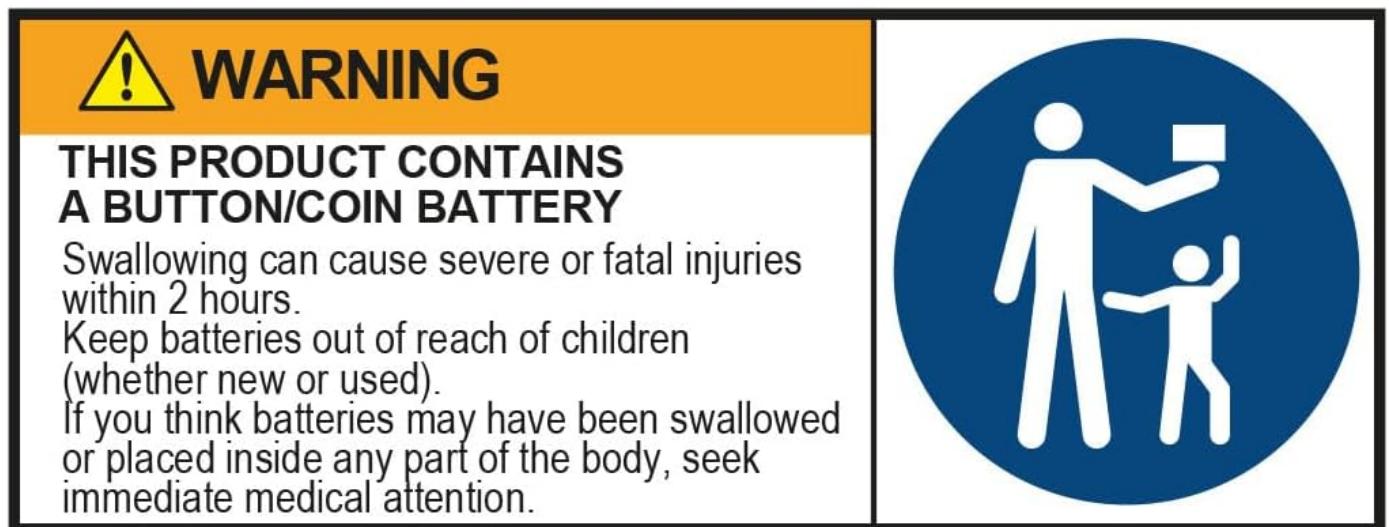

*Image description: A warning label indicating the presence of a button/coin battery. The text warns that swallowing can cause severe or fatal injuries within 2 hours and advises keeping batteries out of reach of children. A pictogram shows an adult holding a battery away from a child.*

## PRODUCT FEATURES

- Large LCD digital display for easy readability.

- Audible alarm for alerts.
- Compact design, ideal for travel and easy storage.
- Countdown and count-up functions up to 99 minutes and 59 seconds.
- Large START/STOP button for quick operation.
- Multiple placement options: magnetic attachment or freestanding.

## SETUP

### Battery Installation

1. Locate the battery compartment on the back of the timer.
2. Open the compartment cover.
3. Insert one LR44 battery, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover. Ensure it is properly latched to prevent accidental opening.

*Note: The product includes one LR44 battery.*

## OPERATING INSTRUCTIONS

### Setting the Countdown Timer

1. Press the **MINUTE** button to set the desired minutes.
2. Press the **SECOND** button to set the desired seconds.
3. To clear the current setting, press the **RESET** button.
4. Press the **START/STOP** button to begin the countdown. The display will show the remaining time.
5. When the countdown reaches zero, an audible alarm will sound.
6. Press the **START/STOP** button to silence the alarm and stop the timer.



*Image description: A close-up view of the Salter 396 SVXR digital kitchen timer. The LCD screen displays "00 M 00 S", indicating it's ready to be set. Buttons for Minute, Second, Start/Stop, and Reset are visible on the sides.*

## Using the Count-Up Timer (Stopwatch Function)

1. Ensure the timer display is at "00 M 00 S". If not, press the **RESET** button.
2. Press the **START/STOP** button to begin counting up. The display will show elapsed time.
3. Press the **START/STOP** button again to pause the count-up.
4. Press **START/STOP** to resume, or **RESET** to clear the elapsed time.



*Image description: The Salter 396 SVXR digital kitchen timer is shown on a light-colored kitchen counter, displaying "05 M 13 S". It is positioned next to a wooden cutting board and a striped kitchen towel, indicating its use in a kitchen environment.*

## PLACEMENT OPTIONS

The Salter 396 SVXR timer offers versatile placement options:

- **Magnetic Attachment:** The timer features a magnetic back, allowing it to be securely attached to metallic surfaces

such as refrigerators, ovens, or other magnetic appliances.

- **Freestanding:** A built-in stand allows the timer to be placed upright on any flat surface, including countertops or tables.



*Image description: The Salter 396 SVXR digital kitchen timer is shown magnetically attached to the side of a black oven, displaying "14 M 51 S". This demonstrates its magnetic placement capability.*



*Image description: The Salter 396 SVXR digital kitchen timer is shown freestanding on a dark kitchen counter, displaying "00 M 00 S". It is positioned next to a stack of black plates, illustrating its use on a flat surface.*

## MAINTENANCE

- Clean the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse in water.
- If the display becomes dim or the alarm weakens, replace the battery.
- Store the timer in a dry place when not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Battery is low or incorrectly installed.	Replace the LR44 battery, ensuring correct polarity.

Problem	Possible Cause	Solution
Alarm is not sounding or is too quiet.	Battery is low.	Replace the LR44 battery.
Timer not responding to button presses.	Internal malfunction or battery issue.	Replace battery. If problem persists, contact customer support.

## SPECIFICATIONS

- Model Number:** 396 SVXR
- Brand:** Salter
- Color:** Silver
- Material:** Plastic
- Dimensions (L x W x H):** 9.5 x 1.8 x 6 cm
- Weight:** 60 grams
- Max Timer Setting:** 99 minutes, 59 seconds
- Battery:** 1 x LR44 (included)
- Display Type:** LCD Digital



*Image description: The Salter 396 SVXR digital kitchen timer is shown with its approximate dimensions indicated by arrows: 9.5 cm in length and 6 cm in height.*

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the

official Salter website.

