

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER FP2500B PowerPro Wide-Mouth 10-Cup Food Processor Instruction Manual

BLACK+DECKER FP2500B

BLACK+DECKER FP2500B PowerPro Wide-Mouth 10-Cup Food Processor Instruction Manual

Model: FP2500B

INTRODUCTION

Thank you for choosing the BLACK+DECKER FP2500B PowerPro Wide-Mouth 10-Cup Food Processor. This appliance is designed to simplify your food preparation tasks, offering versatility for slicing, chopping, shredding, grating, and pureeing. Please read this manual thoroughly before use to ensure safe and efficient operation.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of injury, always ensure the food processor lid is securely locked in place before operating. The appliance is designed with safety interlocks that prevent operation if the bowl or lid is not correctly assembled. Never attempt to bypass or defeat these safety features. Ensure all components are properly seated and locked before turning on the unit.

Always unplug the appliance from the outlet when not in use, before putting on or taking off parts, and before cleaning. Avoid contact with moving parts. Do not immerse the motor base in water or other liquids. Close supervision is necessary when any appliance is used by or near children.

PRODUCT OVERVIEW AND COMPONENTS

The BLACK+DECKER FP2500B Food Processor includes the following main components:

- Motor Base with controls (Off/Pulse, On)
- 10-Cup Work Bowl
- Work Bowl Cover with Wide-Mouth Feed Chute
- Food Pusher

- Stainless-Steel Chopping Blade
- Slicing/Shredding Disk
- Disk Stem





Figure 1: Fully assembled BLACK+DECKER FP2500B Food Processor with ingredients in the work bowl.



Figure 2: Stainless-steel chopping blade, used for mincing, chopping, and pureeing.



Figure 3: Reversible slicing/shredding disk, for uniform slicing and shredding tasks.



Figure 4: Food pusher, used to guide ingredients through the feed chute.

SETUP AND ASSEMBLY

1. Place the motor base on a clean, dry, and stable surface. The suction cups on the base will help secure it.
2. Place the work bowl onto the motor base, aligning the handle with the front of the base. Turn the bowl clockwise until it locks into place.
3. Insert the desired accessory:
 - For chopping/pureeing: Carefully place the stainless-steel chopping blade onto the center shaft in the work bowl.
 - For slicing/shredding: Place the disk stem onto the center shaft, then place the slicing/shredding disk onto the disk stem with the desired side (slicing or shredding) facing up.
4. Add ingredients to the work bowl. Do not exceed the MAX fill line.
5. Place the work bowl cover onto the work bowl, aligning the feed chute with the handle. Turn the cover clockwise until it locks into place. Ensure the safety interlock is engaged.
6. Insert the food pusher into the feed chute.
7. Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

This food processor features two speed settings and a pulse function for precise control.

- **On Button:** Press the "On" button for continuous operation.
- **Off/Pulse Button:** Press and hold the "Off/Pulse" button for short bursts of power. Release to stop. This is ideal for coarse chopping or when precise control is needed.

Processing Food:

1. Ensure the food processor is properly assembled and locked.
2. Add ingredients to the work bowl or through the wide-mouth feed chute. For slicing/shredding, use the food pusher to guide ingredients.
3. Select the desired speed or use the pulse function.
4. Process until the desired consistency is achieved.
5. Once finished, press the "Off/Pulse" button to stop the appliance.
6. Unplug the unit before disassembling or removing food.

Tips for Best Results:

- Cut large foods into pieces that fit easily into the feed chute.
- For even chopping, process similar-sized pieces of food at a time.
- Do not overload the work bowl.
- For liquids, ensure the work bowl cover is securely locked to prevent leaks.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your food processor.

1. Always unplug the appliance before cleaning.
2. Disassemble all removable parts: work bowl, work bowl cover, food pusher, chopping blade, slicing/shredding disk, and disk stem.
3. All removable parts are dishwasher-safe (top rack recommended) or can be hand washed with warm, soapy water. Use caution when handling sharp blades.
4. Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. Ensure all parts are thoroughly dry before reassembling or storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; work bowl or cover not locked; safety interlock not engaged.	Ensure power cord is securely plugged in. Verify work bowl and cover are correctly assembled and locked into place.
Food is unevenly processed.	Too much food; food pieces are too large; insufficient processing time.	Process smaller batches. Cut food into uniform pieces. Use the pulse function for better control.
Lid lifts during operation (safety concern).	Lid not securely locked; damaged lid latches.	Immediately turn off and unplug the unit. Ensure the lid is fully locked. If latches are damaged, discontinue use and contact customer service for replacement parts. Do not operate with a damaged lid.
Motor seems strained or stops.	Overloaded work bowl; ingredients are too hard.	Reduce the amount of food. Cut hard ingredients into smaller pieces. Allow the motor to cool down if it overheats.

SPECIFICATIONS

- **Brand:** BLACK+DECKER
- **Model:** FP2500B
- **Capacity:** 10 Cups
- **Power:** 500 Watts
- **Speeds:** 2 (High, Low) plus Pulse
- **Special Feature:** Wide-Mouth Feed Chute, Interchangeable Blade

- **Product Dimensions:** 13.62"D x 9.63"W x 16.63"H
- **Item Weight:** 8 pounds
- **Blade Material:** Stainless Steel
- **Care Instructions:** Hand Wash, Dishwasher-safe parts

WARRANTY AND CUSTOMER SUPPORT

This BLACK+DECKER food processor typically comes with a **1-year limited warranty** from the date of purchase, covering defects in material or workmanship. For warranty claims, replacement parts, or technical assistance, please refer to the contact information provided in your product packaging or visit the official BLACK+DECKER website. For additional support and product information, you may visit the [BLACK+DECKER Store on Amazon](#).

