

[Manuals.plus](#) /

› [Homebasix](#) /

› HOMEBASIX FT-40 16-Inch 3-Speed Oscillating Table Fan User Manual

Homebasix FT-40

HOMEBASIX FT-40 16-Inch 3-Speed Oscillating Table Fan User Manual

This manual provides essential information for the safe and efficient operation, maintenance, and care of your HOMEBASIX FT-40 16-Inch 3-Speed Oscillating Table Fan.

1. PRODUCT OVERVIEW

The HOMEBASIX FT-40 is a 16-inch table fan designed to provide effective air circulation for indoor spaces. It features three-speed settings, adjustable vertical tilt, and a full 90-degree oscillation function to distribute air across a wider area. The fan is equipped with a durable powder-coated safety grill and easy-to-use pushbutton controls.



Figure 1: The white HOMEBASIX FT-40 16-Inch 3-Speed Oscillating Table Fan, showcasing its three blades, protective grill, and control panel at the base.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the fan before cleaning or performing any maintenance.

- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel.
- Keep fingers and other objects away from the fan blades and grill during operation.
- Do not use the fan near water or in excessively humid environments.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- This fan is intended for indoor use only.

3. SETUP AND ASSEMBLY

The HOMEBASIX FT-40 fan is designed for minimal assembly. Typically, it arrives largely pre-assembled. Ensure all packaging materials are removed before use.

3.1 Initial Placement

Place the fan on a firm, level surface where it will not tip over. Ensure there is adequate space around the fan for proper air circulation and oscillation.

3.2 Power Connection

Plug the fan's power cord into a standard 120 Volt AC electrical outlet. Ensure the outlet is easily accessible for unplugging if necessary.

4. OPERATING INSTRUCTIONS

The HOMEBASIX FT-40 fan offers simple controls for speed, oscillation, and tilt adjustment.

4.1 Speed Control

The fan features pushbutton controls located on its base. Press the desired button to select a speed setting:

- **OFF:** Turns the fan off.
- **1 (Low):** Provides a gentle breeze.
- **2 (Medium):** Offers moderate airflow.
- **3 (High):** Delivers maximum air circulation.

4.2 Oscillation Function

To activate the oscillation feature, locate the small knob on the top-rear of the fan motor housing. Push this knob down to enable the fan to sweep from side to side, distributing air over a wider area. To stop oscillation and direct airflow in a fixed direction, pull the knob upwards.

4.3 Vertical Tilt Adjustment

The fan head can be manually tilted up or down to adjust the vertical angle of the airflow. Gently hold the fan head and move it to the desired position. The fan will remain in the set position.

5. CARE AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your fan. Always unplug the fan before cleaning.

5.1 Cleaning the Fan Blades and Grill

1. Unplug the fan from the power outlet.
2. Carefully remove the front safety grill. Some models may have clips or screws that need to be disengaged.
3. Once the grill is removed, the fan blades can be accessed. Gently unscrew or unclip the fan blade cap and remove the blades.
4. Wipe the fan blades and both front and rear grills with a soft, damp cloth. For stubborn dust, a mild soap solution can be used. Ensure all parts are completely dry before reassembly.
5. Reattach the fan blades, blade cap, and front safety grill, ensuring all components are securely fastened.

5.2 General Cleaning

Wipe the exterior surfaces of the fan with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.

6. TROUBLESHOOTING

If your fan is not operating correctly, consult the following common issues before seeking professional service:

- **Fan does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the speed setting is selected (not on 'OFF').
- **Reduced airflow:** The fan blades or grill may be obstructed by dust or debris. Refer to the 'Care and Maintenance' section for cleaning instructions.
- **Unusual noise:** Check for any loose parts or obstructions within the fan grill. Ensure the fan is on a stable surface.

If problems persist after checking these points, discontinue use and contact customer support.

7. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Homebasix
Model Number	FT-40
Electric Fan Design	Table Fan
Diameter	16 Inches
Number of Power Levels	3

Special Feature	Oscillating
Voltage	120 Volts
Item Weight	5.61 Pounds
Product Dimensions	1"D x 1"W x 1"H
Finish Type	Powder Coated
Indoor/Outdoor Usage	Indoor
Control Method	Pushbutton

8. WARRANTY AND CUSTOMER SUPPORT

For information regarding warranty coverage, product support, or to purchase replacement parts, please refer to the documentation included with your product or contact Homebasix customer service directly.

Please retain your proof of purchase for any warranty claims.