

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Canon](#) /
- › [Canon EOS 7D Digital SLR Camera Body Instruction Manual](#)

## Canon EOS 7D

# Canon EOS 7D Digital SLR Camera Body Instruction Manual

Model: EOS 7D

## INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Canon EOS 7D Digital SLR camera body. Please read this manual thoroughly before using the camera and keep it for future reference.



Front view of the Canon EOS 7D Digital SLR camera body, showing the lens mount and grip.

## SETUP

### 1. Battery Installation

The EOS 7D uses one Battery Pack LP-E6. A CR1616 lithium-ion battery is also used for date/time retention.

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert the LP-E6 battery pack with the electrical contacts facing inward, ensuring it clicks into place.

3. Close the battery compartment cover securely.
4. For the date/time battery, refer to the dedicated section in the full user manual for replacement instructions.

## 2. CF Card Installation

The camera records images directly to a CompactFlash (CF) card.

1. Open the CF card slot cover on the side of the camera.
2. Insert the CF card with the correct orientation until it is fully seated.
3. Close the CF card slot cover securely.



Side view of the Canon EOS 7D, showing the open CF card slot for media insertion.

### 3. Attaching a Lens

The EOS 7D is compatible with Canon EF and EF-S lenses.

1. Remove the body cap from the camera and the rear cap from the lens.
2. Align the red or white index mark on the lens with the corresponding mark on the camera body.
3. Rotate the lens clockwise until it locks into place.

### 4. Initial Settings

Upon first power-on or after battery replacement, you may need to set the language and time zone.

1. Turn the camera on using the power switch.
2. Follow the on-screen prompts to select your preferred language.
3. Set the date, time, and time zone.

## OPERATING INSTRUCTIONS

### 1. Basic Operation

To power on the camera, slide the power switch to the "ON" position. To take a photo, press the shutter button halfway to focus, then press fully to capture the image.



Rear view of the Canon EOS 7D, showing the LCD monitor and control buttons.

### 2. Image Capture Settings

- **Image Sensor:** 18.0 Megapixel APS-C size CMOS sensor.
- **Image Processors:** Dual DIGIC 4 for high speed and quality.
- **ISO Speed:** Range from 100 to 6400, expandable to 12800.
- **Continuous Shooting:** Up to 8.0 frames per second (fps).
- **Recording Formats:** JPEG, RAW (14-bit), M-RAW, S-RAW. Video in MOV (H.264).
- **Picture Style:** Select from Standard, Portrait, Landscape, Neutral, Faithful, Monochrome, or User Defined settings.
- **White Balance:** Auto, Daylight, Shade, Cloudy, Tungsten Light, White Fluorescent Light, Flash, Custom, Color Temperature setting.

### 3. Autofocus System

The EOS 7D features a sophisticated 19-point all cross-type AF system for precise focusing.

- **AF Points:** 19-point all cross-type, with dual diagonal cross-type sensors at the center (f/2.8 and f/5.6).
- **Focusing Modes:** One-Shot AF (for still subjects), AI Servo AF (for moving subjects), AI Focus AF (automatic switching), and Manual Focus (MF).
- **AF Point Selection:** Manual selection (Single point, Spot AF, AF point expansion, Zone AF) or Automatic selection (19 point AF).
- **AF Assist Beam:** Emitted from an external Speedlite when necessary.

### 4. Exposure Control

Accurate exposure is achieved through various metering modes and controls.

- **Metering Modes:** Evaluative (63 zones, linked to active AF point), Partial (approx. 9.4% of viewfinder), Spot (approx. 2.3% of viewfinder), and Center-weighted average.
- **Exposure Control Systems:** Program AE, Shutter-priority AE, Aperture-priority AE, Creative Auto, Full auto, Manual exposure, and E-TTL II autoflash.
- **Exposure Compensation:** Adjustable up to  $\pm 5$  stops in 1/3- or 1/2-stop increments.
- **AE Lock:** Available automatically in One-Shot AF with evaluative metering, or manually via the AE lock button.

### 5. Shutter and Flash

- **Shutter Speeds:** From 30 seconds to 1/8000th second, plus Bulb mode. X-sync at 1/250th second.
- **Built-in Flash:** Retractable, auto pop-up flash with a Guide Number of 12/39 (meters/feet at ISO 100).
- **External Flash:** Compatible with E-TTL II Speedlites, offering flash exposure compensation and FE Lock.

### 6. Live View and Video Recording

The camera supports Live View for both still photos and video, with advanced video capabilities.

- **Live View:** Offers Quick mode, Live mode, Face detection Live mode, and Manual focusing with magnification.
- **Video Recording:** Full HD (1920 x 1080) at 30p, 24p, 25p; HD (1280 x 720) at 60p, 50p; SD (640 x 480) at 60p, 50p.
- **Audio:** Linear PCM (monaural). Manual audio level adjustment is available with Firmware Version 2.0.X.
- **Continuous Recording:** Approximately 12 minutes for Full HD/HD, 24 minutes for SD (with a 4GB card).

### 7. Playback and Customization

- **Playback:** View single images, histograms, magnified views, and perform in-camera RAW processing, JPEG

resizing, and image rating.

- **Custom Functions:** 27 customizable functions to tailor camera operation to your preferences.
- **Custom Controls:** Assign desired functions to various buttons and dials for personalized control.
- **User Settings:** Register up to three sets of camera settings (C1, C2, C3) on the Mode Dial for quick recall.

## MAINTENANCE

---

### 1. Dust Deletion Feature

The EOS 7D includes features to manage dust on the image sensor:

- **Automatic Sensor Cleaning:** The low-pass filter is automatically cleaned when the power is turned on or off.
- **Dust Delete Data:** The camera can detect dust adhering to the low-pass filter and append its coordinates to captured images. This data can be used by provided software to automatically erase dust spots.
- **Manual Cleaning:** For persistent dust, manual cleaning of the sensor is possible. Refer to the full user manual for detailed instructions or consult a Canon service center.

### 2. General Cleaning

- **Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, lightly dampen the cloth with water. Avoid using organic solvents.
- **Lens:** Use a lens blower brush to remove dust. For smudges, use a lens cleaning solution and a clean lens cloth.
- **LCD Monitor:** Gently wipe with a soft cloth. Avoid pressing hard on the screen.

### 3. Battery Care

- Always use the provided Canon Battery Charger LC-E6 to charge the LP-E6 battery pack.
- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.

## TROUBLESHOOTING

---

This section addresses common issues you might encounter with your EOS 7D.

### 1. Camera Does Not Power On

- Ensure the battery pack LP-E6 is fully charged and correctly inserted.
- Check if the battery compartment cover is securely closed.
- If using an AC Adapter Kit ACK-E6, ensure it is properly connected to a power source.

### 2. Unable to Take Photos

- Check if a CF card is inserted and has sufficient free space.
- Ensure the lens is properly attached and the focus mode switch on the lens is set to AF (Autofocus) or MF (Manual Focus) as desired.
- If the shutter button is pressed halfway and the camera does not focus, check the AF mode and lighting conditions.
- If the built-in flash is used, ensure it has recycled (flash-ready icon is lit).

### 3. Images Are Blurry

- Verify that the lens is clean and free of smudges.
- Ensure the camera is properly focused on the subject. In AF mode, confirm the AF point is on the desired area.
- Check the shutter speed. If it is too slow for the shooting conditions, use a faster shutter speed or a tripod to prevent camera shake.
- Consider using a higher ISO setting in low light to allow for faster shutter speeds.

### 4. Exposure Problems (Too Dark/Too Bright)

- Check the metering mode. Evaluative metering is generally suitable for most situations.
- Review the exposure compensation setting. Reset it to  $\pm 0$  if unintended compensation was applied.
- In manual mode, adjust aperture, shutter speed, and ISO to achieve the desired exposure.
- If using flash, check flash exposure compensation settings.

### 5. Firmware Update

Canon periodically releases firmware updates to enhance camera performance and add features. Refer to the official Canon website for the latest firmware and detailed update instructions. Firmware Version 2.0.X, for example, introduced features like manual audio level adjustment and improved burst rates.

## SPECIFICATIONS

Feature	Detail
Image Sensor	18.0 Megapixel APS-C CMOS
Image Processor	Dual DIGIC 4
ISO Sensitivity	100-6400 (expandable to 12800)
Shutter Speed	30 seconds to 1/8000th second, Bulb
Continuous Shooting	Max. 8.0 shots/sec.
Autofocus System	19-point all cross-type AF
Metering System	63-zone dual-layer iFCL metering
Video Recording	Full HD 1080p (30p/24p/25p)
LCD Monitor	3.0-inch TFT color, approx. 920,000 dots
Viewfinder	Eye-level pentaprism, approx. 100% coverage, 1.0x magnification
Storage Media	CompactFlash (CF) card
Connectivity	USB 2.0 Hi-Speed, mini-HDMI OUT, Video OUT (NTSC/PAL)
Power Source	Battery Pack LP-E6
Dimensions (W x H x D)	Approx. 5.8 x 4.4 x 2.9 in. (148.2 x 110.7 x 73.5mm)
Weight (Body Only)	Approx. 28.9 oz. (820g)

## WARRANTY AND SERVICE PLANS

---

Standard warranty information is typically provided with the product at the time of purchase. Please refer to the documentation included in your product packaging for specific warranty terms and conditions.

### Optional CarePAK PLUS Protection Plans

Canon offers optional CarePAK PLUS protection plans for extended coverage beyond the standard warranty. These plans provide protection from accidental damage (drops, spills, power surges) and normal wear and tear. Benefits may include Image Recovery, priority repair service, free return shipping, and genuine Canon factory service.

- **CarePAK PLUS (2YR):** 2-year protection plan.
- **CarePAK PLUS (3YR):** 3-year protection plan.

For details on purchasing and registering for CarePAK PLUS, please visit the official Canon website or contact Canon customer support.

## SUPPORT AND RESOURCES

---

For additional support, resources, and accessories, please refer to the following:

- **Official Canon Website:** Visit the Canon website for product information, driver downloads, firmware updates, and FAQs.
- **Canon Developer Community:** If you are a developer interested in controlling select Canon cameras within your application, the Canon EDSDK is available at [developercommunity.usa.canon.com](https://developercommunity.usa.canon.com).
- **Accessories:** A wide range of accessories, including batteries, chargers, cables, cases, and remote controllers, are available through authorized Canon retailers and the Canon Store.