

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Zassenhaus](#) /

› Zassenhaus Magnetic Retro Kitchen Timer User Manual

Zassenhaus M072365

Zassenhaus Magnetic Retro Kitchen Timer User Manual

Model: M072365

INTRODUCTION

This manual provides instructions for the Zassenhaus Magnetic Retro Kitchen Timer, Model M072365. This mechanical timer is designed for kitchen use, offering a reliable and classic method for timing various cooking and baking tasks. Its magnetic back allows for convenient placement on metallic surfaces.



Image 1: Angled view of the Zassenhaus Magnetic Retro Kitchen Timer in Mint Green.

SETUP

The Zassenhaus Magnetic Retro Kitchen Timer requires no assembly or batteries. Upon unboxing, inspect the timer for any visible damage. Ensure the dial moves freely. The timer is ready for immediate use.

- Remove all packaging materials.
- Wipe the timer with a damp cloth before first use.
- Identify a suitable metallic surface (e.g., refrigerator, oven door) for magnetic attachment, if desired.

OPERATING INSTRUCTIONS

To ensure proper function and a clear alarm, follow these steps for setting the timer:

1. **Wind Fully:** Turn the dial clockwise all the way to the 55-minute mark. This action winds the internal spring

mechanism, activating the ringer.

2. **Set Desired Time:** After winding, rotate the dial counter-clockwise to your desired time setting (e.g., 10 minutes, 30 minutes).
3. **Start Countdown:** The timer will begin to tick, counting down the set duration.
4. **Alarm:** Once the dial reaches the zero mark, the timer will sound an audible alarm.



Image 2: Front view of the timer, showing the dial and minute markings.

Important Note on Alarm Volume: For the loudest and most consistent alarm, it is crucial to always wind the timer fully to 55 minutes before setting it to your desired time. If the timer is only partially wound (e.g., directly set to 5 minutes without first winding to 55), the alarm may be quieter or ring for a shorter duration.

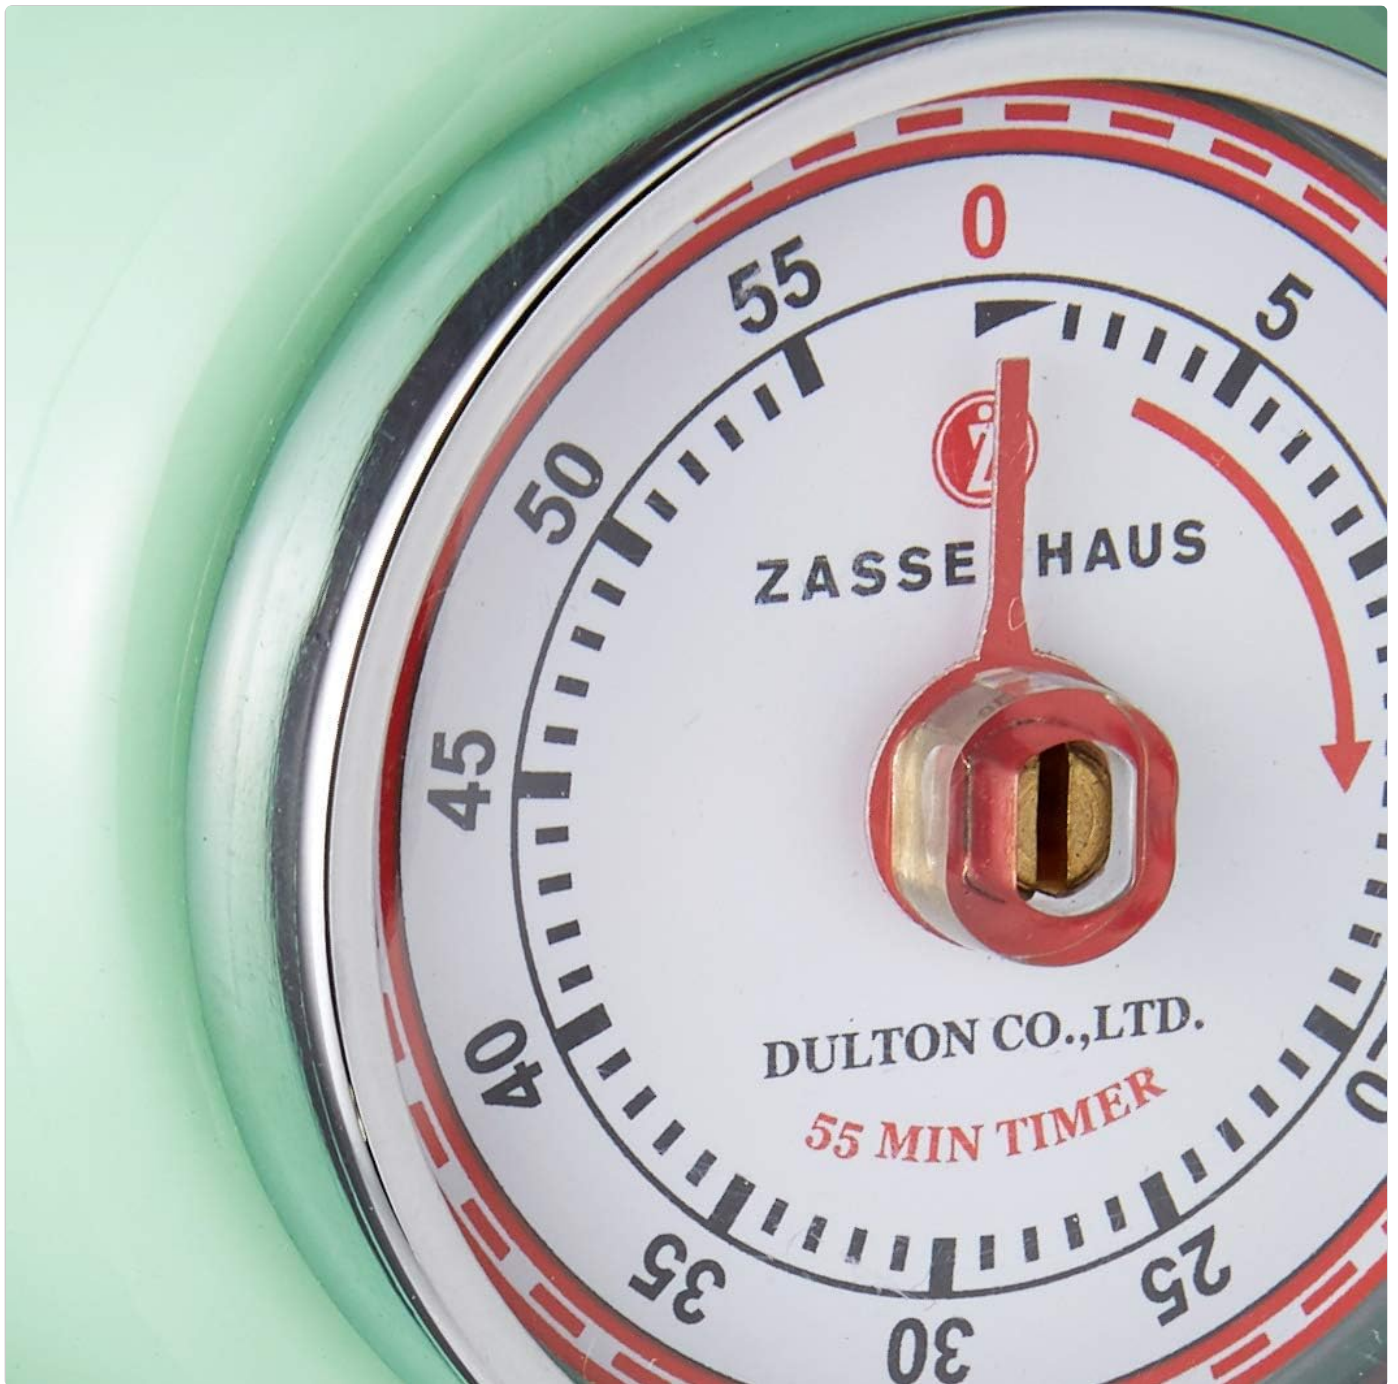


Image 3: Close-up view of the timer's dial, highlighting the numbers and minute indicators.

The integrated magnet on the back of the timer allows it to be securely attached to most household metal surfaces, such as refrigerators or oven doors, for convenient access and visibility.



Image 4: The Zassenhaus timer shown attached magnetically to a refrigerator door.

MAINTENANCE

Proper care ensures the longevity and performance of your Zassenhaus timer.

- **Cleaning:** Wipe the exterior of the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the timer in water.
- **Dishwasher Safety:** This timer is not suitable for dishwasher cleaning.
- **Storage:** Store the timer in a dry environment when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Timer does not ring or rings quietly.	Timer was not fully wound to 55 minutes before setting.	Always wind the dial clockwise to the 55-minute mark first, then rotate counter-clockwise to your desired time. This ensures the alarm mechanism is fully engaged.
Timer stops ticking before reaching zero.	Insufficient winding or internal mechanism obstruction.	Ensure the timer is fully wound to 55 minutes. If the issue persists, gently tap the timer to dislodge any minor obstruction. Avoid placing the timer near excessive heat or steam, which can affect internal components.
Dial is stiff or difficult to turn.	Accumulated debris or internal friction.	Ensure the timer is clean. Avoid forcing the dial. If stiffness persists, contact customer support.

SPECIFICATIONS

Model: M072365

Brand: Zassenhaus

Color: Mint Green

Material: Steel

Product Dimensions: 2.75"D x 1.25"W x 2.75"H (7 cm D x 3.2 cm W x 7 cm H)

Item Weight: 5.6 ounces (158.7 grams)

Maximum Time Setting: 55 minutes

UPC: 771948900683

WARRANTY AND SUPPORT

Zassenhaus products are known for their quality and craftsmanship. For information regarding warranty coverage or technical support, please refer to the official Zassenhaus website or contact their customer service department. Keep your purchase receipt as proof of purchase.

You can visit the Zassenhaus store online for more information: [Zassenhaus Store](#)

