

[Manuals.plus](#) /

› [KODAK](#) /

› Kodak ESP 5250 All-in-One Printer User Manual

KODAK 8063877

Kodak ESP 5250 All-in-One Printer User Manual

Model: ESP 5250 | Model Number: 8063877

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Kodak ESP 5250 All-in-One Printer. This device is designed for printing, copying, and scanning documents and photos, featuring integrated Wi-Fi connectivity and a user-friendly interface.



Image Description: The Kodak ESP 5250 All-in-One Printer is a black device with a distinctive yellow accent line. A vibrant color photo of a family is shown being printed from the front paper output tray. On the top right of the printer, a small LCD screen displays a similar family photo, accompanied by control buttons for navigation and functions. The right side of the printer also features indicators for Wi-Fi connectivity and memory card slots (MS, SD/HC, MMC).

SETUP

1. Unpacking and Initial Placement

- Carefully remove the printer and all components from the packaging.
- Place the printer on a stable, level surface near a power outlet. Ensure adequate space for paper trays and ventilation.
- Verify all items listed in the "What's in the Box" section are present: KODAK ESP 5250 All-in-One Printer, KODAK Black Ink Cartridge, KODAK Color Ink Cartridge, Paper Sample Pack, Power supply, Adapter cord, Startup Guide, User Guide, KODAK All-in-One Printer Software. (Note: USB 2.0 cable sold separately).

2. Power Connection

- Connect the power adapter cord to the printer and then plug the power supply into a wall outlet.
- Press the power button to turn on the printer.

3. Ink Cartridge Installation

- Open the printer access door to expose the cartridge carriage.
- Unpack the KODAK Black Ink Cartridge and KODAK Color Ink Cartridge.
- Insert the cartridges into their respective slots until they click into place.
- Close the access door. The printer will perform an initial calibration.

4. Software Installation

- Insert the KODAK All-in-One Printer Software CD into your computer's CD/DVD drive.
- Follow the on-screen instructions to install the printer drivers and software.
- If prompted, connect the printer to your computer using a USB 2.0 cable (not included).

5. Wireless (Wi-Fi) Setup

- On the printer's 2.4-inch LCD, navigate to the wireless setup menu.
- Select your Wi-Fi network from the list of available networks.
- Enter your network password (SSID) using the printer's control panel. Ensure correct case sensitivity.
- Once connected, the Wi-Fi indicator on the printer will illuminate.

OPERATING INSTRUCTIONS

1. Loading Paper

- Open the paper input tray.
- Load paper (plain, photo, etc.) into the tray, ensuring it is aligned correctly. The intelligent paper sensor automatically adjusts settings based on paper type.
- Adjust the paper guides to fit the paper size.

2. Printing Documents and Photos

- **From a Computer:** Open the document or photo on your computer. Select "Print" from the application's menu. Choose the Kodak ESP 5250 printer and adjust print settings (e.g., paper type, quality, manual two-sided printing, multiple pages per sheet) as needed. Click "Print".
- **From Memory Card:** Insert a compatible memory card (MS, SD/HC, MMC) into the printer's card slot. Use the 2.4-inch LCD and control buttons to browse and select photos for printing.
- **From iPhone or iPod touch:** Download the KODAK Pic Flick application from the App Store. Ensure your device and printer are on the same Wi-Fi network. Use the application to wirelessly select and print pictures.

3. Copying

- Place the document or photo face down on the scanner glass.
- On the printer's control panel, press the "Copy" button or navigate to the copy function on the LCD.
- Select desired settings such as number of copies, color or black and white, and quality.
- Press "Start" to begin copying. One-touch color copy is available without a PC.

4. Scanning

- Place the document or photo face down on the scanner glass.
- From your computer, open the Kodak All-in-One Printer Software and select the scan function.
- Choose scan settings (e.g., resolution, destination folder, document type). The software can scan multiple pictures at once and create separate image files automatically.
- Initiate the scan. The software also offers features to reduce blemishes, enhance facial features, and perform optical character recognition (OCR) for editing documents (Note: OCR features are not available on MACINTOSH OS).

MAINTENANCE

1. Replacing Ink Cartridges

- When an ink cartridge is low or empty, a notification will appear on the printer's LCD or computer software.
- Open the printer access door. The carriage will move to the replacement position.
- Press down on the empty cartridge to release it and lift it out.
- Unpack a new KODAK ink cartridge and insert it into the correct slot until it clicks.
- Close the access door. The printer will perform a short calibration.

2. Cleaning the Printer

- Ensure the printer is turned off and unplugged before cleaning.
- Wipe the exterior of the printer with a soft, damp, lint-free cloth.
- For the scanner glass, use a glass cleaner applied to a cloth (not directly to the glass) to avoid streaks.
- Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

If you encounter issues with your Kodak ESP 5250 printer, consider the following common solutions:

- **Printer Not Responding:** Ensure the printer is powered on and properly connected to the computer (USB) or Wi-Fi network. Check for any error messages on the LCD.
- **Print Quality Issues:** Check ink levels. Perform a print head cleaning or alignment from the printer's maintenance menu or software. Ensure you are using appropriate paper settings for your print job.
- **Paper Jams:** Turn off the printer and carefully remove any jammed paper from the input tray, output tray, or internal areas. Refer to the on-screen instructions or the printer's internal diagrams for jam clearance.
- **Wireless Connection Problems:** Verify your Wi-Fi network is active and the printer is within range. Re-enter your Wi-Fi password if necessary, ensuring correct case sensitivity. Restart both your router and printer.
- **Software Issues:** Ensure your printer drivers and software are up to date. Reinstall the software if problems persist.

For more detailed troubleshooting or persistent issues, refer to the full User Guide provided with your printer or contact Kodak support.

SPECIFICATIONS

Feature	Detail
Functions	Print, Copy, Scan
Printing Technology	Inkjet
Connectivity	Wi-Fi, USB 2.0
Display	2.4 inch LCD
Print Speed (Black)	Up to 30 ppm
Print Speed (Color)	Up to 29 ppm
Photo Print Speed (4x6 borderless)	29 seconds
Max Print Resolution (Color)	4800x1200 optimized dpi

Feature	Detail
Max Print Resolution (Black & White)	9600 dpi
Scanner Type	CIS optical scanner
Scan Resolution	1200 dpi @ 24 bit
Max Scan Size	8.5 in. x 11.7 in.
Copy Speed (Draft, Black/Color)	25/25 cpm
Max Copy Size	8.5 in. x 11 in.
Paper Capacity (Input)	100 sheets
Paper Capacity (Output)	100 sheets
Duplex Printing	Manual
Compatible Devices	Laptops, PC, iPhone, iPod touch
Dimensions (W x D x H)	16.6 x 11.8 x 6.9 inches
Weight	14.0 lbs
Energy Certification	ENERGY STAR® certified

WARRANTY INFORMATION

The Kodak ESP 5250 All-in-One Printer comes with the following limited warranty:

- **Product:** One year from purchase (with proof of purchase) or 13 months from date of manufacture.
- **Printhead:** One year from purchase (with proof of purchase) or 13 months from date of manufacture.
- **Ink Cartridges:** One year from purchase (with proof of purchase). This warranty does not cover empty or refilled cartridges, or cartridges that have been tampered with or misused.

Kodak's sole obligation in the event of defects in materials, workmanship, or packaging is to provide a comparable replacement product. In no event shall Kodak be liable for any indirect, incidental, special, or consequential damages.

SUPPORT

For further assistance, technical support, or warranty claims, please contact Kodak support. You may also refer to the official Kodak website for updated drivers, FAQs, and additional resources.

For information on the KODAK Pic Flick application, visit www.kodak.com/go/picflick.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question