

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KODAK](#) /
- › [KODAK ESP 3250 All-in-One Printer User Manual](#)

KODAK 3250

KODAK ESP 3250 All-in-One Printer User Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your KODAK ESP 3250 All-in-One Printer. Please read this manual thoroughly before using the printer to ensure proper functionality and to maximize its lifespan.



WHAT'S IN THE BOX

Verify that all items are present in the packaging before proceeding with the setup:

- KODAK ESP 3250 All-in-One Printer
- KODAK Black Ink Cartridge
- KODAK Color Ink Cartridge
- Paper Sample Pack
- Power supply
- Adapter cord
- Startup Guide
- User Guide
- KODAK All-in-One Printer Software (USB 2.0 cable sold separately)

SETUP

1. **Unpacking:** Carefully remove the printer and all accessories from the box. Remove all protective tapes and packing materials from the printer.
2. **Power Connection:** Connect the power supply to the printer and then plug the adapter cord into a wall outlet.
3. **Ink Cartridge Installation:** Open the printer access door and install the KODAK Black and Color Ink Cartridges into their designated slots. Ensure they are securely latched.
4. **Paper Loading:** Load paper into the input tray. The intelligent paper sensor will automatically adjust settings based on the paper type.
5. **Software Installation:** Insert the KODAK All-in-One Printer Software CD into your computer's CD-ROM drive and follow the on-screen instructions to install the necessary drivers and software. A USB 2.0 cable (sold separately) is required to connect the printer to your computer.

OPERATING INSTRUCTIONS

Printing

- **Document Printing:** Send documents from your computer to the printer. The printer supports speeds up to 30 pages per minute (ppm) for black and 29 ppm for color.
- **Photo Printing:** Print photos up to 8.5 x 11 inches. Borderless 4x6 inch photos can be printed in approximately 29 seconds.
- **Two-Sided Printing:** Utilize the manual two-sided printing feature through the printer software to save paper.
- **Multiple Pages Per Sheet:** Print multiple pages on a single sheet of paper using the software settings.

Copying

- **One-Touch Color Copy:** Place your document on the scanner glass and use the printer's control panel for one-touch color copying without requiring a computer.
- **Copy Speed:** Draft copy speed is 25 copies per minute (cpm) for both black and color.

Scanning

- **Document and Photo Scanning:** Scan documents and photos up to 8.5 x 11.7 inches.
- **Multiple Picture Scanning:** Scan several pictures at once; the software will automatically create separate image files.
- **Optical Character Recognition (OCR):** Use the included software to scan and edit documents with OCR functionality (Windows OS only).
- **Image Enhancement:** The software includes features to reduce the appearance of blemishes and enhance facial features in scanned images (Windows OS only).

Control Panel and Connectivity

- The printer features a 1.5-inch LCD for easy navigation and status display.
- Memory card and USB slots allow for direct printing without a computer.

MAINTENANCE

- **Ink Cartridge Replacement:** When an ink cartridge is low or empty, the printer will indicate this on the LCD or through the software. Follow the on-screen instructions or refer to the Startup Guide for safe and proper replacement. Ensure to use genuine KODAK ink cartridges for optimal performance.
- **Cleaning:** Regularly clean the exterior of the printer with a soft, damp cloth. Refer to the User Guide for instructions on cleaning internal components, such as the printhead or scanner glass, if print quality issues arise.

TROUBLESHOOTING

This section addresses common issues you might encounter with your KODAK ESP 3250 All-in-One Printer.

- **Paper Jams:** If paper jams occur, carefully open the printer covers and remove any jammed paper following the instructions in the User Guide. Ensure paper is loaded correctly and not overfilled.
- **Print Quality Issues (Feeder Lines):** If printed copies or photos show lines, this may indicate a dirty printhead or scanner glass. Perform a printhead cleaning cycle via the printer's utility software and clean the scanner glass as per the maintenance instructions.
- **Scanner Error:** If the scanner displays an error code or fails to scan, ensure the printer software is correctly installed and updated. Restart the printer and computer. If the issue persists, consult the KODAK support website for specific error code solutions.
- **Connectivity Problems:** If the printer is not recognized by your computer, check the USB cable connection. Ensure the cable is securely plugged into both the printer and the computer. Verify that the printer drivers are installed correctly.

SPECIFICATIONS

Feature	Specification
Product Dimensions	11.8"D x 16.6"W x 6.9"H
Item Weight	16.4 Pounds
Printing Technology	Inkjet

Feature	Specification
Maximum Print Speed (Black)	30 ppm
Maximum Print Speed (Color)	29 ppm
Maximum Color Print Resolution	1200 x 1200 dpi
Maximum Black and White Print Resolution	1200 x 1200 dpi
Photo Print Speed (4x6 borderless)	29 seconds
Scanner Type	Flatbed
Maximum Scan Size	8.5 x 11.7 inches
Max Copy Speed (Black & White)	25 cpm (draft)
Max Copy Speed (Color)	25 cpm (draft)
Display	1.5 inch LCD
Connectivity Technology	USB
Memory Storage Capacity	64 MB
Supported Media Sizes	4 x 6 inches, Letter (8.5 x 11 inches)
Max Input Sheet Capacity	30 sheets
Energy Efficiency	ENERGY STAR® certified, Low Power Stand By mode (<1 watt)

WARRANTY INFORMATION

KODAK provides the following limited warranties for the ESP 3250 All-in-One Printer:

- **Product:** One year from purchase (with proof of purchase) or 13 months from date of manufacture.
- **Printhead:** One year from purchase (with proof of purchase) or 13 months from date of manufacture.
- **Ink Cartridges:** One year from purchase (with proof of purchase). This warranty does not cover empty or refilled cartridges, or cartridges that have been tampered with or misused.

Kodak's sole obligation in the event of defects in materials, workmanship, or packaging is to provide a comparable replacement product. In no event shall Kodak be liable for any indirect, incidental, special, or consequential damages.

SUPPORT

For further assistance, technical support, or to return a cartridge outside of store policy, please contact KODAK support. Refer to the contact information provided in your Startup Guide or visit the official KODAK support website.

