

Amica EMW13190E

Amica EMW 13190 E 800W Built-in Microwave User Manual

Model: EMW13190E | Brand: Amica

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before installing and operating your microwave oven. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly earthed.
- Do not use corrosive chemicals or vapors in this appliance.
- This appliance is intended for household use only.

2. PRODUCT OVERVIEW

The Amica EMW 13190 E is an 800W built-in microwave oven designed for convenient and efficient cooking. It features a 20-liter capacity, a digital display, and a user-friendly control panel with buttons and a rotary knob.



This image shows the front of the Amica EMW 13190 E microwave, featuring a silver finish, a dark glass door, a digital clock display, and a control panel with buttons and a rotary knob on the right side.

Key Components:

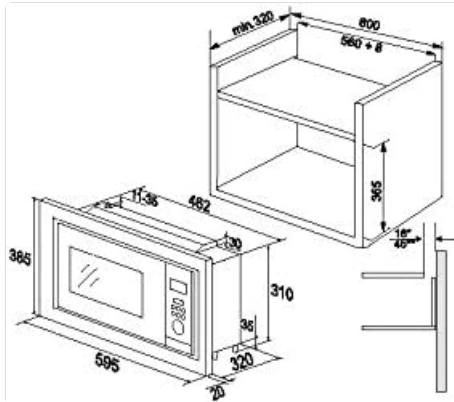
- Door:** With safety lock system.
- Oven Window:** Allows viewing of food during cooking.
- Control Panel:** Buttons and rotary knob for setting functions and time.
- Digital Display:** Shows time, power level, and cooking status.
- Turntable Ring:** Supports the glass turntable.
- Glass Turntable:** Ensures even cooking.
- Waveguide Cover:** Protects the microwave energy outlet. Do not remove.

3. SETUP AND INSTALLATION

This microwave oven is designed for built-in installation. Proper ventilation and secure mounting are crucial for safe and efficient operation.

Installation Requirements:

- Ensure the cabinet opening meets the specified dimensions.
- The appliance must be connected to a properly earthed electrical outlet.
- Allow sufficient space for air circulation around the appliance.



This diagram illustrates the required cabinet dimensions for installing the Amica EMW 13190 E microwave. It shows the microwave's external dimensions and the cutout dimensions for the built-in cavity, including width, height, and depth measurements in millimeters.

Installation Steps:

1. Carefully remove all packaging materials and accessories. Check the oven for any damage such as dents or a broken door. Do not install if damaged.
2. Install the turntable ring and glass turntable inside the oven cavity.
3. Slide the microwave oven into the prepared cabinet opening, ensuring it is level and flush with the cabinet front.
4. Secure the oven to the cabinet using the provided screws through the mounting holes.
5. Plug the power cord into a grounded electrical outlet.
6. Test the oven by setting a short cooking time to ensure proper operation.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel to effectively use your microwave oven.

Control Panel Overview:

- **Digital Display:** Shows cooking time, power level, and current time.
- **Power Level Button:** Selects microwave power levels (e.g., 100%, 80%, 50%, 30%, 10%).
- **Time/Weight Dial (Rotary Knob):** Adjusts cooking time or weight for defrosting.
- **Start Button:** Begins cooking or a selected program.
- **Stop/Cancel Button:** Stops cooking, clears settings, or pauses operation.
- **Defrost Button:** Activates defrost function (by time or weight).
- **Clock Button:** Sets the current time.

Basic Microwave Cooking:

1. Place food in a microwave-safe container on the glass turntable. Close the door securely.
2. Press the **Power Level** button repeatedly to select the desired power level (e.g., P100 for full power).
3. Turn the **Time/Weight Dial** to set the desired cooking time.
4. Press the **Start** button to begin cooking. The display will count down the time.
5. To pause cooking, open the door or press the **Stop/Cancel** button once. To resume, close the door and

press **Start**.

6. To cancel cooking completely, press the **Stop/Cancel** button twice.

Defrosting Food:

The defrost function allows you to defrost food by weight or by time.

1. Place the frozen food on the glass turntable.
2. Press the **Defrost** button.
3. Turn the **Time/Weight Dial** to select the weight of the food or the desired defrosting time.
4. Press the **Start** button. The oven will automatically set the appropriate power level for defrosting.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

Cleaning the Oven Interior:

- Always unplug the appliance before cleaning.
- Wipe the interior cavity after each use with a damp cloth to prevent food splatters from drying and sticking.
- For stubborn stains, place a bowl of water with lemon juice inside and heat for a few minutes on high power. The steam will loosen the stains, making them easier to wipe away.
- Clean the waveguide cover carefully. Do not remove it.

Cleaning the Exterior and Accessories:

- Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- The glass turntable and turntable ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- Clean the door seals and sealing surfaces regularly to ensure proper door closure.

6. TROUBLESHOOTING

If you encounter problems with your microwave oven, consult the following table for common issues and solutions.

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set; Door not closed properly.	Adjust cooking time and power level; Ensure door is fully closed.

Problem	Possible Cause	Solution
Turntable not rotating	Turntable not properly placed; Turntable ring dirty or damaged.	Ensure turntable and ring are correctly positioned; Clean or replace turntable ring.
Sparking inside oven	Metal in oven; Waveguide cover damaged.	Remove any metal objects; Contact service for waveguide cover replacement.

If the problem persists after trying these solutions, please contact qualified service personnel.

7. SPECIFICATIONS

Technical data for the Amica EMW 13190 E microwave oven.

Feature	Value
Model Number	EMW13190E
Brand	Amica
Microwave Power Output	800 W
Capacity	20 Liters
Installation Type	Built-in
Product Dimensions (W x D x H)	59.4 x 31.3 x 31.8 cm
Product Weight	13.4 kg
Material	Stainless Steel
Control Type	Buttons, Rotary
Power Input (Max)	1000 W

8. WARRANTY AND CUSTOMER SUPPORT

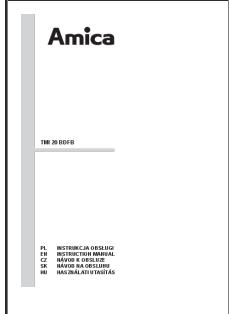
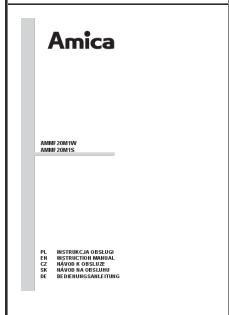
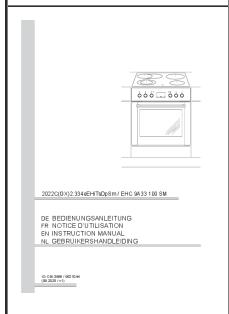
For warranty information or technical support, please refer to the warranty card included with your product or contact Amica customer service directly. Keep your proof of purchase for any warranty claims.

Manufacturer: Amica

Model: EMW13190E

Website: www.amica-group.co.uk (Example link, actual link may vary by region)

Related Documents - EMW13190E

	<p>Microwave Oven Safety Information and Warnings</p> <p>Essential safety information and warnings for operating a microwave oven, including guidelines on usage, potential hazards, and maintenance, as per EU regulations.</p>
	<p>Amica</p> <p>Amica TMI 20 BDFB - Instrukcja Obsługi</p> <p>Instrukcja obsługi dla kuchenki mikrofalowej Amica TMI 20 BDFB. Zawiera informacje o bezpieczeństwie, danych technicznych, instalacji, obsłudze, czyszczeniu i rozwiązywaniu problemów.</p>
	<p>Amica EMW 13184 E Mikrowelle: Sicherheitshinweise und Bedienungsanleitung</p> <p>Umfassende Sicherheitshinweise, Bedienungsanleitungen und Wartungsempfehlungen für die Amica EMW 13184 E Mikrowelle, um einen sicheren Betrieb und eine lange Lebensdauer zu gewährleisten.</p>
	<p>Amica</p> <p>Amica AMMF20M1W / AMMF20M1S - Instrukcja Obsługi</p> <p>Szczegółowa instrukcja obsługi dla kuchenek mikrofalowych Amica modeli AMMF20M1W i AMMF20M1S. Zawiera informacje o bezpieczeństwie, instalacji, obsłudze, danych technicznych i konserwacji.</p>
	<p>Amica EHC 9A33 100 SM Built-in Cooker and Hob User Manual</p> <p>Comprehensive user manual for the Amica EHC 9A33 100 SM built-in cooker and hob, covering installation, operation, safety, cleaning, and technical specifications.</p>
	<p>INSTRUKCJA OBSŁUGI</p> <p>Amica TED37279ArBA+ V PIZZA Piekarnik do zabudowy - Instrukcja obsługi</p> <p>Kompleksowa instrukcja obsługi piekarnika Amica TED37279ArBA+ V PIZZA. Znajdź informacje o instalacji, użytkowaniu, czyszczeniu i rozwiązywaniu problemów.</p>