

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm FinePix J28 10.2MP Digital Camera User Manual

Fujifilm FinePix J28

Fujifilm FinePix J28 Digital Camera User Manual

Model: FinePix J28 | Brand: Fujifilm

INTRODUCTION

This manual provides essential information for the safe and effective use of your Fujifilm FinePix J28 Digital Camera. Please read it thoroughly before using the camera and keep it in a safe place for future reference.

The Fujifilm FinePix J28 is a compact 10.2-megapixel digital camera featuring a 3x optical zoom lens, designed for ease of use and high-quality imaging. It incorporates advanced features such as Scene Recognition Auto (SR Auto) and Face Detection to help you capture stunning photos in various conditions.

CAMERA COMPONENTS

Front View



Figure 1: Front view of the FinePix J28, showing the lens, flash, and Fujifilm branding.

Rear View



Figure 2: Rear view of the FinePix J28, highlighting the 2.7-inch LCD display and control buttons.

Top View



Figure 3: Top view of the FinePix J28, showing the power button and shutter release.

SETUP

1. Charging the Battery

The camera uses an NP-45 rechargeable Li-ion battery. Before first use, fully charge the battery using the supplied charger.

- Insert the battery into the charger with the correct orientation.
- Plug the charger into a power outlet. The charging indicator light will illuminate.
- Charging is complete when the indicator light changes or turns off (refer to charger specific instructions for exact behavior).

2. Inserting the Battery and Memory Card

The FinePix J28 supports SD and SDHC memory cards. A memory card is not included with the camera.

1. Open the battery/card compartment cover on the bottom of the camera.
2. Insert the charged NP-45 battery into the battery slot, ensuring the correct polarity.
3. Insert the SD/SDHC memory card into the card slot until it clicks into place. Ensure the card is facing the correct way.
4. Close the compartment cover securely.

OPERATING THE CAMERA

1. Powering On/Off

Press the **ON/OFF** button located on the top of the camera to power it on or off.

2. Taking Pictures

To take a picture:

1. Frame your shot using the LCD monitor.
2. Press the shutter button halfway down to focus. The camera will beep and focus indicators will appear.
3. Press the shutter button all the way down to take the picture.

3. Zooming

Use the zoom lever (W/T) located on the top-right of the camera's rear to adjust the optical zoom. Push towards 'T' for telephoto (zoom in) and 'W' for wide-angle (zoom out).

4. Shooting Modes and Features

The FinePix J28 offers various modes to optimize your photos:

- **SR Auto (Scene Recognition Auto):** The camera automatically detects the scene type (e.g., Portrait, Landscape, Night, Macro, Night Portrait, Backlit Portrait) and adjusts settings for optimal results.
- **Face Detection:** Automatically identifies faces in the frame and optimizes focus and exposure for up to six faces.
- **Red-Eye Removal:** Automatically detects and corrects flash reflection for natural-looking portraits.
- **High Sensitivity (ISO 3200):** Allows for natural-looking photos in low light conditions without flash, and helps capture fast-moving subjects with less blur.
- **Picture Stabilization / Anti-Blur Mode:** Corrects for camera shake and subject blur, ensuring crisp images even in challenging situations.
- **Panorama Shooting Mode:** Combine up to three consecutive shots into a single panoramic image.

Official Product Video: Introducing the Fuji FinePix J28

Your browser does not support the video tag.

This video provides an overview of the Fujifilm FinePix J28, demonstrating its key features and ease of use.

5. Playback

Press the **PLAY** button (usually indicated by a triangle icon) to enter playback mode. Use the directional buttons to navigate through your photos and videos. The camera also features a micro thumbnail view for quick browsing of up to 100 pictures.

MAINTENANCE

1. Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.

2. Battery Care

- Remove the battery when the camera will not be used for an extended period.
- Store batteries in a cool, dry place.

3. Storage

Store the camera in a dry, well-ventilated area away from direct sunlight, high temperatures, and humidity.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Camera does not power on.	Ensure the battery is charged and correctly inserted.
Pictures are blurry.	Check if Picture Stabilization is enabled. Ensure sufficient lighting. Hold the camera steady.
Red-eye appears in photos.	Ensure Red-Eye Removal is active in camera settings.
Memory card error.	Reinsert the memory card. Try a different, compatible SD/SDHC card. Format the card (this will erase all data).

SPECIFICATIONS

- **Model Name:** FinePix J28
- **Brand:** Fujifilm
- **Resolution:** 10.2 Megapixels
- **Optical Zoom:** 3x
- **LCD Screen:** 2.7-inch
- **Image Stabilization:** Electronic
- **Supported File Format:** JPEG
- **Photo Sensor Technology:** CCD
- **ISO Sensitivity:** Up to 3200
- **Power Source:** NP-45 Rechargeable Battery
- **Dimensions:** 3.6 x 0.8 x 2.2 inches
- **Weight:** 1 pound

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Fujifilm website. For technical support, product registration, or to download the latest software and drivers, please visit the Fujifilm support page or contact their customer service.

You can find more information and support resources at the [Fujifilm Store on Amazon](#).