

Brilliant 96104/11

Brilliant AG 96104/11 Tyler IP44 Outdoor Wall Light User Manual

Model: 96104/11 | Brand: Brilliant

1. INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your Brilliant AG 96104/11 Tyler IP44 Outdoor Wall Light. Please read this manual thoroughly before installation and retain it for future reference. This outdoor product is designed to illuminate your exterior spaces.

2. SAFETY INFORMATION

- **Electrical Safety:** Installation should only be performed by a qualified electrician in accordance with local wiring regulations. Always disconnect the main power supply before attempting any installation, maintenance, or bulb replacement.
- **IP44 Rating:** This fixture is rated IP44, meaning it is protected against solid objects larger than 1mm and splashing water from any direction. It is suitable for outdoor use but should not be submerged in water.
- **Bulb Requirements:** Use only E27 incandescent bulbs or compatible LED/CFL bulbs with a maximum wattage of 60W. Exceeding the maximum wattage can cause overheating and damage to the fixture.
- **Handling:** Handle the glass components with care to prevent breakage.
- **Ventilation:** Ensure adequate ventilation around the fixture during operation.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before installation.

- 1x Brilliant AG 96104/11 Tyler Outdoor Wall Light Fixture
- Mounting Hardware (screws, wall plugs)
- User Manual (this document)

Note: The light bulb (E27) is not included and must be purchased separately.

4. SETUP AND INSTALLATION

Follow these steps carefully for proper installation. If you are unsure, consult a qualified electrician.

1. Prepare for Installation:

- Turn off the main power supply at the circuit breaker before starting any electrical work.
- Gather necessary tools: screwdriver, drill, wire strippers, measuring tape, pencil.

2. Mounting the Fixture:

- Mark the desired mounting location on the wall.
- Use the fixture's base as a template to mark drilling points for the mounting screws.
- Drill holes and insert wall plugs (if required for your wall type).
- Secure the mounting bracket or base of the fixture to the wall using the provided screws. Ensure precise drilling for the support to easily fasten the glass locking screw.

3. Wiring Connection:

- Connect the household electrical wires to the fixture's terminals. Typically, this involves connecting Live (L), Neutral (N), and Earth (E) wires. Ensure all connections are secure and insulated.
- Refer to the wiring diagram provided with the fixture (if any) or consult a professional.

4. Install the Bulb:

- Carefully insert an E27 bulb (max 60W) into the lamp holder. Do not overtighten.

5. Secure the Glass/Cover:

- Attach the glass cover or diffuser to the fixture, ensuring it is properly sealed to maintain the IP44 rating.

6. Final Check:

- Once installation is complete, restore power at the circuit breaker and test the light.



Figure 1: The Brilliant AG 96104/11 Tyler Outdoor Wall Light in its off state, showcasing its titanium finish and modern design.



Figure 2: The Brilliant AG 96104/11 Tyler Outdoor Wall Light illuminated, demonstrating its light output and aesthetic when active.

5. OPERATING INSTRUCTIONS

The Brilliant AG 96104/11 Tyler Outdoor Wall Light operates via a standard external wall switch connected to its electrical supply. Simply toggle the switch to turn the light on or off.

- **Bulb Type:** E27
- **Maximum Wattage:** 60 Watts
- **Voltage:** 230 Volts

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your outdoor wall light.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, damp cloth. Do not use

abrasive cleaners or solvents, as these can damage the finish or glass.

- **Bulb Replacement:** Ensure the power is off and the bulb has cooled down before attempting to replace it. Unscrew the old E27 bulb and screw in a new one (max 60W).
- **Inspection:** Periodically check the fixture for any signs of wear, damage, or loose connections. If any issues are found, disconnect power and consult a qualified electrician.

7. TROUBLESHOOTING

If you encounter issues with your outdoor wall light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power supply Faulty bulb Loose wiring connection	Check circuit breaker and wall switch. Replace bulb with a new one. Ensure all wiring connections are secure (consult electrician).
Light flickers	Loose bulb Incompatible bulb type Loose wiring	Tighten the bulb. Ensure bulb is E27 and compatible with the fixture. Check wiring connections (consult electrician).
Water inside fixture	Improper sealing Damaged gasket	Ensure glass cover is securely fastened and gasket is intact. If damage is present, replace the fixture or consult a professional.

8. SPECIFICATIONS

Feature	Detail
Brand	Brilliant
Model Number	96104/11
Dimensions (L x W x H)	19 x 17 x 7 cm
Weight	780 grams
IP Rating	IP44
Material	Glass, Metal
Color	Titanium
Number of Bulbs	1
Max Wattage	60 Watts
Voltage	230 Volts

Feature	Detail
Specific Uses	Outdoor use
Power Source	Electric cable
Bulb Type	Incandescent (E27 Cap Type)
Energy Efficiency Class	A++>E (depending on bulb used)
Country of Origin	France

9. WARRANTY AND SUPPORT

For warranty information, please refer to the terms and conditions provided by your retailer at the time of purchase. Brilliant products are designed for quality and durability.

Spare Parts: Information regarding the availability of spare parts for this model is currently unavailable. If you require further assistance or have questions not covered in this manual, please contact the retailer where you purchased the product or visit the official Brilliant website for support.