

Walimex Pro 16345

Walimex Pro Camouflage Pop-Up Tent - Model 16345

User Manual

1. INTRODUCTION

The Walimex Pro Camouflage Pop-Up Tent, Model 16345, is designed as a portable and discreet hide for nature photographers, filmmakers, and wildlife observers. Its camouflage pattern allows for flexible use in various natural environments such as forests and meadows. This tent features a spacious interior for a single user and equipment, is lightweight, and water-repellent. The innovative pop-up design ensures quick assembly and disassembly, making it an ideal companion for outdoor activities requiring stealth and protection from the elements.



Image 1.1: The Walimex Pro Camouflage Pop-Up Tent fully set up, showcasing its camouflage pattern and overall structure.

2. SAFETY INSTRUCTIONS

- Always ensure the tent is securely anchored to the ground using the provided pegs, especially in windy conditions, to prevent it from being blown away.
- Do not use open flames or heating devices inside the tent, as the material is not fireproof and poses a fire hazard.
- Avoid setting up the tent near steep cliffs, unstable ground, or areas prone to rockfalls or floods.
- Keep the tent away from sharp objects that could puncture or tear the fabric.
- Ensure proper ventilation when occupying the tent for extended periods.
- Do not leave children unattended inside or near the tent.

3. PACKAGE CONTENTS

Please verify that all components are present in your package:

- 1x Walimex Pro Camouflage Pop-Up Tent
- 4x Ground Pegs
- 1x Practical Carrying Bag

4. SETUP

The Walimex Pro Camouflage Pop-Up Tent features a quick and easy pop-up design for rapid deployment.

1. **Unpacking:** Remove the tent from its carrying bag. Hold it away from your face and body as it will spring open rapidly.
2. **Deployment:** The tent will automatically unfold into its full shape. Gently adjust the frame to ensure it is fully extended and stable.
3. **Anchoring:** Locate the loops at the base of the tent. Insert the provided ground pegs through these loops and firmly push them into the ground. This will secure the tent against wind and movement.



Image 4.1: Detail of a ground peg inserted through a loop at the base of the tent, securing it to the ground.

5. OPERATING

The tent is designed for optimal functionality during wildlife observation and photography.

- **Entry/Exit:** The tent features a zippered entrance for easy access. Ensure the zipper is fully closed when inside to maintain concealment.
- **Camera Ports:** Multiple openings are provided for camera lenses or spotting scopes. These ports allow you to extend your equipment outside the tent while remaining hidden.



Image 5.1: A camera lens extended through one of the tent's designated ports, allowing for discreet photography.

- **Windows:** The tent includes two side windows equipped with concealable mosquito nets. These can be opened for ventilation or observation.



Image 5.2: A close-up view of a tent window, showing the integrated mosquito net for ventilation and insect protection.

6. MAINTENANCE

- **Cleaning:** Clean the tent with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners, as these can damage the fabric and water-repellent coating. Allow the tent to air dry completely before folding and storing.
- **Storage:** To fold the tent, carefully follow the reverse of the setup process. Twist the frame into a compact circular shape and place it back into the carrying bag. Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.



Image 6.1: The Walimex Pro Camouflage Pop-Up Tent neatly folded and stored in its practical carrying bag.

7. TROUBLESHOOTING

- **Difficulty Folding:** If you experience difficulty folding the tent, ensure you are applying even pressure and twisting the frame correctly. It may require a few attempts to master the technique. Refer to online video tutorials for visual guidance if needed.
- **Instability:** If the tent feels unstable, re-check that all ground pegs are firmly inserted and that the tent frame is fully extended. In very windy conditions, consider adding extra weights or guy lines (not included) for additional stability.
- **Water Leakage:** While the tent is water-repellent, heavy or prolonged rain may lead to some moisture penetration. Ensure all zippers are fully closed. For enhanced protection in extreme weather, consider using an external waterproof cover (not included).

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Walimex Pro
Model Number	16345
Color	Brown (Camouflage)
Product Type	Dome Tent / Hide
Special Features	Waterproof, Rain-resistant, Pop-up mechanism
Unfolded Dimensions (approx.)	110 x 110 x 140 cm (Length x Width x Height)
Folded Dimensions (approx.)	52.9 x 52.9 x 5 cm
Package Dimensions	54 x 51.2 x 8 cm
Package Weight	3.66 lbs (approx. 1.66 kg)
Water Resistance Level	Water-repellent
Recommended Uses	Hunting, Wildlife Photography, Wildlife Observation
Occupancy	1-2 persons
Included Components	1 camouflage tent, 4 pegs, 1 carrying bag
Country of Origin	China

9. WARRANTY AND SUPPORT

For information regarding warranty, returns, or technical support, please refer to the retailer or manufacturer's official website. Keep your purchase receipt as proof of purchase.