

[Manuals.plus](#) /

› [Alpine Corporation](#) /

› Alpine Corporation 72-Inch Silver Mirror Waterfall Fountain (MLT102) User Manual

Alpine Corporation MLT102

Alpine Corporation 72-Inch Silver Mirror Waterfall Fountain (MLT102) User Manual

Model: MLT102

INTRODUCTION

Thank you for choosing the Alpine Corporation 72-Inch Silver Mirror Waterfall Fountain. This floor-standing water feature is designed to enhance both indoor and outdoor spaces with its cascading water, warm white LED illumination, and contemporary design. This manual provides essential information for the safe assembly, operation, and maintenance of your fountain.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before setting up and operating your fountain. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always disconnect the fountain from the electrical outlet before performing any maintenance or cleaning.
- Ensure the power cord is not damaged or pinched. Do not operate the fountain with a damaged cord or plug.
- Place the fountain on a level, stable surface to prevent tipping and water spillage.
- Do not allow children or pets to play with the fountain unsupervised.
- Use only clean water in the fountain. Distilled water is recommended to prevent mineral buildup.
- Keep the electrical connections dry. Do not immerse the plug or adapter in water.
- For outdoor use, ensure the electrical outlet is a GFCI (Ground Fault Circuit Interrupter) protected outlet and that all connections are weatherproof.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm (Proposition 65 warning).

PACKAGE CONTENTS

Verify that all components are present and undamaged before assembly.

- Fountain Unit (Frame with Silver Mirror Panel)
- Submersible Pump

- Power Adapter
- Decorative River Stones
- Cleaning Brush
- Cleaning Cloth

SETUP INSTRUCTIONS

1. Unpacking

Carefully remove all components from the packaging. Be aware that Styrofoam packaging may be present and can create small debris; clean the area thoroughly after unpacking.

2. Assembly

1. Place the fountain base on your desired level surface.
2. Carefully attach the mirror panel to the base, ensuring it is securely seated.
3. Connect the submersible pump to the water hose located inside the fountain base. Ensure a tight seal.
4. Place the pump inside the water reservoir at the bottom of the fountain. Ensure the pump is positioned on the foam padding provided to minimize vibration and noise.
5. Arrange the decorative river stones around the pump in the fountain base. Ensure the stones do not obstruct the pump's intake or the water flow.



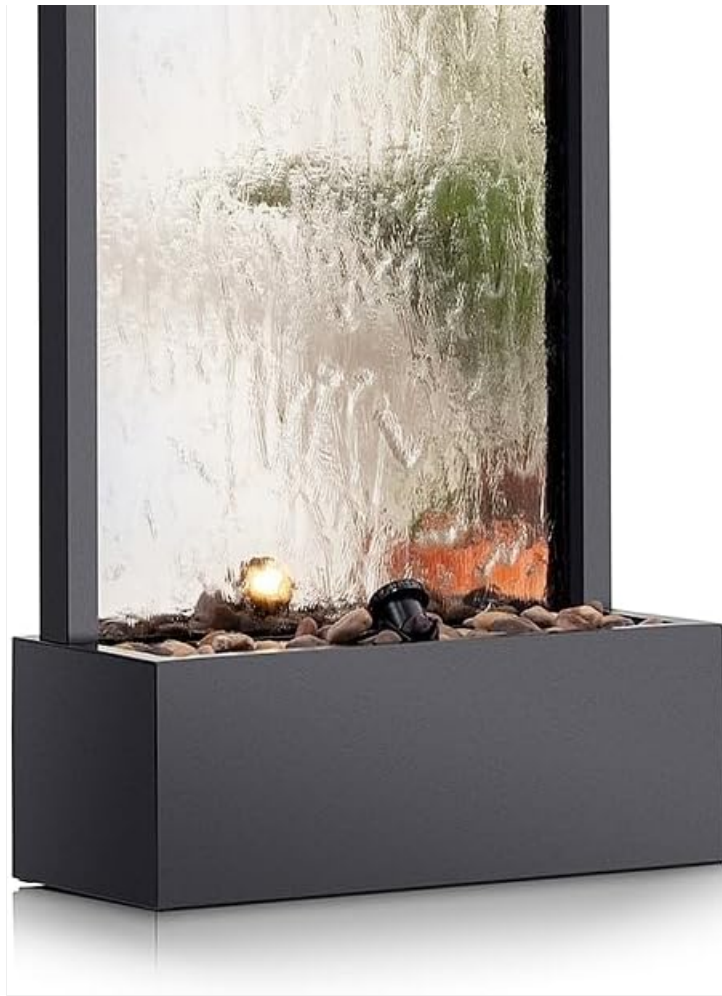


Figure 1: Fully assembled 72-inch silver mirror waterfall fountain.



Figure 2: Close-up view of the fountain base, showing the submersible pump and decorative river stones.

3. Placement

Choose a location that is level and stable. For indoor use, consider placing it in an area where the sound of cascading water is desired, such as a living room, office, or entryway. For outdoor use, ensure it is protected from extreme weather conditions and placed near a suitable electrical outlet.



Figure 3: The fountain integrated into an indoor living space, demonstrating its aesthetic appeal.

4. Filling the Fountain

Fill the reservoir with clean, distilled water. The water level should be sufficient to completely submerge the pump and cover the water holes at the top of the mirror panel. This ensures proper water flow and prevents the pump from running dry, which can cause damage and noise.

OPERATING YOUR FOUNTAIN

1. Powering On/Off

Once the fountain is assembled and filled with water, plug the power adapter into a standard electrical outlet. The pump will begin circulating water, and the LED lights will illuminate. To turn off the fountain, simply unplug the power adapter from the outlet.

2. Continuous Operation

For optimal performance and to prevent water marks on the mirror, it is recommended to keep the fountain running continuously. If

the fountain is turned off, ensure the mirror is cleaned with the provided cloth once dry to avoid residue buildup.

CARE AND MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your fountain.

1. Water Level

Check the water level daily, especially in dry environments or during continuous operation, as water evaporates. Refill with distilled water as needed to keep the pump fully submerged and ensure even water flow across the mirror. Uneven water flow is often an indication that more water is required.

2. Cleaning

- **Mirror Panel:** Use the provided cleaning cloth and a glass cleaner to wipe down the mirror panel regularly, especially if water marks appear.
- **Water Holes:** If water flow becomes uneven, use the provided brush or a soft toothbrush to gently clean the water distribution holes at the top of the mirror panel.
- **Reservoir:** Periodically drain and clean the water reservoir to remove any debris or sediment.

3. Algae Prevention

To prevent algae growth, especially in warmer climates or outdoor settings, consider adding a small amount of algacide specifically designed for fountains to the water weekly. Follow the product instructions for dosage.

4. Pump Care

The submersible pump should be cleaned periodically to remove any mineral buildup or debris that may affect its performance. Disconnect the power, remove the pump, and clean it according to the pump manufacturer's instructions. Ensure the pump is placed on its foam padding and not touching the sides of the reservoir when reinstalled to prevent excessive noise.

5. Winterization/Storage (Outdoor Use)

For outdoor fountains, drain all water and store the fountain indoors in a dry, frost-free location during winter months to prevent damage from freezing temperatures.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
No water flow or uneven flow	Low water level Clogged pump intake Clogged water distribution holes	Add distilled water to the reservoir until the pump is fully submerged and water holes are covered. Clean the pump intake screen. Use the provided brush to clear debris from the water distribution holes.
Loud pump noise or vibration	Pump not fully submerged Pump touching the sides of the reservoir Debris in pump impeller	Ensure adequate water level. Adjust pump position to ensure it rests on the foam padding and is not touching the reservoir walls. Disconnect power, remove pump, and clean the impeller.

Problem	Possible Cause	Solution
Water splashing excessively	Water level too high Pump flow rate too strong (if adjustable)	Reduce water level slightly. Check if your pump has an adjustable flow rate and reduce it if possible.
LED lights not working	Loose connection Damaged LED component	Check all electrical connections. Contact customer support if connections are secure and lights still do not work.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	MLT102
Color	72 Inches - Silver
Material	Aluminum, Glass
Product Dimensions (L x W x H)	24" x 10" x 72" (61cm x 25cm x 183cm)
Item Weight	43 pounds
Power Source	Corded Electric
Special Features	Lighted, Rust Resistant, UV Resistant
GTIN / UPC	821559014726

indoor zen fountain

Mirror water fountain transforms your space into a restful oasis, and features an interior pump that keeps the water flowing - just plug it in!



Figure 4: Product dimensions for the 72-inch fountain.

WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the official Alpine Corporation website or contact their customer service directly. Alpine Corporation is a U.S.-based company with dedicated support teams available to assist you with any product-related inquiries or issues.

Contact information can typically be found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question