

Manuals.plus /

› Fujifilm /

› Fujifilm Instax 210 Instant Camera User Manual

## Fujifilm Instax 210

# Fujifilm Instax 210 Instant Camera User Manual

Model: Instax 210

## 1. INTRODUCTION

Thank you for purchasing the Fujifilm Instax 210 Instant Camera. This camera allows you to capture and print vivid, high-quality instant photos. This manual provides essential information for the safe and effective use of your camera. Please read it thoroughly before use and keep it in a safe place for future reference.

## 2. SAFETY INFORMATION

- Do not attempt to disassemble or modify the camera.
- Keep the camera away from water and moisture.
- Avoid exposing the camera to extreme temperatures or direct sunlight for extended periods.
- Use only specified batteries and Instax Wide film.
- Keep batteries and film out of reach of small children.
- The flash emits a bright light; avoid direct eye contact, especially with infants.

## 3. PACKAGE CONTENTS

Verify that all items are present in your camera package:

- Fujifilm Instax 210 Instant Film Camera
- 4 AA-Size Batteries
- Close-Up / Self-Portrait Attachment

- Strap
- Limited 1-Year Warranty (information card)

## 4. CAMERA PARTS AND FUNCTIONS



**Figure 4.1: Front View**

Shows the lens, flash, shutter button, and viewfinder.



**Figure 4.2: Side View with Controls**

Illustrates the power button, exposure control buttons (Lighten, Normal, Darken), focus switch, and flash button.

- **Lens:** Captures the image. Features a 95mm focal length.
- **Flash:** Automatic low-light flash for proper illumination.
- **Shutter Button:** Press to take a photo.
- **Viewfinder:** Used for framing your shots.
- **Power Button:** Turns the camera on and off.
- **Exposure Control (L/N/D):** Adjusts image brightness (Lighten, Normal, Darken).

- **Focus Switch:** Selects between two focus zones: 0.9m-3m (close-up) and 3m-infinity (normal/far).
- **LCD Display:** Shows film count, focus mode, and exposure setting.

## 5. SETUP

### 5.1. Battery Installation



**Figure 5.1: Battery Compartment**  
Location for inserting AA batteries.

1. Open the battery compartment cover located on the side of the camera.
2. Insert four AA-size alkaline batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

### 5.2. Film Loading



**Figure 5.2: Film Compartment**  
Area for loading Instax Wide film packs.

1. Open the film compartment cover on the back of the camera.
2. Align the yellow mark on the film pack with the yellow mark on the camera.
3. Insert the film pack straight into the compartment. Do not press down on the film pack.
4. Close the film compartment cover. The camera will automatically eject the black film cover.
5. The film counter on the LCD will display '10' (or the remaining number of exposures).

### **5.3. Attaching the Strap**

Thread the provided strap through the strap lugs on the camera body. Ensure it is securely fastened to prevent accidental drops.

### **5.4. Attaching the Close-Up Lens**

The included close-up lens can be attached to the camera lens for shooting subjects between 45cm and 90cm. Align the lens with the camera lens and gently press until it clicks into place. Remove by gently pulling it off.

## **6. OPERATING THE CAMERA**

### **6.1. Power On/Off**

Press the **POWER** button to turn the camera on. The lens will extend. Press the **POWER** button again to turn it off and retract the lens.

## 6.2. Adjusting Focus

Use the focus switch on the side of the camera to select the appropriate range:

- **0.9m - 3m:** For subjects closer to the camera (e.g., portraits, close-ups).
- **3m - ∞ (infinity):** For subjects further away (e.g., landscapes, group shots).

## 6.3. Exposure Control

The camera features automatic exposure control. You can fine-tune the brightness using the **L/N/D** buttons:

- **Lighten:** Makes the photo brighter.
- **Normal:** Standard brightness.
- **Darken:** Makes the photo darker.

## 6.4. Using the Flash

The Instax 210 features an automatic flash that fires in low-light conditions. The flash cannot be completely disabled; it will always activate if the camera detects insufficient ambient light.

## 6.5. Taking a Photo

1. Turn on the camera using the **POWER** button.
2. Select the appropriate focus range (0.9m-3m or 3m-∞).
3. Choose your desired exposure setting (Lighten, Normal, Darken) if needed.
4. Frame your shot using the viewfinder.
5. Press the **Shutter Button** to take the picture. The photo will automatically eject from the top of the camera.
6. Allow the photo to develop naturally. Do not shake or bend the print.

## 7. MAINTENANCE

- **Cleaning the Lens:** Use a soft, dry cloth to gently wipe the lens. Avoid using abrasive cleaners.
- **Cleaning the Camera Body:** Wipe the camera body with a soft, slightly damp cloth.
- **Film Storage:** Store unused film packs in a cool, dry place, away from direct sunlight.
- **Battery Care:** Remove batteries if the camera will not be used for an extended period to prevent leakage.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Dead or incorrectly inserted batteries.	Replace batteries with new AA alkaline batteries, ensuring correct polarity.
Photo does not eject.	No film or film pack incorrectly loaded.	Check film counter. If '0', load a new film pack. Ensure film pack is inserted correctly.
Photos are too dark/light.	Incorrect exposure setting or lighting conditions.	Adjust the L/N/D exposure control. Ensure flash is used in low light.
Photos are blurry.	Incorrect focus setting or camera shake.	Verify the focus switch is set to the correct distance. Hold the camera steady when shooting.
Flash does not fire.	Sufficient ambient light detected.	The flash is automatic and fires only in low light. It cannot be manually forced off if light is low.

## 9. SPECIFICATIONS

Feature	Description
Model Name	Fujifilm INSTAX 210
Film Format	Instax Wide Film
Lens	Retracting lens, 2 components, 2 elements, f=95mm, 1:14
Focusing	Motor-driven 2-range switching (0.9m - 3m / 3m - ∞)
Shutter Speed	Programmed electronic shutter release, 1/64 - 1/200 sec.
Exposure Control	Automatic, Interlocking range (ISO 800): LV 10.5 - LV 15. Exposure compensation (Lighten-Darken Control): ± 2/3 EV
Flash	Built-in electronic flash, automatic flash in low light, fill-in flash mode. Flash range: 0.9m - 3m
LCD Display	Exposure counter (number of remaining shots), Lighten-Darken control mode, Flash mode
Power Supply	Four AA-size 1.5V alkaline batteries
Dimensions (W x H x D)	178.5mm x 117.5mm x 94.5mm (4.6 x 7 x 3.7 inches)
Weight	610g (excluding batteries, strap, and film pack)

## 10. WARRANTY AND SUPPORT

### 10.1. Limited 1-Year Warranty

Your Fujifilm Instax 210 Instant Camera comes with a limited 1-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use. Please refer to the warranty card included in your package for full terms and conditions.

## 10.2. Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Fujifilm customer support. Visit the official Fujifilm website for contact information and service centers in your region.

**Online Resources:** [www.fujifilm.com](http://www.fujifilm.com)