

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Mattel](#) /
- › [Mattel Disney Glitter Princess Cinderella Doll Instruction Manual](#)

Mattel Cinderella

Mattel Disney Glitter Princess Cinderella Doll Instruction Manual

Model: Cinderella | ASIN: B002ONU6UU

INTRODUCTION

This manual provides instructions for the proper setup, operation, and care of your Mattel Disney Glitter Princess Cinderella doll. Please read these instructions carefully before use to ensure a safe and enjoyable experience.

SETUP

- Unboxing:** Carefully remove the doll and all accessories from the packaging. Dispose of packaging materials responsibly.
- Accessory Identification:** Verify that all components are present: one Cinderella doll and one child-sized tiara.
- Initial Inspection:** Examine the doll and tiara for any visible damage or manufacturing defects. If any issues are found, contact Mattel customer support.

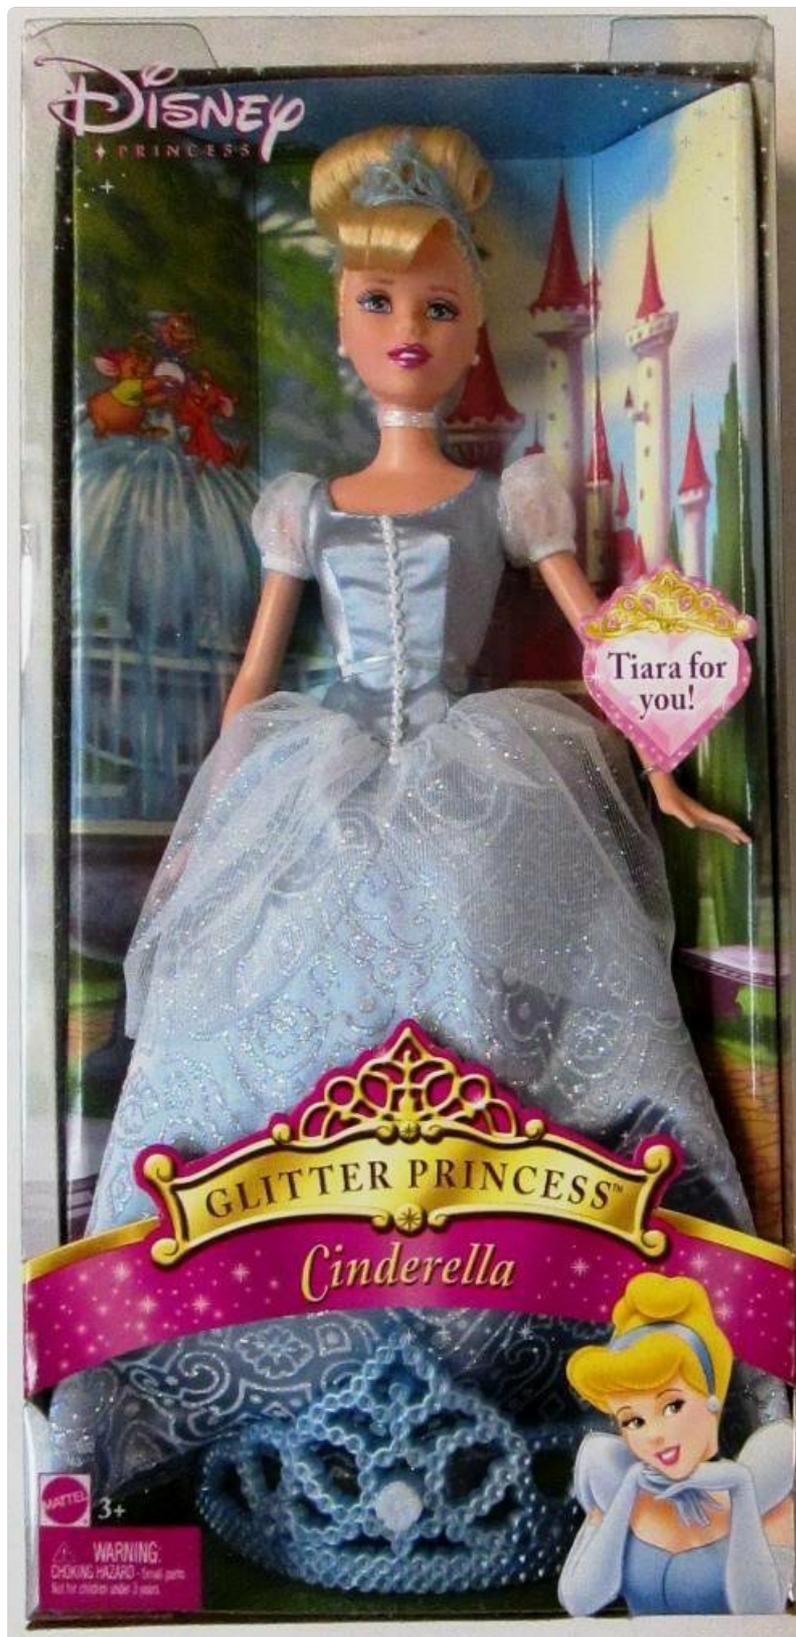


Image 1: Mattel Disney Glitter Princess Cinderella doll with included child-sized tiara. The doll is wearing a sparkling blue gown.

OPERATION AND PLAY

The Mattel Disney Glitter Princess Cinderella doll is designed for imaginative play. Here are some guidelines for use:

- **Doll Play:** The doll features articulated arms and legs, allowing for various poses. Encourage creative storytelling and role-playing.
- **Glitter Gown:** Cinderella's gown is adorned with glitter. While durable, excessive rubbing or harsh handling may cause some glitter to shed.

- **Child-Sized Tiara:** The included tiara is intended for children to wear. Ensure it fits comfortably and is not used in a way that could cause injury.

MAINTENANCE AND CARE

- **Cleaning the Doll:** To clean the doll, gently wipe with a damp cloth. Do not immerse the doll in water. Avoid harsh chemicals or abrasive cleaners, as these can damage the doll's finish or clothing.
- **Hair Care:** The doll's hair can be gently brushed. Avoid excessive pulling or heat styling, which can damage the hair fibers.
- **Tiara Care:** Wipe the tiara with a soft, dry cloth. Avoid bending or applying excessive force to prevent breakage.
- **Storage:** Store the doll and tiara in a clean, dry place away from direct sunlight and extreme temperatures to preserve their condition.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Glitter shedding from gown.	Normal wear and tear; excessive handling.	This is expected with glittered items. Handle the doll gently to minimize shedding.
Doll's hair is tangled or messy.	Frequent play; improper storage.	Gently brush the doll's hair with a soft brush, starting from the ends and working upwards.
Tiara is bent or broken.	Excessive force; accidental damage.	If bent, gently try to reshape. If broken, replacement parts are not typically available for this accessory.

SPECIFICATIONS

- **Product Dimensions:** 2.5 x 6.1 x 13 inches
- **Item Weight:** 10.2 ounces
- **ASIN:** B002ONU6UU
- **Manufacturer:** Mattel, Disney

WARRANTY AND SUPPORT

For information regarding warranty coverage or to contact customer support, please visit the official Mattel website or refer to the contact information provided on the product packaging. Mattel is committed to providing quality products and support.

Mattel Official Website: www.mattel.com

