

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lasko](#) /

› [Lasko Heating Space Heater, 25", Grey 6462 Instruction Manual](#)

Lasko 6462

Lasko Heating Space Heater, 25", Grey 6462

Instruction Manual

PRODUCT OVERVIEW

The Lasko Full Circle Warmth ceramic heater, model 6462, is designed to provide efficient and comforting warmth to your living spaces. Standing 25 inches tall, this heater utilizes patented blower technology for enhanced heat penetration and offers versatile heat distribution options.

Key features include 1500 watts of heating power, three quiet settings, three heat sweep settings (90°, 170°, and full 360° oscillation), an adjustable thermostat with a digital display, and convenient remote control operation. It also incorporates an easy-to-clean filter to maintain efficient performance and built-in safety features for peace of mind.



Figure 1: Lasko 6462 Full Circle Ceramic Space Heater with included remote control.

SETUP INSTRUCTIONS

The Lasko 6462 heater comes fully assembled, allowing for quick and easy setup. No complex assembly is required.

- 1. Unpack:** Carefully remove the heater and any packaging materials from the box.
- 2. Placement:** Place the heater on a firm, level surface. Ensure it is positioned away from walls, furniture, and any combustible materials to allow for proper airflow and safe operation.
- 3. Power Connection:** Plug the heater directly into a 120-volt AC wall outlet. Avoid using extension cords, power strips, or surge protectors, as these can pose a fire hazard.



6' Cord
with
2 Prong Plug



Simple base
assembly
required



Figure 2: The Lasko 6462 heater is 25 inches tall and 11 inches wide, weighing 7.7 lbs. It features a 6-foot cord with a 2-prong plug and requires simple base assembly.

OPERATING INSTRUCTIONS

The Lasko 6462 heater offers intuitive controls for customized comfort. All functions can be controlled via the top-mounted digital display or the included remote control.

Control Panel Overview



Figure 3: Detailed view of the control panel showing Power, Heat Sweep Settings, Digital Thermostat, High Heat (1500 Watts), Low Heat (900 Watts), and Auto mode.

- **Power Button:** Press to turn the heater ON or OFF.
- **Heat Settings:** Toggle between High Heat (1500 Watts), Low Heat (900 Watts), and Auto mode.
- **Adjustable Thermostat:** Use the '+' and '-' buttons to set your desired temperature. The digital display will show the current and set temperatures.
- **Oscillation Control:** Press the oscillation button to cycle through the three heat sweep settings:
 - **90°:** For focused heating in a specific area.
 - **170°:** For broader heat distribution.
 - **360°:** For full-room warmth and circulation.

3 Heat Sweep Settings



Figure 4: Visual representation of the 90°, 170°, and 360° heat sweep settings for optimal heat distribution.

Official Product Video: Lasko Space Heater, 25", Grey 6462

Your browser does not support the video tag.

Video 1: An official product video demonstrating the features and operation of the Lasko 6462 Space Heater, including its 360° oscillation and digital controls.

MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your Lasko heater.

- **Filter Cleaning:** The heater features an easy-to-clean filter located at the base. Periodically remove and clean the filter to prevent dust buildup and maintain optimal airflow. A clogged filter can reduce heating efficiency.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the heater in a cool, dry place, preferably in its original packaging.

Easy-to-Clean Filter



Keeps your
Unit Running
Efficiently

Figure 5: The easy-to-clean filter is accessible at the base of the unit and can be vacuumed or wiped to remove dust and debris.

TROUBLESHOOTING

If you encounter issues with your Lasko heater, refer to the common solutions below:

- **Heater Not Turning On:**
 - Ensure the power cord is securely plugged into a functioning 120V AC outlet.
 - Check if the room's circuit breaker has tripped.
 - Verify that the power button on the unit or remote is pressed.
- **Automatic Heating Function Failure:** Some users have reported occasional issues with the automatic heating option. If this occurs, try turning the unit off and then back on to reset the function.
- **Insufficient Heat Output:**
 - Confirm the heat setting is on High (1500W) or Auto mode with a sufficiently high target temperature.
 - Clean the air filter as described in the Maintenance section.

- Ensure the heater is not obstructed and has adequate clearance for airflow.
- **Unusual Noises (e.g., "sqwawky" fan):** While the unit is designed for quiet operation, prolonged use can sometimes lead to minor fan noises. Ensure the unit is on a stable, level surface. If noises persist or worsen, contact customer support.
- **Heater Turns Off Unexpectedly:** This unit is equipped with overheat protection. If the heater overheats, it will automatically shut off. Unplug the unit, allow it to cool down for at least 10 minutes, and check for any obstructions to airflow before restarting.

SPECIFICATIONS

Feature	Detail
Brand	Lasko
Model Number	6462
Product Dimensions	11"D x 11"W x 25"H
Item Weight	7.7 pounds
Color	Grey
Form Factor	Tower
Heating Type	Ceramic
Power Output	1500 Watts (High Heat)
Voltage	120 Volts
Amperage	12.5 Amps
Heating Coverage	Up to 150 sq. ft.
Special Features	3 Heat Sweep Settings (90°, 170°, 360°), 2 Heat Settings, Adjustable Thermostat, Digital Display, Remote Control
Included Components	Full Circle Ceramic Heater, Remote

WARRANTY AND SUPPORT

The Lasko 6462 Space Heater comes with a **3-year limited warranty**. For warranty claims, technical support, or additional information, please refer to the official user manual or contact Lasko customer service.

You can find the full User Manual (PDF)[here](#).