

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Braun](#) /

> [Braun M60b Mobile Electric Foil Shaver User Manual](#)

## Braun M60B

# Braun M60b Mobile Electric Foil Shaver User Manual

Model: M60B

Brand: Braun

## INTRODUCTION

The Braun M60b Mobile Electric Foil Shaver is designed for convenient and effective shaving on the go. Its compact size and battery operation make it an ideal companion for maintaining a groomed appearance anytime, anywhere. This manual provides essential information for the safe and efficient use of your shaver.

## PRODUCT OVERVIEW

The Braun M60b features a wide floating foil for a close and comfortable shave. It is designed to be washable for easy cleaning under running water and includes a twist cap to protect the foil when not in use.

### Key Features:

- **Wide Floating Foil:** Adapts to facial contours for a close shave.
- **Washable Design:** Easy cleaning under running water.
- **Twist Cap:** Protects the foil when not in use.
- **Battery Operated:** Powered by 2 AA batteries (included) for cordless convenience.
- **Compact Size:** Ideal for travel and on-the-go grooming.

### What's in the Box:

- Braun M60b Mobile Electric Foil Shaver
- 2 AA Batteries

A gift they'll love this holiday.

\$5 rebate

Braun Mail-in-Rebate  
[www.us.braun.com/holiday](http://www.us.braun.com/holiday)

Figure 1: Front view of the Braun M60b Mobile Electric Foil Shaver.

<p><b>M90</b></p> 	<p><b>SmartFoil</b>          unique foil pattern          to better capture hair</p> <p><b>Flexibility</b>          adjusts to your          facial contours</p> <p><b>Washable</b>          clean it under water          with ease</p> <p><b>Cordless</b>          battery operated,          no plug required</p>	<p><b>M60</b></p> 
---	--	--

Figure 2: The Braun M60b is washable, cordless, and adjusts to facial contours.

# SETUP

## Battery Installation

1. Locate the battery compartment at the bottom of the shaver.
2. Twist the bottom cap counter-clockwise to open the compartment.
3. Insert two (2) AA batteries, ensuring correct polarity (+/-).
4. Close the cap by twisting clockwise until it clicks securely into place.

# BRAUN

## MobileShave

MobileShave  
M-60



Smooth Skin  
Anytime,  
Anywhere  
Pour une  
peau douce  
N'importe où,  
n'importe quand

Smooth Skin  
Anytime. Anywhere  
Pour une peau douce  
N'importe où,  
n'importe quand

SHAVER / RASOIR

M-60b

CONTENT / CONTENU :  
SHAVER / RASOIR,  
2 AA BATTERIES /  
2 PILES AA

Figure 3: The twist cap reveals the battery compartment for two AA batteries.

## OPERATING INSTRUCTIONS

### Shaving

1. Ensure the twist cap is in the open position, exposing the foil.
2. Push the on/off switch up to turn on the shaver.
3. For best results, use on dry skin. Hold the shaver at a right angle (90°) to your skin.
4. Stretch your skin and shave against the direction of hair growth.
5. Apply light pressure and use short, circular motions. Avoid pressing too hard to prevent irritation.
6. After shaving, push the on/off switch down to turn off the shaver.
7. Turn the twist cap until it clicks into the closed position to protect the foil.

**Note:** This shaver is designed for daily use on short stubble. For longer beard growth, it is recommended to trim first with a beard trimmer before using the foil shaver for a close finish.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your shaver.

### Cleaning under Running Water:

1. Ensure the shaver is turned off.
2. Remove the foil head by gently pulling it upwards.
3. Rinse the foil head and the shaver body under warm running water until all hair particles are removed.
4. Shake off excess water and allow both parts to air dry completely before reattaching the foil head.

### Dry Cleaning:

1. Ensure the shaver is turned off.
2. Remove the foil head.
3. Use the small cleaning brush (often stored in the shaver's base or included separately) to brush away any trapped hair from the foil and the cutter block.
4. Do not use the brush on the foil itself, as this can damage it.
5. Reattach the foil head.

**Important:** Keep the battery compartment dry. Do not submerge the entire shaver in water if the battery compartment is not sealed.

## TROUBLESHOOTING

- **Shaver not turning on:** Check if the batteries are correctly inserted and have sufficient charge. Replace with new AA batteries if necessary.

- **Poor shaving performance:** Ensure the foil head is clean and free of hair. The foil and cutter block may need replacement after extended use.
- **Skin irritation:** Ensure your skin is clean and dry before shaving. Shave against the direction of hair growth with light pressure. If irritation persists, consult a dermatologist.

## SPECIFICATIONS

Feature	Detail
Model Number	M60B
Power Source	Battery Powered (2 AA batteries)
Battery Average Life	60 minutes
Head Type	Foil
Number of Blades	1
Blade Material	Stainless Steel
Color	Blue
Item Weight	6.4 Ounces
Product Dimensions	1.5 x 3.11 x 5.16 inches
Manufacturer	Procter & Gamble
First Available Date	September 9, 2003

## WARRANTY AND SUPPORT

The Braun M60b Mobile Electric Foil Shaver comes with a two-year limited warranty. This warranty typically covers manufacturing defects but excludes wear and tear on consumable parts like the foil and cutter block. For warranty claims or technical support, please refer to the contact information provided with your product packaging or visit the official Braun website.

For more information, visit the [Braun Store](#).

## SAFETY INFORMATION

- Keep the battery compartment dry. Do not submerge the shaver in water if the battery compartment is not properly sealed.
- Be cautious when handling sharp blades.

- Ensure the twist cap is in place when the shaver is not in use to protect the foil.
- Do not use the shaver if the foil is damaged, as this may cause skin injury.