

Philips RI9822/47

Philips Saeco RI9822/47 Talea Giro Plus Automatic Espresso Machine User Manual

Model: RI9822/47

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation, maintenance, and troubleshooting of your Philips Saeco RI9822/47 Talea Giro Plus Automatic Espresso Machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

The Talea Giro Plus is a super-automatic espresso machine designed to prepare various coffee beverages. Key features include the Saeco Brewing System (SBS) for strength adjustment, a ceramic disc grinder, and a manual Touch Lift drip tray. It also features Rapid Steam technology for milk frothing and a hot water dispenser.



Figure 1: Philips Saeco RI9822/47 Talea Giro Plus Automatic Espresso Machine. This image shows the front view of the machine, highlighting the control panel with the Giro dial, the coffee dispenser, and the steam wand on the side.

2. SETUP

2.1 Unpacking

1. Carefully remove the machine from its packaging.
2. Remove all packing materials, including protective films and stickers.
3. Place the machine on a stable, level surface, away from heat sources and water.

2.2 Initial Cleaning

1. Wash the water tank, drip tray, and grounds container with warm water and a mild detergent. Rinse thoroughly.

2. Wipe the exterior of the machine with a damp cloth.

2.3 Water Tank and Filter Installation

1. Remove the 57 oz (1.62 kg) water tank from the machine.
2. If using a water filter, insert it into the designated slot in the water tank according to the filter's instructions.
3. Fill the water tank with fresh, cold tap water up to the MAX level indicator.
4. Reinsert the water tank securely into the machine.

2.4 Bean Hopper Filling

1. Open the bean hopper lid located on top of the machine.
2. Pour fresh whole coffee beans into the hopper. Do not overfill.
3. Close the bean hopper lid.

2.5 Power Connection and Priming

1. Plug the power cord into a grounded electrical outlet (240 Volts).
2. Turn on the machine using the main power switch.
3. The machine will initiate a priming cycle. Follow any on-screen prompts or indicator lights to complete this process. This typically involves dispensing hot water through the steam wand or coffee dispenser to fill the internal circuits.

3. OPERATING INSTRUCTIONS

3.1 Making Espresso

1. Ensure the water tank is filled and the bean hopper contains coffee beans.
2. Place a cup under the coffee dispenser.
3. Use the Giro dial to select your desired beverage volume.
4. Press the espresso button. The machine will grind the beans, brew, and dispense the coffee.

3.2 Adjusting Coffee Strength (SBS Saeco Brewing System)

The Saeco Brewing System (SBS) allows you to adjust the strength and consistency of your coffee. Locate the SBS dial, usually near the coffee dispenser. Turn the dial to increase or decrease the coffee strength to your preference.

3.3 Using Pre-Ground Coffee

The machine features a pre-ground coffee bypass doser. To use pre-ground coffee:

1. Open the bypass doser lid.
2. Add one scoop of pre-ground coffee (do not exceed one scoop).
3. Select your desired beverage and press the corresponding button. The machine will bypass the grinder and use the pre-ground coffee.

3.4 Frothing Milk (Rapid Steam Technology)

The Rapid Steam technology allows for quick milk frothing for cappuccinos and lattes.

1. Fill a frothing pitcher with cold milk.

2. Position the steam wand into the milk.
3. Activate the steam function (refer to your machine's specific button or dial for steam).
4. Move the pitcher up and down to create foam.
5. Once desired foam is achieved, turn off the steam function. Clean the steam wand immediately after use.

3.5 Hot Water Dispensing

The steam wand can also dispense hot water for tea or other hot beverages.

1. Place a cup under the steam wand.
2. Activate the hot water function (refer to your machine's specific button or dial).
3. Once the desired amount of hot water is dispensed, turn off the function.

3.6 Adjusting Drip Tray (Touch Lift Technology)

The manual Touch Lift drip tray can be moved up and down to accommodate various cup sizes. Simply lift or lower the drip tray manually to the desired height.

4. MAINTENANCE

4.1 Daily Cleaning

- **Drip Tray and Grounds Container:** Empty and rinse daily. The drip tray is removable for cleaning.
- **Steam Wand:** Wipe immediately after each use with a damp cloth to prevent milk residue buildup.
- **Exterior:** Wipe with a soft, damp cloth. Do not use abrasive cleaners.

4.2 Brew Group Cleaning

The brew group should be rinsed regularly (e.g., weekly) to ensure optimal performance and hygiene.

1. Turn off and unplug the machine.
2. Open the service door and remove the brew group.
3. Rinse the brew group thoroughly under lukewarm running water until no coffee residue is visible.
4. Allow the brew group to air dry before reinserting it into the machine.

4.3 Descaling

Descaling is essential to remove mineral buildup and maintain machine performance. The frequency depends on water hardness and usage. The machine may indicate when descaling is required.

1. Use a Saeco-approved descaling solution.
2. Follow the instructions provided with the descaling solution and your machine's display prompts.
3. The process typically involves mixing the descaler with water, running it through the machine, and then rinsing with fresh water.

4.4 Water Filter Replacement

If you use a water filter, replace it regularly as indicated by the filter manufacturer or the machine's display. This helps maintain water quality and reduces the need for frequent descaling.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty; brew group clogged; machine not primed.	Fill water tank; clean brew group; perform priming cycle.
Coffee is too weak or watery.	Coffee beans too coarse; SBS setting too low; insufficient coffee dose.	Adjust grinder to a finer setting; increase SBS setting; ensure sufficient beans in hopper.
Milk not frothing properly.	Steam wand clogged; milk not cold enough; insufficient steam pressure.	Clean steam wand thoroughly; use cold milk; ensure machine is at steaming temperature.
Machine leaks water.	Water tank not seated correctly; internal component issue.	Ensure water tank is properly inserted; contact customer support if problem persists.
Grinder is noisy or not grinding.	Foreign object in grinder; bean hopper empty.	Check for and remove any foreign objects (unplug first); fill bean hopper.

6. SPECIFICATIONS

Feature	Detail
Brand	Philips
Model Number	RI9822/47
Capacity (Water Tank)	1.62 kg (approx. 57 oz)
Color	Silver
Special Features	Water Filter, SBS Saeco Brewing System, Touch Lift Drip Tray, Rapid Steam
Coffee Maker Type	Espresso Machine (Super-Automatic)
Material	Stainless Steel
Specific Uses for Product	Cappuccino, Espresso, Latte
Operation Mode	Fully Automatic
Wattage	760 watts
Voltage	240 Volts
Human Interface Input	Buttons, Dial
Coffee Input Type	Whole Beans, Pre-ground Coffee
Power Source	AC adapter
Filter Type	Reusable
Item Weight	9.98 kg
Exterior Finish	Metallic

Feature	Detail
Dishwasher Safe	No
Dimensions (approx.)	14.5" x 16.0" x 13.0"

7. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Philips website. For technical support, spare parts, or service, please contact Philips customer service in your region. Always have your model number (RI9822/47) and serial number ready when contacting support.