

[Manuals.plus](#) /

› [Singing Machine](#) /

› Instruction Manual for THE SINGING MACHINE iSM-1028 Pedestal CD+G Karaoke System

Singing Machine ISM1028x

Instruction Manual

THE SINGING MACHINE iSM-1028 Pedestal CD+G Karaoke System with 7" Monitor, Video

Model: ISM1028x

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Singing Machine iSM-1028 Pedestal CD+G Karaoke System. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

PRODUCT OVERVIEW



The Singing Machine iSM-1028 Pedestal CD+G Karaoke System features a central pedestal unit with integrated controls, a 7-inch color LCD screen, and an iPod dock. It includes two microphone inputs and comes with two wired microphones. The system is designed for home karaoke entertainment, allowing users to play music CDs and CD+G discs, display lyrics, and even view themselves performing with the built-in camera.

Key Features:

- **CD/CD+G Player:** Play standard music CDs and CD+G (Graphics) discs to display lyrics on the screen.
- **7" Color LCD Screen:** Displays lyrics from CD+G discs or video feed from the integrated camera.
- **Karaokevision Video Camera:** Allows users to see themselves performing on the screen.

- **Digital Key Control:** Adjust the musical key of songs to match vocal range.
- **iPod Compatibility:** Dock and play music from compatible iPod devices.
- **Microphone Inputs:** Two microphone inputs for duets.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all parts are present: main pedestal unit, two microphones, power adapter, and included demo CD/CD+G disc.
2. **Assembly:** Assemble the pedestal unit according to the diagrams in the quick start guide (if applicable). Ensure all connections are secure.
3. **Power Connection:** Connect the power adapter to the DC IN jack on the unit and then plug it into a standard electrical outlet (120 Volts).
4. **Microphone Connection:** Plug the microphones into the MIC 1 and MIC 2 jacks on the unit.
5. **External Connections (Optional):** If connecting to an external TV or audio system, use appropriate audio/video cables (not included) to connect the unit's output jacks to your external device's input jacks.

OPERATING INSTRUCTIONS

Playing CD/CD+G Discs:

1. Open the CD compartment and insert a CD or CD+G disc with the label side facing up. Close the compartment.
2. Press the PLAY/PAUSE button to start playback.
3. If playing a CD+G disc, lyrics will appear on the 7" LCD screen.
4. Use the SKIP buttons to navigate between tracks.

Using the Microphones:

- Ensure microphones are securely plugged in.
- Adjust the MIC VOLUME knob to control the microphone's output level.
- Adjust the ECHO control for vocal effects.

Digital Key Control:

- While a song is playing, use the KEY+ and KEY- buttons to raise or lower the musical key of the song.
- This feature helps match the song's pitch to your vocal range.

Karaokevision Video Camera:

- The built-in camera allows you to see yourself on the 7" LCD screen while performing.
- Ensure adequate lighting for best camera performance.

iPod Compatibility:

- Carefully dock your compatible iPod device into the integrated iPod dock.
- Use the system's controls to play music from your iPod.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store them in their cases when not in use.
- **Storage:** When not in use for extended periods, unplug the unit and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure the unit has proper ventilation. Do not block any ventilation openings.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not securely connected.	Ensure the power cord is firmly plugged into the unit and the wall outlet.
No sound from speakers	Volume is too low or muted.	Increase the MASTER VOLUME. Check if external speakers are connected and powered on.
Microphone not working	Microphone not plugged in or MIC VOLUME is low.	Ensure microphone is securely plugged into the correct jack. Increase MIC VOLUME.
Lyrics not displaying on screen	Disc is a standard audio CD, not a CD+G.	Use a CD+G disc for lyric display. Ensure the disc is clean and free of scratches.
iPod not playing	iPod not properly docked or not compatible.	Re-dock the iPod. Ensure it is a compatible model. Check iPod's volume and playback status.

SPECIFICATIONS

- **Model Number:** ISM1028x
- **Power Source:** 120 Volts (AC)
- **Display:** 7" Color LCD Screen
- **Disc Compatibility:** CD, CD+G
- **Connectivity:** USB (for iPod), Microphone Inputs
- **Speaker Count:** 1
- **Item Weight:** 28.6 pounds
- **Package Dimensions:** 29 x 22.8 x 13.5 inches
- **Included Components:** CD, CD/CD+G (demo disc)

WARRANTY AND SUPPORT

The Singing Machine Company provides a limited warranty for its products. For specific warranty terms, conditions, and duration, please refer to the warranty card included with your product or visit the official Singing Machine website. Keep your purchase receipt as proof of purchase.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Singing Machine customer service. Contact information can typically be found on the product packaging, the official website, or the warranty card.

Note: Do not attempt to repair the unit yourself. Unauthorized repairs may void your warranty.

