

GUESS W16559G1

GUESS W16559G1 Men's Quartz Analog Watch Instruction Manual

Model: W16559G1

INTRODUCTION

Thank you for purchasing the GUESS W16559G1 Men's Quartz Analog Watch. This manual provides detailed instructions for the proper use, care, and maintenance of your new timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

The GUESS W16559G1 is a sophisticated men's watch featuring a quartz movement, analog display, chronograph function, and a durable black leather strap. It is designed for everyday wear and includes water resistance features.

PRODUCT OVERVIEW

Your GUESS W16559G1 watch is equipped with several features for accurate timekeeping and additional functionality. Familiarize yourself with the main components:

- **Watch Case:** Stainless steel construction.
- **Dial:** Black dial with analog display.
- **Hands:** Hour, minute, and second hands.
- **Sub-dials:** Chronograph sub-dials for measuring elapsed time.
- **Crown:** Used for setting time and date (if applicable).
- **Pushers:** Buttons for operating the chronograph function.
- **Strap:** Black leather strap with a pressure clasp.
- **Crystal:** Mineral glass for durability.



Image 1: Front view of the GUESS W16559G1 watch, showing the black dial, chronograph sub-dials, and black leather strap.



Image 2: Angled view of the GUESS W16559G1 watch, highlighting the crown and pushers on the side of the stainless steel case.

SETUP

Setting the Time

1. Pull the crown out to the second click position. The second hand will stop.
2. Turn the crown to set the hour and minute hands to the desired time.
3. Push the crown back into the normal position. The second hand will resume movement.

Note: If your watch has a date function (not explicitly listed for this model but common), you would typically pull the crown to the first click position to set the date. Refer to specific instructions if your model includes this feature.

OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time. Your watch features two pushers, typically located at the 2 o'clock and 4 o'clock positions.

1. **Start/Stop:** Press the upper pusher (usually at 2 o'clock) to start the chronograph. Press it again to stop the measurement.
2. **Reset:** While the chronograph is stopped, press the lower pusher (usually at 4 o'clock) to reset all chronograph hands to their zero positions.

Note: Avoid operating the pushers or crown while the watch is submerged in water to prevent water intrusion.

MAINTENANCE

Water Resistance

Your GUESS W16559G1 watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid exposing the watch to hot water, steam, or sudden temperature changes, as this can compromise the water seals.

- Do not operate the crown or pushers when the watch is wet or submerged.
- Ensure the crown is fully pushed in before any contact with water.
- Have the water resistance seals checked periodically by an authorized service center, especially after battery replacement.

Cleaning

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, dry cloth.
- For the leather strap, avoid prolonged exposure to water, direct sunlight, and harsh chemicals, which can cause damage or discoloration. Clean with a slightly damp cloth and dry thoroughly.

Battery Replacement

The watch is powered by a quartz battery. When the battery runs low, the second hand may start moving at two-second intervals (End-of-Life indicator). It is recommended to have the battery replaced by an authorized GUESS service center to ensure proper sealing and function.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs erratically.	Low battery.	Replace the battery at an authorized service center.
Water condensation under the crystal.	Water resistance compromised.	Immediately take the watch to an authorized service center for inspection and repair. Avoid further contact with water.
Chronograph hands do not reset to zero.	Requires calibration.	Consult an authorized service center for adjustment. Some quartz chronographs allow user calibration, but this model's manual does not specify.

SPECIFICATIONS

Model Number	W16559G1
Brand	GUESS
Movement Type	Quartz
Display Format	Analog
Special Features	Chronograph
Case Material	Stainless Steel
Case Diameter	36 Millimeters
Case Thickness	10 Millimeters
Strap Material	Leather
Strap Color	Black
Strap Width	30 Millimeters
Clasp Type	Pressure Clasp
Crystal Type	Mineral
Water Resistance Depth	50 Meters
Power Source	Battery (1 product-specific battery included)
Product Dimensions	13 x 13 x 13 cm; 90 g

WARRANTY AND SUPPORT

Your GUESS W16559G1 watch comes with a **2-year manufacturer's warranty**. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

For warranty service, technical support, or inquiries about authorized service centers, please contact GUESS customer service or visit the official GUESS website. You can also find more information on the [GUESS Brand Store on Amazon](#).