

[Manuals.plus](#) /

› [Bose](#) /

› Bose Computer MusicMonitor M2 Speaker System User Manual

Bose CMM BK

Bose Computer MusicMonitor M2 Speaker System User Manual

Model: CMM BK

1. INTRODUCTION

Thank you for choosing the Bose Computer MusicMonitor M2 speaker system. This compact system is designed to deliver high-quality audio for your computer and other devices. Its advanced technology provides clear, powerful sound from a small footprint.

Key features of your Bose Computer MusicMonitor M2 include:

- **Ultra-Compact Design:** Achieves powerful and transparent premium sound from an ultra-compact body thanks to neodymium magnets.
- **Premium Construction:** Stylish body realized using aluminum material for the enclosure, ensuring durability and a premium aesthetic.
- **Advanced Audio Processing:** Delivers precise and clear sound through proprietary digital signal processing.
- **Intuitive Control:** Includes an easy-to-operate dedicated remote control with minimal buttons for convenience.
- **Versatile Connectivity:** Easy connection to various audio devices.



Image 1.1: The compact Bose Computer MusicMonitor M2 speaker, easily held in one hand.

2. SETUP

Follow these steps to set up your Bose Computer MusicMonitor M2 speaker system:

1. **Unpack the System:** Carefully remove all components from the packaging. Ensure you have both speakers, the power supply, and the remote control.
2. **Position the Speakers:** Place the left and right speakers on either side of your computer monitor or listening area. For optimal stereo imaging, ensure they are equidistant from your listening position.
3. **Connect the Speakers:** Connect the cable from the left speaker to the designated port on the right speaker.
4. **Connect to Audio Source:** Connect the audio input cable (3.5mm stereo cable) from the right speaker to the headphone jack or audio output port on your computer or other audio device.
5. **Connect Power:** Plug the power supply into the DC IN port on the right speaker, then plug the power cord into a wall outlet.
6. **Insert Remote Battery:** If not already installed, insert the CR2 battery into the remote control, observing polarity.



Image 2.1: Bose M2 speakers set up with a laptop, demonstrating a typical arrangement.

3. OPERATING THE SYSTEM

The Bose Computer MusicMonitor M2 system is designed for simple operation using the included remote control.

3.1 Power On/Off

- Press the **Power** button on the remote control to turn the speakers on or off.
- The power indicator on the right speaker will illuminate when the system is on.

3.2 Volume Control

- Press the **Volume Up (+)** button on the remote to increase the volume.
- Press the **Volume Down (-)** button on the remote to decrease the volume.
- Press the **Mute** button to temporarily silence the audio. Press it again to restore the sound.

3.3 Audio Source

Ensure your audio source (computer, smartphone, etc.) is playing audio and its volume is set to a reasonable level.



Image 3.1: Detail of the Bose M2 speakers, highlighting the compact design and controls.

4. MAINTENANCE

Proper care ensures the longevity and performance of your Bose Computer MusicMonitor M2 speakers.

- **Cleaning:** Use a soft, dry cloth to clean the speaker surfaces. Do not use liquid cleaners, solvents, or aerosols, as they may damage the finish or internal components.
- **Dust:** Regularly dust the speaker grilles to prevent accumulation that could affect sound quality.
- **Placement:** Avoid placing speakers in direct sunlight, near heat sources, or in areas with high humidity.
- **Cables:** Ensure all cables are securely connected and not pinched or strained.

5. TROUBLESHOOTING

If you encounter issues with your Bose Computer MusicMonitor M2, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound	• Speakers are off or muted. • Audio cable is disconnected. • Audio source volume is too low or muted. • Incorrect audio output selected on computer.	• Ensure speakers are powered on and not muted. • Check that the audio cable is securely connected to both the speaker and the audio source. • Increase volume on both the speakers and the audio source. • Verify the correct audio output device is selected in your computer's sound settings.

Problem	Possible Cause	Solution
Distorted sound	• Volume is too high. • Audio cable is faulty or loose. • Audio source is sending a distorted signal.	• Reduce the volume on both the speakers and the audio source. • Try a different audio cable. Ensure connections are secure. • Test with a different audio source to isolate the problem.
Remote control not working	• Battery is dead or incorrectly inserted. • Obstruction between remote and speaker.	• Replace the CR2 battery, ensuring correct polarity. • Remove any obstructions between the remote and the right speaker.

If the problem persists, please contact Bose customer support for further assistance.

6. SPECIFICATIONS

- **Brand:** Bose
- **Model Number:** CMM BK
- **GTIN (Global Trade Identification Number):** 04969929215758
- **Speaker Type:** Desktop Speaker
- **Mounting Type:** Tabletop Mount
- **Recommended Uses:** For Computers
- **Compatible Devices:** PC
- **Color:** Black
- **Control Method:** Remote
- **Remote Battery:** 1 CR2 standard battery



Image 6.1: Side view detail of the Bose M2 speaker.

7. WARRANTY INFORMATION

For detailed warranty information, please refer to the warranty card included with your product or visit the official Bose website. Warranty terms and conditions may vary by region and purchase date.

8. CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact Bose customer support:

- **Online Support:** Visit the official [Bose website](#) for FAQs, product registration, and support resources.
- **Contact Information:** Refer to the contact details provided in your product packaging or on the Bose website for phone or email support in your region.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B002QNEHC6>

More documents and user manuals: <https://manuals.plus/>