

Farberware 008a905f-1e5d-4fad-9263-8e0174c5d545

Farberware Open Hearth Grill Rotisserie Instruction Manual

Model: 008a905f-1e5d-4fad-9263-8e0174c5d545

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, assembly, and maintenance of your Farberware Open Hearth Grill Rotisserie. Designed for versatile cooking, this unit combines the traditional charcoal grilling experience with the convenience of a motorized rotisserie, allowing for even cooking of various meats. Please read this manual thoroughly before initial use and retain it for future reference.



This image displays the complete Farberware Open Hearth Grill Rotisserie system. It features the main grill body with its grate, the rotisserie spit rod with forks, the electric motor unit, and the power cord. The Farberware Lift tool is also visible on top of the grill.

grate. All components are made of metal, with a silver finish, and are designed for outdoor or well-ventilated indoor use.

IMPORTANT SAFETY INFORMATION

- **Read All Instructions:** Before operating the grill, read and understand all instructions to prevent injury or damage.
- **Outdoor Use Only:** This charcoal grill is intended for outdoor use only. Do not operate indoors or in enclosed spaces due to carbon monoxide risk.
- **Stable Surface:** Always place the grill on a stable, level, non-combustible surface.
- **Clearance:** Maintain a minimum distance of 10 feet (3 meters) from combustible materials, structures, and other appliances.
- **Electrical Safety:** The rotisserie motor is electric. Ensure the power cord is not damaged and is connected to a grounded outlet. Keep the motor and electrical connections away from water.
- **Hot Surfaces:** The grill and its components become extremely hot during use. Use heat-resistant gloves or mitts when handling. Do not touch hot surfaces with bare hands.
- **Children and Pets:** Keep children and pets away from the grill at all times.
- **Fire Safety:** Have a fire extinguisher or a bucket of sand readily available in case of a grease fire. Never use water on a grease fire.
- **Charcoal Safety:** Use only charcoal briquettes or lump charcoal. Do not use lighter fluid after charcoal has been ignited. Allow charcoal to cool completely before disposing of ashes.
- **Unplug When Not In Use:** Always unplug the rotisserie motor when not in use or before cleaning.

COMPONENTS OVERVIEW

Familiarize yourself with the parts of your Farberware Open Hearth Grill Rotisserie:

- **Grill Base:** The main frame and charcoal pan.
- **Grill Grate:** Removable cooking surface for direct grilling.
- **Rotisserie Spit Rod:** The long rod that holds food for rotisserie cooking.
- **Rotisserie Forks:** Two sets of adjustable forks to secure food on the spit rod.
- **Rotisserie Motor:** Electric unit that rotates the spit rod.
- **Motor Support Bracket:** Holds the rotisserie motor in place.
- **Spit Rod Handle:** For manual rotation or handling the hot spit rod.
- **Farberware Lift:** A specialized tool for safely lifting the hot grill grate or spit rod.
- **Power Cord:** Connects the rotisserie motor to an electrical outlet.

SETUP AND ASSEMBLY

The Farberware Open Hearth Grill Rotisserie requires minimal assembly. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Inspect for any damage.
2. **Assemble Grill Base:** If the grill base is not pre-assembled, attach the legs to the main body according to the included diagrams. Ensure all connections are secure.
3. **Place Charcoal Pan:** Insert the charcoal pan into the bottom of the grill base.

4. **Position Grill Grate:** Place the grill grate on top of the grill base.
5. **Attach Motor Support Bracket:** Secure the motor support bracket to the designated side of the grill base.
6. **Mount Rotisserie Motor:** Slide the rotisserie motor onto the motor support bracket. Ensure it is firmly seated.
7. **Prepare Spit Rod:** Slide one rotisserie fork onto the spit rod, tines facing inward.

OPERATING INSTRUCTIONS

For Rotisserie Cooking:

1. **Prepare Charcoal:** Place an even layer of charcoal briquettes or lump charcoal in the charcoal pan. Ignite the charcoal using a charcoal chimney starter or appropriate fire starters. Allow charcoal to ash over completely before cooking.
2. **Prepare Food:** Truss or tie any loose parts of the meat (e.g., wings, legs of a chicken) to ensure even rotation. This prevents uneven cooking and potential damage to the motor.
3. **Load Spit Rod:** Skewer the prepared food onto the spit rod. Slide the second rotisserie fork onto the rod and firmly secure the food between both forks. Tighten the thumbscrews on the forks to prevent the food from slipping.
4. **Insert Spit Rod:** With the motor unplugged, insert the pointed end of the spit rod into the motor's drive socket. Rest the other end of the spit rod in the support notch on the opposite side of the grill.
5. **Connect Power:** Plug the rotisserie motor's power cord into a grounded electrical outlet.
6. **Start Rotation:** Turn on the rotisserie motor. The food should begin to rotate smoothly.
7. **Monitor Cooking:** Cook until the desired internal temperature is reached. Use a meat thermometer for accuracy.
8. **Remove Food:** Once cooked, turn off and unplug the motor. Using heat-resistant gloves and the Farberware Lift tool, carefully remove the hot spit rod from the grill. Place it on a heat-safe surface. Remove the food from the spit rod.

For Direct Grilling:

1. **Prepare Charcoal:** Place charcoal in the charcoal pan and ignite as described above.
2. **Position Grill Grate:** Ensure the grill grate is securely placed on the grill base.
3. **Grill Food:** Place food directly on the grill grate over the hot coals.
4. **Use Farberware Lift:** The Farberware Lift can be used to safely remove the hot grill grate if needed.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your grill rotisserie.

- **Allow to Cool:** Always allow the grill and all components to cool completely before cleaning.
- **Unplug Motor:** Ensure the rotisserie motor is unplugged before cleaning. Do not immerse the motor in water. Wipe the motor housing with a damp cloth.
- **Clean Grill Grate and Spit Rod:** After each use, remove the grill grate, spit rod, and forks. Scrape off any large food particles. Wash with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry immediately to prevent rust.
- **Clean Charcoal Pan and Base:** Remove cooled ashes from the charcoal pan. Wipe down the charcoal pan and grill base with a damp cloth. For stubborn grease, use a mild degreaser.

- **Storage:** Store the grill in a dry, covered area when not in use to protect it from the elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rotisserie motor not turning.	Not plugged in; power outage; motor malfunction; food too heavy/unbalanced.	Check power connection; verify power supply; reduce food weight or rebalance; contact support if motor is faulty.
Food not rotating smoothly.	Food not secured by forks; food unbalanced; spit rod not properly seated.	Tighten forks; re-balance food; ensure spit rod is correctly inserted into motor and support.
Excessive smoke.	Grease flare-ups; too much charcoal; food too close to coals.	Trim excess fat from meat; use less charcoal; adjust food position if possible.

SPECIFICATIONS

Brand: Farberware

Model: 008a905f-1e5d-4fad-9263-8e0174c5d545

Color: Silver

Fuel Type: Charcoal

Finish Type: Powder Coated

Included Components: Farberware Lift

Assembly Required: Yes

Handle Material: Metal

Frame Material: Metal

Installation Type: Free Standing

Number of Racks: 1

Number of Power

Levels: 1

Heating Elements: 1

Grill Configuration: Single, Open Hearth

Cooking System: Charcoal

Item Weight: 15.62 pounds

Package Dimensions: 24.25 x 12.7 x 12 inches

WARRANTY AND SUPPORT

Farberware products are manufactured to high-quality standards. For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official Farberware website. For technical support, replacement parts, or any other inquiries, please contact Farberware customer service through their official channels.

Online Support: www.farberware.com/support (Example link, actual link may vary)


Customer Service: Refer to your product packaging or the Farberware website for current contact numbers and

hours of operation.

© 2023 Farberware. All rights reserved.

Related Documents - 008a905f-1e5d-4fad-9263-8e0174c5d545

 <p>FARBERWARE OPEN HEARTH® SMOKELESS INDOOR GRILL/ROTISSEUR USE AND CARE INSTRUCTIONS MODEL FSR100 QUALITY CONTROL INSPECTOR No. 5</p>	<p>Farberware FSR100 Open Hearth Smokeless Indoor Grill/Rotisserie Use and Care Manual Comprehensive use and care instructions for the Farberware FSR100 Open Hearth Smokeless Indoor Grill/Rotisserie, including assembly, safety, cleaning, and cooking charts.</p>
 <p>MICROWAVE OVEN INSTRUCTION MANUAL Model FMO11WEIWH Read these instructions carefully before using your microwave oven. If you follow the instructions in this manual, you will get many years of pleasure from your new microwave oven. See the inside back cover for warranty information. FARBERWARE</p>	<p>Farberware FMO11WEIWH Microwave Oven Instruction Manual Comprehensive instruction manual for the Farberware FMO11WEIWH microwave oven. Includes safety precautions, specifications, operating instructions, cleaning tips, maintenance, and warranty information.</p>
 <p>FARBERWARE CAFETERA DE DOCE TAZAS Model 103744 Para hacer, conservar la sabor de recién hecho de café en cualquier lugar que sea cómodo. www.electrolux.com www.electrolux.com.mx</p>	<p>Manual de Usuario Cafetera Farberware 103744 de 12 Tazas Descubra cómo utilizar, mantener y cuidar su cafetera Farberware 103744 de 12 tazas con este completo manual de usuario. Incluye instrucciones de seguridad, guías de funcionamiento, limpieza y solución de problemas.</p>
 <p>MICROWAVE OVEN INSTRUCTION MANUAL Model FMR17BLK Read these instructions carefully before using your microwave oven. If you follow the instructions in this manual, you will get many years of pleasure from your new microwave oven. See the inside back cover for warranty information. FARBERWARE</p>	<p>Farberware FMR17BLK Microwave Oven Instruction Manual This instruction manual provides essential safety precautions, operating instructions, maintenance tips, and warranty information for the Farberware FMR17BLK microwave oven.</p>

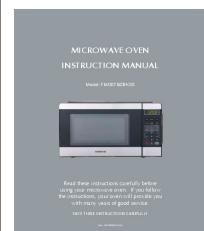

FARBERWARE

[Farberware FMO07GZBKSS Microwave Oven Instruction Manual](#)

Comprehensive instruction manual for the Farberware FMO07GZBKSS microwave oven, covering safety precautions, installation, operation, cleaning, and warranty information.



FARBERWARE

[Farberware FCW10BSCWHA 1.0 Cu. Ft. Portable Washing Machine Instruction Manual](#)

Comprehensive instruction manual for the Farberware FCW10BSCWHA 1.0 Cu. Ft. Portable Washing Machine, covering safety, installation, operation, maintenance, and warranty information.