

Hasbro Mystery Date

Hasbro Mystery Date - Sparkle and Shine Game Instruction Manual

Model: Mystery Date

1. PRODUCT OVERVIEW

The Mystery Date Game is a classic dating board game designed for 2 to 4 players, recommended for ages 7 and up. Players choose a girl character and navigate a sparkly game board, collecting clothing and accessory cards to prepare for one of four fun dates: the beach, the prom, snowboarding, or a picnic. The objective is to spin a knob, open a door, and meet a matching date, avoiding the 'Nerd' character. Be the first player to successfully match with a date to win the game.

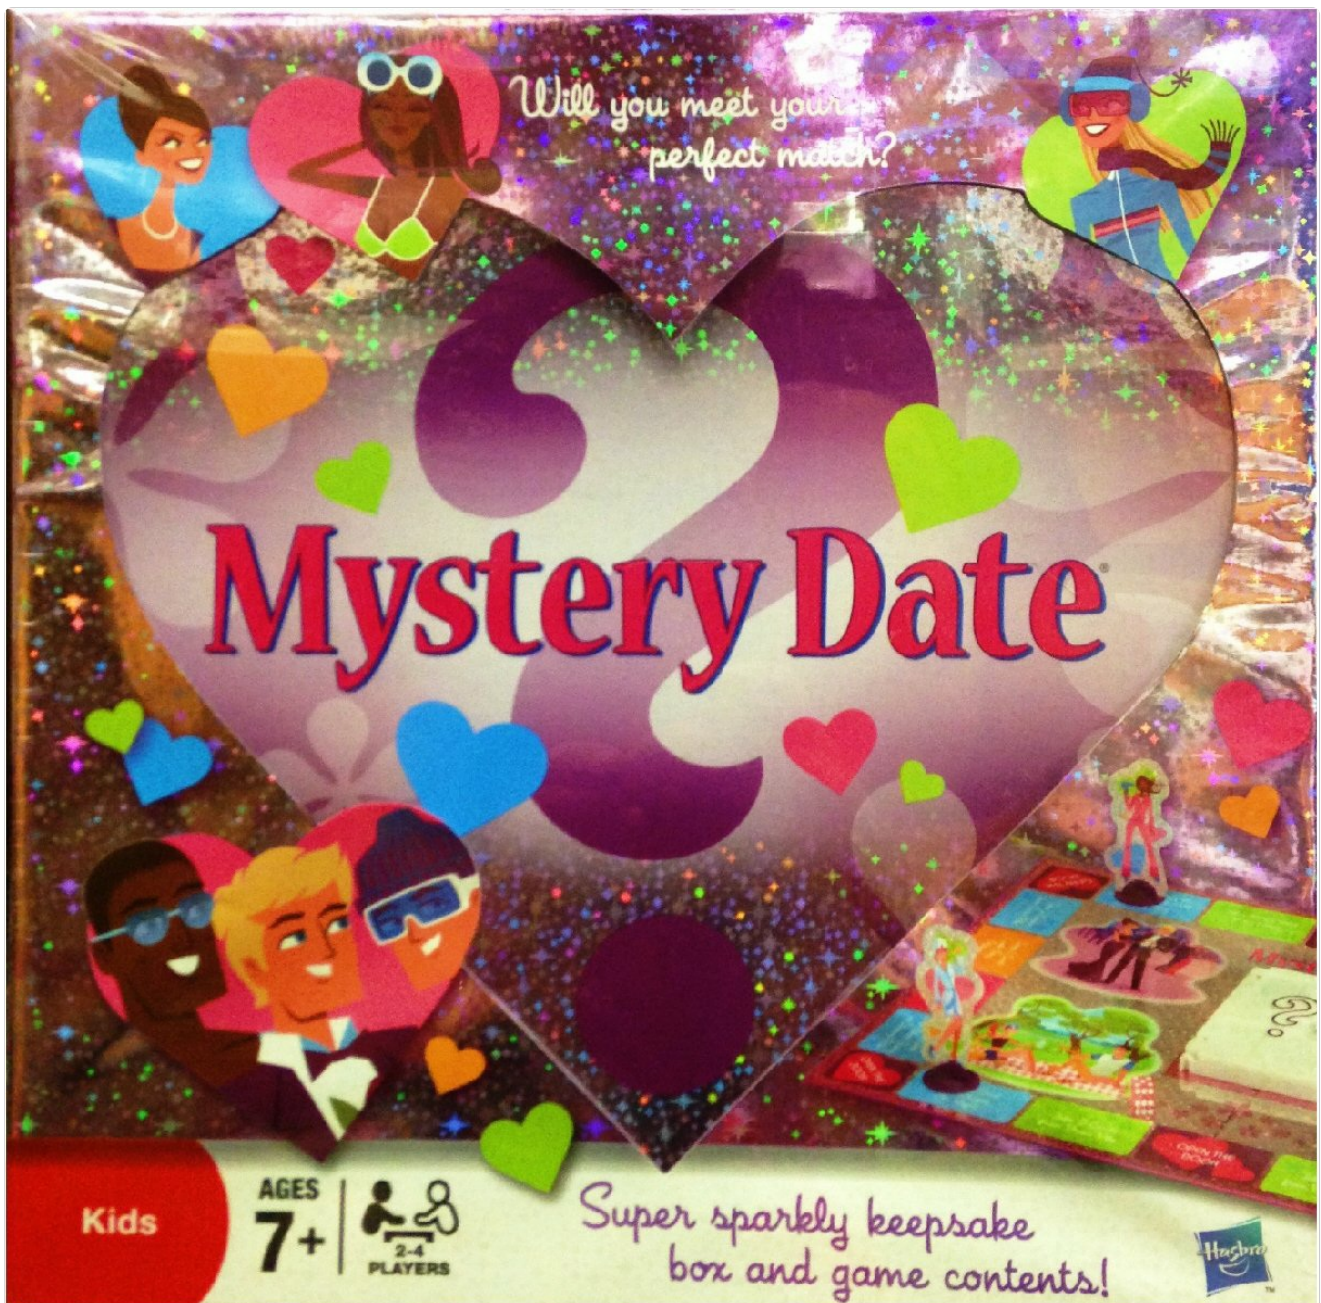


Image 1: The complete Hasbro Mystery Date - Sparkle and Shine game, showcasing the sparkly game board, character pawns, and various game cards.

2. GAME COMPONENTS

Your Mystery Date game includes the following components:

- 1 Super Shiny Keepsake Storage Box
- 1 Gameboard with Mystery Door
- 5 Mystery Dates (cards or figures)
- 48 Clothing/Accessory Cards
- 4 Pawns with Stands
- 1 Die



Image 2: A close-up view of the Mystery Date game components, highlighting the character pawns, clothing cards, and the game board's 'Mystery Door' feature.

3. SETUP

1. **Assemble the Game Board:** Place the sparkly game board on a flat surface. Ensure the 'Mystery Door' mechanism is correctly positioned and functional.
2. **Prepare Cards:** Separate the 48 Clothing/Accessory Cards and the 5 Mystery Date cards. Shuffle each deck separately and place them face down in their designated spots on the game board or nearby.
3. **Choose Characters:** Each player selects a pawn and its corresponding stand. Place all pawns at the designated 'Start' space on the game board.
4. **Dice:** Keep the die accessible to all players.

4. GAMEPLAY

The game is played in turns, with players rolling the die to move their pawn around the board. The goal is to collect

specific clothing and accessory cards that match one of the four date themes (beach, prom, snowboarding, picnic). Once a player believes they have a complete outfit for a date, they can attempt to open the 'Mystery Door'.

- **Moving Your Pawn:** Roll the die and move your pawn the indicated number of spaces. Follow any instructions on the space you land on.
- **Collecting Cards:** Land on spaces that allow you to draw Clothing/Accessory Cards. Collect cards that match your desired date theme.
- **Opening the Mystery Door:** When you have a complete outfit, move to the 'Open the Door' space. Spin the knob on the Mystery Door.
- **Meeting Your Date:** If the door reveals a matching date character, you win! If it reveals the 'Nerd' character, you lose your collected cards and must start collecting a new outfit.
- **Winning the Game:** The first player to successfully open the Mystery Door and reveal a matching date character wins the game.

5. MAINTENANCE

To ensure the longevity of your Mystery Date game, follow these simple maintenance guidelines:

- **Storage:** Store all game components in the Super Shiny Keepsake Storage Box when not in use. Keep the box in a cool, dry place away from direct sunlight.
- **Cleaning:** Wipe the game board and plastic components with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Handling:** Handle cards and pawns with care to prevent bending, tearing, or damage.

6. TROUBLESHOOTING

If you encounter any issues while playing, consider the following:

- **Missing Components:** Carefully check the storage box and surrounding area for any misplaced pieces. Refer to the 'Game Components' section to verify all parts are present.
- **Mystery Door Malfunction:** Ensure the knob is securely attached and rotates freely. If it sticks, gently clean any debris around the mechanism.
- **Rules Clarification:** If there's a dispute about game rules, refer to the 'Gameplay' section or consult the official Hasbro game rules if available separately.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	10.7 x 10.7 x 2.9 inches
Item Weight	3 pounds
ASIN	B002QW2EBS
Manufacturer Recommended Age	7 years and up
Manufacturer	Hasbro

8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Hasbro customer service directly. Refer to the contact information provided on the game packaging or visit the official Hasbro website for assistance.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question