

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gerber](#) /
- › [Gerber Danze Parma Wall Mount Pot Filler D205058SS Instruction Manual](#)

Gerber D205058SS

Gerber Danze Parma Wall Mount Pot Filler D205058SS Instruction Manual

Model: D205058SS | Brand: Gerber

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Gerber Danze Parma Wall Mount Pot Filler, Model D205058SS. Please read all instructions carefully before installation and use to ensure proper function and safety. This pot filler is designed to provide a convenient water source above your stovetop, featuring a 22-inch reach and dual handle controls for ease of use.

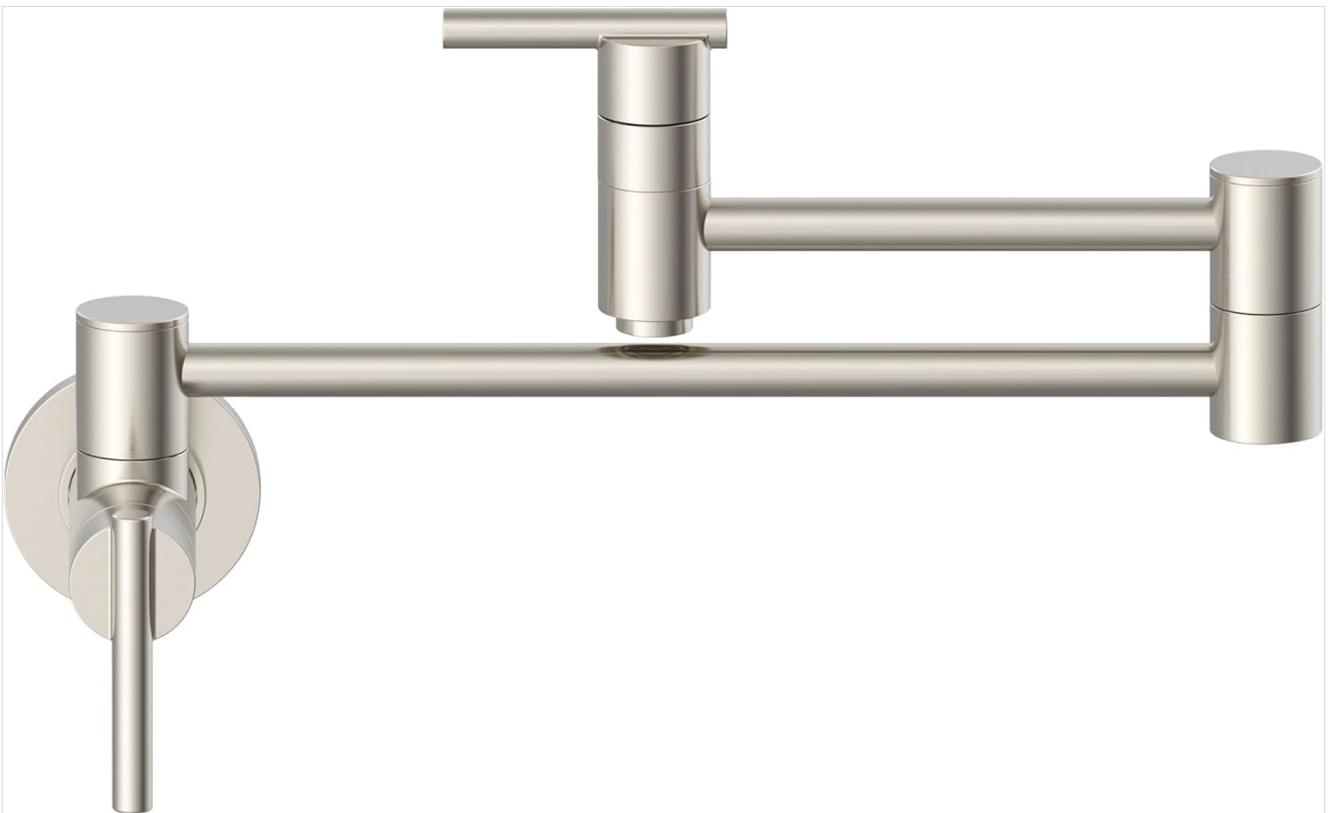


Image: The Gerber Danze Parma Wall Mount Pot Filler in Stainless Steel, showcasing its sleek design.

KEY FEATURES

- **Articulating Spout:** Extends up to 22 inches for full coverage and folds neatly against the wall when not in use, saving space.
- **Dual Handle Controls:** Independent on/off and volume controls for precise water flow management.
- **Drip-Free Performance:** Equipped with ceramic disc cartridges for smooth operation and a watertight seal.
- **Wall-Mount Design:** Single-hole installation, ideal for mounting above stovetops or counter spaces.
- **ADA Compliant:** Lever handles designed for ease of operation.
- **High Flow Rate:** Delivers a maximum flow rate of 2.2 gallons per minute (8.3 L/min) for quick filling.
- **Durable Construction:** Made from brass with a stainless steel finish for longevity.

SETUP AND INSTALLATION

Professional installation is recommended for this wall-mount pot filler. Ensure all local plumbing codes are met. The pot filler is designed for cold water supply only.


1. **Prepare Mounting Location:** Identify a suitable wall location above your stovetop or counter space. Ensure there is adequate structural support within the wall for mounting.
2. **Water Supply Connection:** Turn off the main water supply. Install a dedicated cold water line to the desired mounting point.
3. **Mounting Bracket Installation:** Securely attach the mounting bracket to the wall using appropriate fasteners for your wall type. Ensure it is level and stable.
4. **Pot Filler Assembly:** Connect the pot filler body to the mounting bracket and the cold water supply line. Use plumber's tape on threaded connections to prevent leaks.
5. **Test for Leaks:** Slowly turn on the main water supply and check all connections for leaks. Address any leaks immediately.
6. **Final Adjustments:** Ensure the articulating arm moves freely and folds back against the wall as intended.

Know Your Measurements

Get the right size for your kitchen

Height:
8 15/16"

Fully Extended Spout Reach: 22"

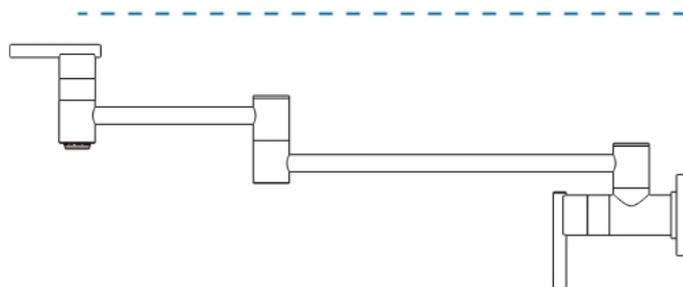

Length: 24 7/16"

Image: Diagram showing the dimensions of the Parma pot filler, including its height, length, and 22-inch fully extended spout reach.

OPERATING INSTRUCTIONS

The Parma Wall Mount Pot Filler features dual controls for convenient operation.

1. **Extend the Spout:** Gently pull the articulating arm away from the wall and position the spout over your pot or desired vessel.
2. **Activate Water Flow:** Turn the handle at the wall connection to the ON position.
3. **Control Volume:** Turn the handle at the spout end to control the water flow volume.
4. **Fill Pot:** Allow water to fill your pot to the desired level.
5. **Turn Off Water:** First, turn the handle at the spout end to the OFF position. Then, turn the handle at the wall connection to the OFF position. This dual shut-off mechanism helps prevent drips.
6. **Retract the Spout:** Gently fold the articulating arm back against the wall when not in use to save space.

Your browser does not support the video tag.

Video: Demonstration of the Gerber Pot Filler in use, showing how to extend the arm, activate water flow, and retract it.



Image: The pot filler extended over a large pot on a stovetop, demonstrating its reach and functionality.

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your pot filler.

- **Cleaning the Finish:** Clean the stainless steel finish with a soft, damp cloth and mild soap. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- **Aerator Cleaning:** If water flow decreases, the aerator may be clogged. Unscrew the aerator from the spout, clean any debris, and rinse thoroughly before reattaching.
- **Leak Prevention:** Always ensure both the wall and spout handles are fully closed after use to prevent drips and leaks.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Water drips from spout.	Handles not fully closed; worn ceramic disc cartridge.	Ensure both handles are completely closed. If dripping persists, contact customer support for cartridge replacement.
Low water flow.	Clogged aerator; low water pressure.	Clean the aerator (refer to Maintenance section). Check household water pressure.
Pot filler arm is stiff or difficult to move.	Accumulation of mineral deposits or debris in joints.	Clean joints with a soft cloth and mild cleaner. Avoid forcing the arm.

SPECIFICATIONS

Feature	Detail
Brand	Gerber
Model Name	Parma
Model Number	D205058SS
Mounting Type	Wall Mount
Finish Type	Stainless
Material	Brass
Color	Stainless Steel
Number of Handles	2
Hole Count	1
Maximum Flow Rate	2.2 Gallons Per Minute (8.3 L/min)
Spout Reach	22 Inches
Spout Height	6.25 Inches

Feature	Detail
Item Weight	5.44 pounds
Included Components	Pot filler, mounting hardware

WARRANTY AND SUPPORT

The Gerber Danze Parma Wall Mount Pot Filler is backed by a **lifetime warranty**. For warranty claims, technical assistance, or replacement parts, please contact Gerber customer support.

Manufacturer: Danze by Gerber

Please refer to the official Gerber website or your purchase documentation for the most current contact information and detailed warranty terms.