

KitchenAid KFPM776ENK

KitchenAid 5KFPM776ENK Food Processor User Manual

Model: KFPM776ENK

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not put the Food Processor base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surface, including the stove.
- Keep hands and utensils away from moving blades or discs while processing food to prevent the risk of severe injury to persons or damage to the food processor. A scraper may be used but must be used only when the food processor is not running.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutting blade or discs on base without first putting bowl properly in place.
- Be certain lid is securely locked in place before operating appliance.
- Do not attempt to defeat the lid interlock mechanism.
- Do not fill bowl above maximum fill line.

PRODUCT OVERVIEW

The KitchenAid 5KFP776ENK Food Processor is designed to simplify your food preparation tasks, offering versatility and efficiency for chopping, slicing, shredding, and more.



Image: The KitchenAid 5KFP776ENK Food Processor, fully assembled with its main bowl and lid, showcasing its sleek design and control buttons on the base.



Image: A collection of accessories for the KitchenAid 5KFP776ENK Food Processor, including various slicing and shredding discs, chopping blades, and a citrus juicer attachment.



Image: The clear storage box for the KitchenAid 5KFP776ENK Food Processor accessories, neatly organizing the blades and discs for convenient storage.

SETUP AND ASSEMBLY

1. Unpacking:

Carefully remove all components from the packaging. Retain packaging for future storage or transport if needed. Ensure all parts listed in the "Included Components" section are present.

2. Cleaning Before First Use:

Wash the work bowl, lid, food pusher, and all accessories (blades, discs) in warm, soapy water. Rinse thoroughly and dry. The main unit base should be wiped with a damp cloth.

3. Assembling the Work Bowl:

Place the work bowl onto the motor base. Rotate clockwise until it locks securely into place. You should hear a click.

4. Attaching Blades/Discs:

Carefully place the desired blade or disc onto the drive shaft inside the work bowl. Ensure it sits firmly on the shaft. **Always handle blades and discs by their plastic hubs, as the edges are very sharp.**

5. Securing the Lid:

Place the lid onto the work bowl, aligning the tab on the lid with the slot on the handle. Rotate the lid clockwise until it locks into place. The food processor will not operate unless the lid is properly locked.

6. Inserting the Food Pusher:

Insert the food pusher into the feed tube of the lid. This is used to guide food into the blades/discs during operation.

OPERATING INSTRUCTIONS

General Operation

1. Preparation:

Ensure the food processor is assembled correctly and plugged into a grounded electrical outlet. Prepare ingredients by cutting them into pieces that fit easily into the feed tube.

2. Adding Ingredients:

For chopping or mixing, add ingredients directly into the work bowl. For slicing or shredding, add ingredients through the feed tube while the motor is running.

3. Powering On:

Press the 'ON' button to start the motor. For continuous operation, keep the button pressed or engage the lock function if available. Use the 'PULSE' button for short bursts of power, ideal for chopping or coarse processing.

4. Processing Food:

Use the food pusher to guide food through the feed tube. Never use your fingers or other utensils to push food into the feed tube while the appliance is operating.

5. Stopping Operation:

Press the 'OFF' button to stop the motor. Wait for the blade or disc to come to a complete stop before removing the lid.

Specific Functions

• Chopping/Minicing:

Use the multi-purpose blade. Add ingredients to the bowl. Use the 'PULSE' function for controlled chopping. For finer results, process continuously.

• Slicing/Shredding:

Attach the desired slicing or shredding disc. Turn the machine on, then feed ingredients through the feed tube using the food pusher. Ensure ingredients are firm for best results.

• Kneading Dough:

Use the dough blade (if included). Add flour and other dry ingredients, then gradually add liquids while the machine is running on a low speed. Process until a ball of dough forms.

• Citrus Juicing:

Attach the citrus juicer accessory. Place a container under the spout. Press halved citrus fruits onto the reamer while the machine is running.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your KitchenAid Food Processor.

1. Unplug Before Cleaning:

Always unplug the appliance from the power outlet before cleaning or disassembling.

2. Disassembly:

Remove the food pusher, lid, blade/disc, and work bowl from the motor base.

3. Cleaning Parts:

Wash the work bowl, lid, food pusher, and all accessories (blades, discs) in warm, soapy water. Rinse thoroughly. **Note: The product specifications state "Hand Wash" and "Dishwasher safe?: No".**

Use a brush to clean hard-to-reach areas and around blades. Handle blades with extreme care due to their sharpness.

4. Cleaning the Motor Base:

Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.

5. Drying and Storage:

Ensure all parts are completely dry before reassembling or storing. Store blades and discs safely in their designated storage box to prevent accidental injury and keep them organized.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Food processor does not turn on.	Not plugged in. Lid or bowl not properly locked. Overload protection activated.	Ensure the power cord is securely plugged into a working outlet. Check that the work bowl and lid are correctly assembled and locked into place. Unplug the unit, remove some ingredients if overloaded, wait 30 minutes for the motor to cool, then plug back in and try again.
Motor runs, but blade/disc does not spin.	Blade/disc not properly seated on drive shaft. Food jammed.	Unplug the unit and ensure the blade or disc is fully pushed down onto the drive shaft. Unplug the unit and carefully remove any food blocking the blade/disc.
Uneven processing.	Ingredients too large or too small. Overfilling the bowl.	Cut ingredients into uniform pieces. Process in smaller batches. Do not exceed the maximum fill line.

If the problem persists after trying these solutions, please contact KitchenAid Customer Service.

SPECIFICATIONS

Brand:	KitchenAid
Model Number:	KFPM776ENK
Product Dimensions:	26.7 x 21.11 x 40.89 cm
Item Weight:	13.6 kg
Auto Shutoff:	No

Product Care Instructions:	Hand Wash
Dishwasher Safe:	No
Included Components:	Lid (and other accessories as shown in images, e.g., various blades/discs, food pusher, work bowl)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official KitchenAid website or contact their customer service directly.

You can visit the official KitchenAid store for more information:[KitchenAid Store](#)

When contacting support, please have your model number (KFPM776ENK) and purchase details ready.

© 2024 KitchenAid. All rights reserved.