

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [RCA](#) /

› [RCA DRC6272 Twin Mobile DVD Players User Manual](#)

RCA DRC6272

RCA DRC6272 Twin Mobile DVD Players User Manual

Model: DRC6272

INTRODUCTION

The RCA DRC6272 Twin Mobile DVD Players provide a versatile entertainment solution for both in-car and home use. This system features two independent 7-inch LCD screens, allowing passengers to watch the same movie or enjoy different content simultaneously. Designed for ease of use and portability, this manual will guide you through the setup, operation, and maintenance of your new DVD players.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Two (2) 7-inch LCD Screen Mobile DVD Players
- Two (2) Headrest Mounting Kits
- Two (2) Remote Controls (color-coded)
- One (1) AV Cable
- One (1) Dual Output Car Power Adapter
- One (1) Additional Single Output Car Power Adapter
- Two (2) AC Power Adapters

PRODUCT FEATURES

- **Twin 7-inch LCD Displays:** Each player features a clear 7-inch screen for comfortable viewing.
- **Independent or Synchronized Playback:** Watch two different DVDs or synchronize both screens to play the same movie from a single player.
- **Built-in Stereo Speakers:** Each unit includes integrated speakers for audio playback.
- **Headphone Jacks:** Individual headphone jacks on each player allow for private listening.
- **AV Input/Output Jacks:** Configurable AV jacks enable connection to external devices like game consoles or TVs.
- **Multi-Format Playback:** Supports DVD, CD, and JPG formats.
- **Portable Design:** Includes headrest mounting kits for vehicle installation and flip-out stands for tabletop use.
- **Multiple Power Options:** Operates via car power adapters (dual and single output) or AC power adapters for home

use.

- **Color-Coded Remote Controls:** Two dedicated remotes for independent control of each player.

SETUP

In-Car Installation

1. **Attach Mounting Kits:** Securely attach the headrest mounting kits to the back of your vehicle's headrests using the provided Velcro straps. Ensure the players are positioned for optimal viewing by passengers.
2. **Mount DVD Players:** Slide each DVD player onto its respective mounting kit. Ensure they are firmly seated.
3. **Connect Power:**
 - For powering both units from a single car power outlet, use the dual output car power adapter. Connect one plug to each player and the main adapter to your vehicle's 12V power outlet.
 - For powering units in separate vehicles or from separate outlets, use the additional single output car power adapter for one unit, and the dual output adapter for the other (using only one of its outputs), or two single output adapters if available.
4. **Connect AV Cable (Optional):** If you wish to play the same movie on both screens, connect the supplied AV cable between the AV OUT jack of the primary player (the one with the DVD) and the AV IN jack of the secondary player.
5. **Route Cables:** Carefully route all power and AV cables to avoid interference with vehicle operation and passenger movement.

Home Use Setup

1. **Position Players:** Flip out the integrated stand on the back of each player and place it on a flat, stable surface.
2. **Connect Power:** Use the provided AC power adapters. Plug the small end into the DC IN jack on each player and the larger end into a standard wall outlet.
3. **Connect AV Cable (Optional):** If desired, connect the AV cable between players for synchronized viewing, or connect a player to an external TV using the AV OUT jack.



Figure 1: RCA DRC6272 Twin Mobile DVD Players with accessories. This image displays the two 7-inch screens, remote controls, and various power adapters, illustrating the complete package for mobile and home use.

OPERATING INSTRUCTIONS

Powering On/Off

Press the **POWER** button on the player or the remote control to turn the unit on or off.

Loading a Disc

Gently press the **OPEN** button located on the top of the player. The screen will tilt forward, revealing the disc tray. Place a DVD or CD onto the spindle with the label side facing up. Close the screen until it clicks into place.

Playback

After loading a disc, playback should begin automatically. If not, use the remote control or the player's buttons to select **PLAY**. The players support DVD, CD, and JPG formats.

Dual Screen Modes

- **Playing the Same Movie:** Insert a DVD into the primary player. Connect the AV OUT of the primary player to the AV IN of the secondary player using the AV cable. Set the source switch on the secondary player to AV IN. Both screens will display the same content.
- **Playing Different Movies:** Insert a DVD into each player. Ensure no AV cable is connecting the players, or if connected, set the source switch on each player to DVD. Each player will operate independently.

Using Remote Controls

Each player comes with a color-coded remote control. Use the remote that matches the color of the player for independent control. Functions include Play, Pause, Stop, Skip, Volume, Menu navigation, and Source selection.

Volume Control

Adjust the volume using the **VOL +** and **VOL -** buttons on the player or the remote control.

Headphone Use

Plug standard 3.5mm headphones into the headphone jack on each player for private listening. This will mute the built-in speakers.

Connecting External Devices (AV In/Out)

The AV jacks can be used to connect external video sources (like a game console) to the player (AV IN) or to output the player's video to an external display (like a TV) (AV OUT). Use the provided AV cable for these connections and select the appropriate source on the player.

MAINTENANCE

- **Cleaning the Screens:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaning solution. Avoid harsh chemicals.
- **Cleaning the Unit:** Wipe the exterior of the players with a soft, dry cloth.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Storage:** When not in use for extended periods, disconnect the power adapters and store the players in a cool, dry

place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty; vehicle power outlet not working.	Ensure power adapters are securely connected to both the player and the power source. Check vehicle's 12V outlet or wall outlet.
No picture or sound	Incorrect source selected; AV cable loose or faulty; disc problem.	Verify the correct source (DVD/AV IN) is selected. Check AV cable connections. Ensure disc is clean and undamaged.
Disc not playing	Disc inserted incorrectly; disc is dirty or scratched; unsupported disc format.	Ensure disc is inserted correctly (label side up). Clean the disc. Try a different disc. Verify disc format is supported (DVD, CD, JPG).
Remote control not working	Batteries are dead or inserted incorrectly; obstacle between remote and player; remote is for the other player.	Replace remote batteries. Ensure clear line of sight to the player's IR sensor. Use the correct color-coded remote for the player.
Picture freezes or skips	Disc is dirty or scratched; player is subjected to excessive vibration.	Clean the disc. Ensure the player is securely mounted and stable.

SPECIFICATIONS

Feature	Specification
Brand	RCA
Model Number	DRC6272
Screen Size	7 Inches (per screen)
Display Type	LCD
Media Type Supported	DVD, CD, JPG
Color	Black
Item Weight	8 ounces (per player, approximate)
Product Dimensions	13 x 4.75 x 8 inches (overall package dimensions)
Batteries	2 Product Specific batteries required (included for remotes)

WARRANTY AND SUPPORT

For warranty information, technical assistance, or customer support regarding your RCA DRC6272 Twin Mobile DVD Players, please refer to the documentation included with your original purchase. You may also visit the official RCA support website for the most up-to-date information and contact options.