

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Casdon](#) /

› [Casdon Dyson DC22 Toy Vacuum Cleaner Instruction Manual](#)

Casdon 624

Casdon Dyson DC22 Toy Vacuum Cleaner Instruction Manual

Model: 624

INTRODUCTION

This manual provides essential information for the safe and effective use of your Casdon Dyson DC22 Toy Vacuum Cleaner. Please read these instructions carefully before assembly and operation, and retain them for future reference.

SAFETY INFORMATION

This product is designed as a toy for children aged 36 months to 8 years. No specific safety warnings are provided beyond general toy safety guidelines. Adult supervision is recommended during play.

WHAT'S IN THE BOX

Upon unpacking, ensure all components are present:

- 1 x Casdon Dyson DC22 Toy Vacuum Cleaner Unit
- 1 x Detachable Wand
- 4 x Attachments (including floor head, crevice tool, and brush tool)



Image: The Casdon Dyson DC22 Toy Vacuum Cleaner, showing the main unit, flexible hose, and the wand with floor head attached. Various attachments are visible.

SETUP

1. Battery Installation

1. Locate the battery compartment on the main vacuum unit.
2. Open the compartment cover.
3. Insert 4 x C batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Assembly

1. Connect the flexible hose to the main vacuum unit by aligning the connectors and twisting until secure.
2. Attach the detachable wand to the end of the flexible hose.
3. Select a desired attachment (e.g., floor head, crevice tool) and firmly connect it to the end of the wand.



Image: The Casdon Dyson DC22 Toy Vacuum Cleaner with its flexible hose neatly wrapped around the main unit, demonstrating a compact storage configuration.

OPERATING INSTRUCTIONS

The Casdon Dyson DC22 Toy Vacuum Cleaner features a dual-mode switch for different play experiences.

Power Switch and Modes

- **Off Position:** The central position of the switch turns the unit off.
- **Mode 1 (Simulated Cyclone Action):** Moving the switch to one side activates the simulated cyclone action. This causes the colorful beads within the clear canister to spin, mimicking the visual effect of a real vacuum cleaner. In this mode, there is no suction.
- **Mode 2 (Working Suction):** Moving the switch to the other side activates the working suction feature. This mode is designed to pick up small, lightweight debris such as small pieces of paper or poly beads. In this mode, the colorful beads do not spin.



Image: A young child actively playing with the Casdon Dyson DC22 Toy Vacuum Cleaner, demonstrating its use in a home setting.

Using Attachments

The included attachments can be interchanged on the wand to simulate different cleaning tasks. Ensure attachments are securely fitted before use.



Image: A close-up view of the clear canister on the toy vacuum, showing the colorful beads in motion, illustrating the simulated cyclone action.

MAINTENANCE

Emptying the Debris Bin

The toy vacuum features a removable dustbin at the back. When small debris is collected, the bin can be detached and emptied. This allows for continuous play.



Image: A close-up view of the debris tray component of the toy vacuum, indicating its function for collecting small items.

General Cleaning

Wipe the exterior surfaces of the toy with a damp cloth as needed. Do not immerse the unit in water.

TROUBLESHOOTING

- **Unit does not turn on:**

Ensure that 4 x C batteries are correctly installed with the proper polarity and are not depleted. Check the power switch is moved fully to one of the operating modes.

- **Weak or no suction:**

The toy vacuum is designed for light suction to pick up very small, lightweight debris. It is not intended for strong suction like a full-sized vacuum cleaner. Ensure the debris bin is not full and the hose/attachments are clear of blockages.

- **Buttons are not functional:**

Certain buttons, such as the cord retract button and the main power button on the handle, are decorative and do not have functional operation. The primary power and mode selection is controlled by the dual-mode switch.

- **Hose appears flimsy:**

The flexible hose is made of lightweight plastic. Handle with care to prevent kinking or damage.

SPECIFICATIONS

Feature	Detail
Product Dimensions	17.5 x 26 x 23 inches
Item Weight	2 pounds
Model Number	624

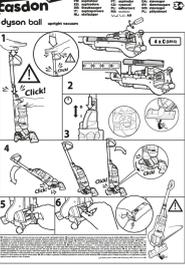
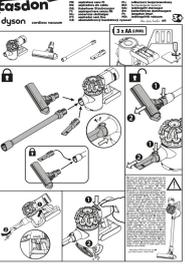
Manufacturer Recommended Age	36 months - 8 years
Batteries Required	4 C batteries (not included)
Release Date	May 1, 2023
Manufacturer	Casdon Toys

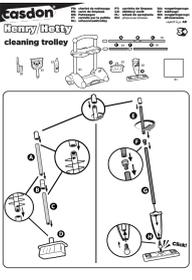
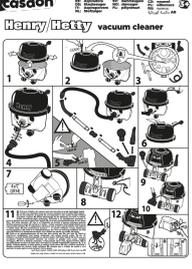
SUPPORT AND ADDITIONAL RESOURCES

For further assistance or detailed installation instructions, please refer to the official PDF manual:

[Download Installation Manual \(PDF\)](#)

Related Documents - 624

	<p>Casdon Dyson Ball Vacuum Cleaner Toy - Instructions and Safety Information</p> <p>Detailed instructions and safety guidelines for the Casdon Dyson Ball Vacuum Cleaner toy, including assembly, battery installation, operation, and warnings. Suitable for children aged 3+.</p>
	<p>Casdon Dyson Ball Vacuum Cleaner - Assembly and Operating Instructions</p> <p>This document provides assembly and operating instructions for the Casdon Dyson Ball Vacuum Cleaner toy. It includes safety warnings, battery installation guidance, and operational steps for the toy vacuum.</p>
	<p>Casdon Dyson Ball Toy Vacuum Cleaner - Assembly and Operation Guide</p> <p>Learn how to assemble and use your Casdon Dyson Ball toy upright vacuum cleaner with this concise, illustrated guide. Suitable for children aged 3+.</p>
	<p>Casdon Dyson Cordless Vacuum Toy Assembly and Use Guide</p> <p>A guide for assembling and using the Casdon Dyson Cordless Vacuum toy, including instructions and safety information.</p>

 <p>Casdon Henry Hetty cleaning trolley</p>	<p>Casdon Henry Hetty Cleaning Trolley - Assembly and Play Guide</p> <p>Comprehensive guide for assembling the Casdon Henry Hetty Cleaning Trolley toy. Includes parts list, step-by-step instructions, and safety information for children aged 3+.</p>
 <p>Casdon Henry Hetty vacuum cleaner</p>	<p>Casdon Henry/Hetty Vacuum Cleaner Toy Instructions</p> <p>A guide on how to assemble and use the Casdon Henry/Hetty toy vacuum cleaner, including safety information and product details.</p>

Documents - Casdon – 624



[\[pdf\]](#) Catalog

2021 Catalogue Casdon 7 oct — from Dyson to Flymo Henry Hetty Morphy Richards Kenwood DeLonghi and Mr Kipling reacts the child s response depending on instruction casdon 10 |||

2021 Catalogue Real life fun play 75 years of inspiring play As a family of toymakers, we are ... one Action W22.2 x D16.2 x H53.3 Cm x 6 Cbm: 0.1282 Weight: 12.35 Kg 9 Just like the real thing **624** Dyson DC22 Vacuum Cleaner Licenced replica of the Dyson cylinder vacuum with imitation cyclone a...

lang:en score:35 filesize: 13.7 M page_count: 24 document date: 2021-02-26



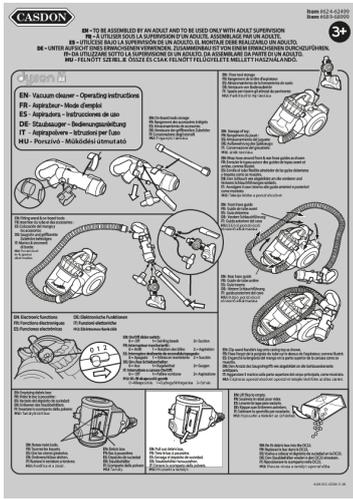
[\[pdf\]](#) Catalog

2021 Catalogue CasdonA licensed toy replica of the DeLonghi Infinito microwave for realistic pretend play A chrome effect kettle and toaster set role play Casdon 2021casdon 10 Casdon srsltid

AfmBOoo0fOqaqQ9IBQ3QlkLSKr1zPvCvCKzaMRtloHjIPc9YN3jeIWxP |||

2021 Catalogue Real life fun play 75 years of inspiring play As a family of toymakers, we are ... one Action W22.2 x D16.2 x H53.3 Cm x 6 Cbm: 0.1282 Weight: 12.35 Kg 9 Just like the real thing **624** Dyson DC22 Vacuum Cleaner Licenced replica of the Dyson cylinder vacuum with imitation cyclone a...

lang:en score:23 filesize: 13.7 M page_count: 24 document date: 2021-02-26



[pdf]

624 10C COM 1120 HU liu yubin Használati útmutatóDyson DC22 játékporszívó 28 cmhasználati útmutatóimages euronics hu product documents aGFzem7DoWxhdGkgw7p0bXV0YXTDsy5wZGY hasznalati utmutato zeq7x3qj v 1 |||

Item #624-62499 Item #689-68999 HU - FELNTT SZERELJE SSZE S CSAK FELNTT FELGYELETE MELLETT HASZNLAND. HU: Padtisztt fej trolsa HU - Porszv - Mkdsi tmutat HU: Foganyt trolsa HU: Jtk trolsa HU: Porszvcvs s foganty alkalmazsa HU: Elektromos funkciók HU: Tekerje krbe a porszvcsvet HU: Ells porszvcvs... lang:no score:21 filesize: 4.34 M page_count: 2 document date: 2021-06-24

Item No.	Item Name	Item No.	Item Name	Item No.	Item Name
1	Motor	10	Roller	19	Roller
2	Roller	11	Roller	20	Roller
3	Roller	12	Roller	21	Roller
4	Roller	13	Roller	22	Roller
5	Roller	14	Roller	23	Roller
6	Roller	15	Roller	24	Roller
7	Roller	16	Roller	25	Roller
8	Roller	17	Roller	26	Roller
9	Roller	18	Roller	27	Roller
10	Roller	19	Roller	28	Roller
11	Roller	20	Roller	29	Roller
12	Roller	21	Roller	30	Roller
13	Roller	22	Roller	31	Roller
14	Roller	23	Roller	32	Roller
15	Roller	24	Roller	33	Roller
16	Roller	25	Roller	34	Roller
17	Roller	26	Roller	35	Roller
18	Roller	27	Roller	36	Roller
19	Roller	28	Roller	37	Roller
20	Roller	29	Roller	38	Roller
21	Roller	30	Roller	39	Roller
22	Roller	31	Roller	40	Roller
23	Roller	32	Roller	41	Roller
24	Roller	33	Roller	42	Roller
25	Roller	34	Roller	43	Roller
26	Roller	35	Roller	44	Roller
27	Roller	36	Roller	45	Roller
28	Roller	37	Roller	46	Roller
29	Roller	38	Roller	47	Roller
30	Roller	39	Roller	48	Roller
31	Roller	40	Roller	49	Roller
32	Roller	41	Roller	50	Roller
33	Roller	42	Roller	51	Roller
34	Roller	43	Roller	52	Roller
35	Roller	44	Roller	53	Roller
36	Roller	45	Roller	54	Roller
37	Roller	46	Roller	55	Roller
38	Roller	47	Roller	56	Roller
39	Roller	48	Roller	57	Roller
40	Roller	49	Roller	58	Roller
41	Roller	50	Roller	59	Roller
42	Roller	51	Roller	60	Roller
43	Roller	52	Roller	61	Roller
44	Roller	53	Roller	62	Roller
45	Roller	54	Roller	63	Roller
46	Roller	55	Roller	64	Roller
47	Roller	56	Roller	65	Roller
48	Roller	57	Roller	66	Roller
49	Roller	58	Roller	67	Roller
50	Roller	59	Roller	68	Roller
51	Roller	60	Roller	69	Roller
52	Roller	61	Roller	70	Roller
53	Roller	62	Roller	71	Roller
54	Roller	63	Roller	72	Roller
55	Roller	64	Roller	73	Roller
56	Roller	65	Roller	74	Roller
57	Roller	66	Roller	75	Roller
58	Roller	67	Roller	76	Roller
59	Roller	68	Roller	77	Roller
60	Roller	69	Roller	78	Roller
61	Roller	70	Roller	79	Roller
62	Roller	71	Roller	80	Roller
63	Roller	72	Roller	81	Roller
64	Roller	73	Roller	82	Roller
65	Roller	74	Roller	83	Roller
66	Roller	75	Roller	84	Roller
67	Roller	76	Roller	85	Roller
68	Roller	77	Roller	86	Roller
69	Roller	78	Roller	87	Roller
70	Roller	79	Roller	88	Roller
71	Roller	80	Roller	89	Roller
72	Roller	81	Roller	90	Roller
73	Roller	82	Roller	91	Roller
74	Roller	83	Roller	92	Roller
75	Roller	84	Roller	93	Roller
76	Roller	85	Roller	94	Roller
77	Roller	86	Roller	95	Roller
78	Roller	87	Roller	96	Roller
79	Roller	88	Roller	97	Roller
80	Roller	89	Roller	98	Roller
81	Roller	90	Roller	99	Roller
82	Roller	91	Roller	100	Roller

[Produktkatalog: Elektronik, Spielzeug, Haushalt & mehr](#)

Entdecken Sie eine breite Auswahl an Produkten, darunter Elektronik, Spielzeug, Haushaltswaren und Zubehör. Finden Sie hochwertige Artikel von führenden Marken. lang:en score:9 filesize: 1.47 M page_count: 23 document date: 2019-07-08