

[Manuals.plus](#) /

› [Luis Enrique](#) /

› Luis Enrique Ciclos Audio CD Instruction Manual

Luis Enrique Ciclos

Luis Enrique Ciclos Audio CD Instruction Manual

Comprehensive guide for the Luis Enrique 'Ciclos' Audio CD.

PRODUCT OVERVIEW

The Luis Enrique 'Ciclos' Audio CD is a musical recording featuring various tracks by the artist. This manual provides essential information for its proper use, care, and understanding of its contents.



Image: Front cover of the 'Ciclos' Audio CD, featuring Luis Enrique.

SETUP AND PLAYBACK

To enjoy your 'Ciclos' Audio CD, follow these simple steps:

1. **Unpack:** Carefully remove the Audio CD from its packaging.
2. **Inspect:** Check the disc surface for any visible scratches or dust.
3. **Insert:** Place the CD into a compatible audio player (e.g., CD player, car stereo, computer CD/DVD drive) with the label side facing up.
4. **Play:** Select the CD input on your audio player and press the 'Play' button.

Compatible devices include any standard Audio CD player, DVD player with CD playback capability, or computer with a CD/DVD drive.

OPERATING YOUR AUDIO CD

Once the CD is loaded and playing, you can use your audio player's controls to navigate the tracks:

- **Play/Pause:** Start or temporarily stop playback.
- **Skip Track:** Move to the next or previous track.
- **Fast Forward/Rewind:** Scan through a track.

Tracklist

The 'Ciclos' Audio CD features the following tracks:

1. Yo no sé mañana (pop) 3:51
2. Cómo volver a ser feliz 4:11
3. Sonríe 4:14
4. Sombras nada más 4:27
5. Parte de este juego 4:02
6. No me des la espalda 4:41
7. Autobiografía 4:34
8. Cambia 4:59
9. Inocencia 4:19
10. Abre tus ojos 3:47
11. Yo no sé mañana (salsa) 4:19



Image: Back cover of the 'Ciclos' Audio CD, detailing the tracklist and other information.

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Audio CD, follow these care guidelines:

- **Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Cleaning:** If the CD becomes dirty, gently wipe the playback surface with a soft, lint-free cloth in a straight line from the center to the outer edge. Do not use abrasive materials or harsh chemicals.
- **Avoid Scratches:** Be careful not to drop the CD or slide it across rough surfaces, as scratches can affect playback quality.

TROUBLESHOOTING COMMON ISSUES

If you encounter problems while playing your Audio CD, consider the following solutions:

- **Disc Skipping or Freezing:**
 - Clean the disc surface as described in the 'Care and Maintenance' section.
 - Ensure the CD player is on a stable surface to prevent vibrations.
 - Try playing the disc in a different CD player to determine if the issue is with the disc or the player.
- **Disc Not Playing:**
 - Verify the disc is inserted correctly with the label side facing up.
 - Check if the CD player is powered on and properly connected.
 - Ensure the player's input source is set to CD.
- **Poor Sound Quality:**
 - Check audio cable connections to your speakers or headphones.
 - Adjust volume levels on both the player and your audio output device.
 - Clean the disc surface.

PRODUCT SPECIFICATIONS

ASIN	B002S2NN2K
Publisher	Bertus
Publication Date	August 17, 2010
Language	English
Item Weight	2.83 ounces

WARRANTY AND SUPPORT INFORMATION

For information regarding warranty, returns, or additional support for the 'Ciclos' Audio CD, please refer to the retailer's purchase policy or contact the publisher, Bertus, directly. Specific warranty details for media products typically vary by region and vendor.

For further inquiries, you may visit the artist's official website or the publisher's support channels.