

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Technivorm Moccamaster](#) /

› [Technivorm Moccamaster 79112 KBT Coffee Brewer, 40 oz, Polished Silver Instruction Manual](#)

Technivorm Moccamaster 79112

Technivorm Moccamaster 79112 KBT Coffee Brewer Instruction Manual

Model: KBT (79112)

Brand: Technivorm Moccamaster

1. PRODUCT OVERVIEW

The Technivorm Moccamaster KBT Coffee Brewer is designed to deliver exceptional coffee brewing with precision and durability. It features a thermal carafe and a manual-adjust, drip-stop brew-basket, allowing for customized coffee flow. This brewer is capable of brewing a full 40oz pot of coffee in approximately six minutes, with the thermal carafe designed to keep coffee hot for an extended period.

Key Features:

- **Optimal Brewing Temperature:** Brews coffee at the ideal temperature range for optimal extraction.
- **Thermal Carafe:** Stainless steel thermal carafe keeps coffee hot for hours.
- **Manual Drip-Stop Brew-Basket:** Allows adjustment of coffee flow into the carafe.
- **Fast Brewing:** Brews a full 40oz (10-cup) pot in 4-6 minutes.
- **Durable Construction:** Sturdy and well-made for long-term use.
- **SCA Certified:** Recognized by the Specialty Coffee Association for quality brewing.



Figure 1: Technivorm Moccamaster KBT Coffee Brewer (Polished Silver).

2. SETUP

Before first use, rinse all removable parts with warm water and mild detergent. Ensure the brewer is placed on a flat, stable surface near a power outlet.

1. **Place the Thermal Carafe:** Position the thermal carafe securely on the heating plate.
2. **Insert Brew Basket:** Place the brew basket into its designated slot above the carafe.
3. **Add Filter:** Insert a #4 cone-shaped paper filter (or reusable filter) into the brew basket.

4. **Add Coffee Grounds:** Measure your desired amount of coffee grounds into the filter. For optimal results, use approximately 2 tablespoons of coffee per 6 ounces of water.
5. **Fill Water Reservoir:** Open the water reservoir lid and fill the reservoir with fresh, cold water up to the desired measurement mark. The reservoir has markings for 2, 4, 6, 8, and 10 cups (40 oz).



Figure 2: Filling the water reservoir with fresh water.

3. OPERATING INSTRUCTIONS

Once set up, brewing coffee is a simple one-button operation.

1. **Adjust Drip-Stop:** On the brew basket, adjust the drip-stop lever to your desired setting:
 - **Full Open (circle icon):** For a standard brew, allowing full flow.
 - **Half Drip (half-filled circle icon):** Slows down the flow for increased saturation, ideal for smaller batches or stronger coffee.
 - **Closed (X icon):** Stops the flow completely, useful for pre-infusion or when removing the carafe mid-brew.
2. **Power On:** Press the power switch located on the base of the brewer. The indicator light will illuminate.
3. **Brewing Process:** The brewer will rapidly heat the water and begin dispensing it over the coffee grounds. The brewing process typically takes 4-6 minutes.
4. **Coffee Ready:** Once all the water has passed through, the brewing process is complete. The thermal carafe will keep your coffee hot.



Figure 3: The coffee brewer in operation.

4. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your Moccamaster brewer.

- **Daily Cleaning:** After each use, discard the used coffee filter and grounds. Rinse the brew basket and thermal carafe with warm water.
- **Deep Cleaning (Monthly):**
 - Disassemble all removable parts: water reservoir lid, brew basket, brew basket lid, 9-hole outlet arm, and thermal carafe.
 - Wash these parts with warm, soapy water. Avoid abrasive cleaners.
 - For the thermal carafe, use a bottle brush to clean the interior thoroughly.
 - Rinse all parts thoroughly and allow them to air dry completely before reassembling.

- **Descaling (Every 3-6 Months):** To prevent mineral buildup, descale your brewer regularly using a descaling solution specifically designed for coffee makers. Follow the descaling product's instructions.



Figure 4: Removable parts for cleaning and maintenance.

5. TROUBLESHOOTING

If you encounter issues with your Moccamaster brewer, refer to the following common solutions:

Problem	Possible Cause	Solution
Brewer not turning on	Not plugged in; Power switch off	Ensure power cord is securely plugged into a working outlet; Flip the power switch to ON.
Coffee not brewing or slow drip	Drip-stop lever is closed; Mineral buildup	Adjust the drip-stop lever to the open position; Descale the brewer.
Coffee tastes weak or too strong	Incorrect coffee-to-water ratio; Grind size too coarse/fine	Adjust coffee grounds amount (approx. 2 tbsp per 6 oz water); Experiment with finer/coarser grind.
Water not heating	Heating element issue	Ensure proper power supply. If problem persists, contact customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Technivorm Moccamaster
Model Name	KBT
Item Model Number	79112
Color	Polished Silver

Feature	Detail
Product Dimensions	6.75"D x 11.5"W x 15.25"H
Item Weight	6.5 pounds
Coffee Maker Type	Drip Coffee Machine
Carafe Type	Thermal (Stainless Steel)
Capacity	40 oz / 10 cups
Voltage	120 Volts
Operation Mode	Manual
Filter Type	Reusable (or #4 cone paper filters)

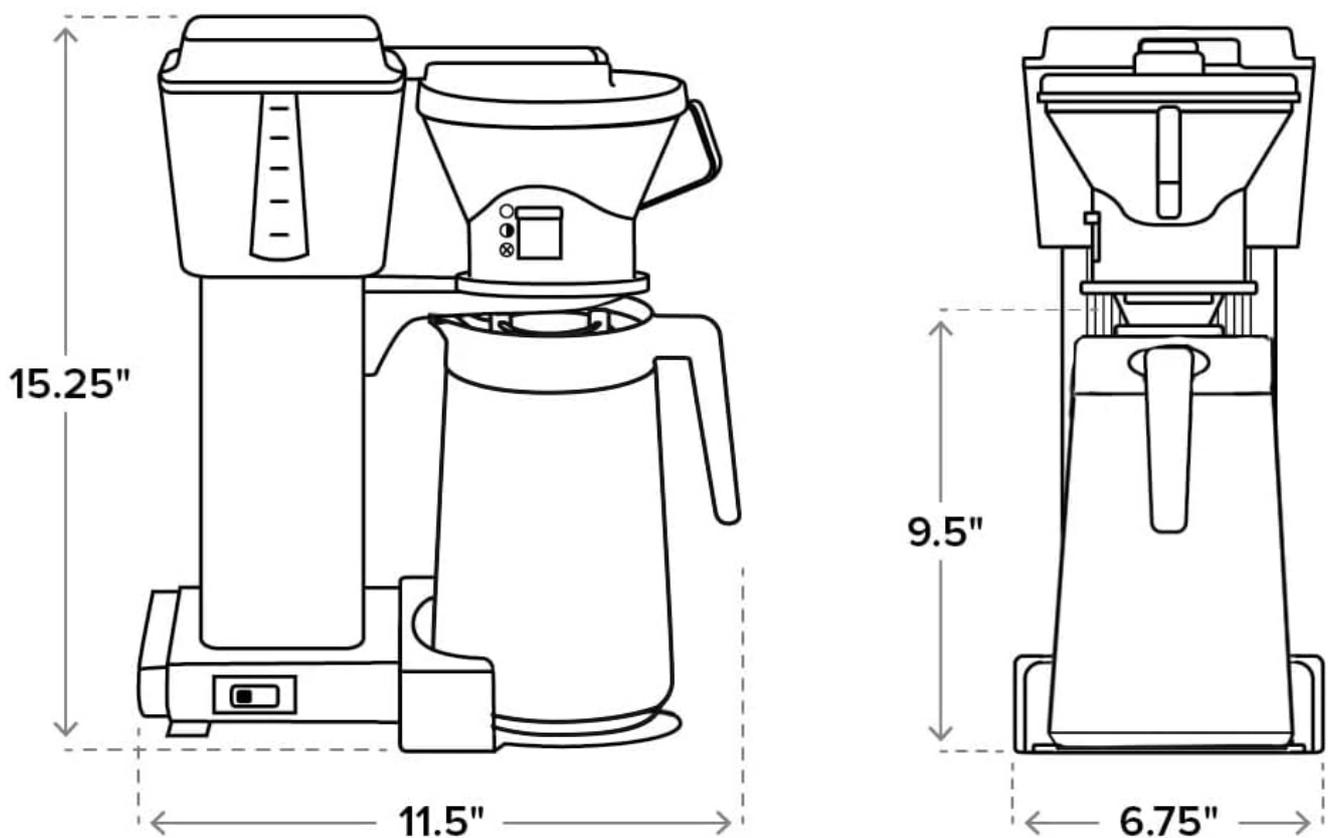


Figure 5: Product dimensions.

7. WARRANTY & SUPPORT

The Technivorm Moccamaster KBT Coffee Brewer is backed by an industry-leading 5-year warranty, ensuring peace of mind and long-term reliability.

Additional Resources:

- **User Guide (PDF):** [Download User Guide](#)
- **User Manual (PDF):** [Download User Manual](#)

For further assistance or warranty claims, please refer to the contact information provided in your official user manual or visit the Technivorm Moccamaster official website.