

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Zeppelin](#) /

› [GRAF Zeppelin Chronograph and Alarm Watch Model 7680-2 Instruction Manual](#)

## Zeppelin 7680-2

# GRAF Zeppelin Chronograph and Alarm Watch

## MODEL 7680-2 INSTRUCTION MANUAL

---

### Introduction

---

This manual provides detailed instructions for the proper use and care of your Zeppelin Chronograph and Alarm Watch, Model 7680-2. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

The Zeppelin 7680-2 is a sophisticated watch featuring chronograph and alarm functions, housed in a durable stainless steel case with a mineral glass window and a leather strap. It is water resistant up to 5 bar.

### Product Overview

---



**Figure 1:** Front view of the Zeppelin Chronograph and Alarm Watch, Model 7680-2. This image displays the watch face with its black dial, three sub-dials for chronograph and alarm functions, and the date window. The watch features a stainless steel case and a black leather strap with white stitching.

Key features of your Zeppelin 7680-2 watch include:

- Protective Mineral Glass Window Lens

- Round Stainless Steel Case
- Leather Strap with Buckle
- Water Resistant to 50 metres (5 ATM)
- Integrated Stopwatch (Chronograph) Function
- Alarm Function

## Setup

---

### 1. Setting the Time

1. Pull the crown (main knob on the side) out to position 2.
2. Turn the crown to set the hour and minute hands to the correct time.
3. Push the crown back into position 0.

### 2. Setting the Date

1. Pull the crown out to position 1.
2. Turn the crown clockwise or counter-clockwise (depending on the movement) to set the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
3. Push the crown back into position 0.

### 3. Battery Information

This watch requires 1 Lithium Metal battery. Battery replacement should be performed by a qualified watch technician to ensure water resistance is maintained.

## Operating Instructions

---

### 1. Using the Chronograph (Stopwatch)

The chronograph function allows for precise timing of events.

1. **Start:** Press the upper pusher (button) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be displayed on the sub-dials.
3. **Reset:** Press the lower pusher to reset the chronograph hands to their zero positions.
4. **Split Time (if applicable):** Some chronographs allow for split time measurement. Consult the specific movement's manual for advanced functions.

### 2. Using the Alarm Function

The alarm function can be set to sound at a specific time.

1. **Set Alarm Time:** Pull the crown out to position 1. Use the lower pusher to advance the alarm hand to the desired alarm time.
2. **Activate Alarm:** Push the crown back to position 0. The alarm is now set.
3. **Deactivate Alarm:** To turn off the alarm, pull the crown out to position 1 and then push it back to position 0, or press the upper pusher when the alarm sounds.



**Figure 2:** The Zeppelin 7680-2 watch displaying its luminous hands and hour markers in a dimly lit environment. This feature enhances readability in low-light conditions.

### 3. Water Resistance Guidelines

Your watch is water resistant up to 50 meters (5 ATM). This means it is suitable for everyday use, including showering and swimming in shallow water. It is **not** suitable for diving or prolonged submersion.

- Do not operate the crown or pushers while the watch is wet or submerged.
- Ensure the crown is fully pushed in before exposing the watch to water.
- Avoid exposing the watch to hot water or steam, as this can compromise the seals.

## Maintenance

---

### 1. Cleaning

Wipe the watch case and crystal with a soft, dry cloth. For the leather strap, use a slightly damp cloth and mild soap if necessary, then dry thoroughly. Avoid harsh chemicals or abrasive materials.

### 2. Strap Care

Leather straps can be affected by moisture, sweat, and direct sunlight. To prolong the life of your strap, avoid prolonged exposure to these elements. If the strap becomes wet, allow it to air dry naturally, away from direct heat.

### 3. Battery Replacement

When the battery needs replacement, the watch hands may stop or the chronograph function may become erratic. It is recommended to have the battery replaced by an authorized service center to maintain the watch's water resistance and ensure proper function.

## Troubleshooting

---

- **Watch Not Running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.

- **Time Inaccurate:** Ensure the time is set correctly. Extreme temperatures or strong magnetic fields can affect accuracy.
- **Chronograph Hands Not Resetting to Zero:** This may require a chronograph reset procedure. Consult a watch technician if the issue persists after a battery change.
- **Date Not Changing:** Ensure the date is not set during the prohibited hours (9 PM - 3 AM). If the issue persists, manual adjustment may be required.

## Specifications



**Figure 3:** Rear view of the Zeppelin 7680-2 watch, highlighting the stainless steel case back. Engravings include "WATER RESISTANT 5 ATM", "ALL STAINLESS STEEL", "ZEPPELIN 100 Jahre", "MADE IN GERMANY", and the model number "7680-2".

Feature	Detail
Model Number	7680-2
Brand	Zeppelin
Case Material	Stainless Steel

Crystal Material	Mineral Glass
Case Diameter	Approx. 42 mm
Case Height	Approx. 13.3 mm
Water Resistance	5 ATM (50 meters / 165 feet)
Strap Material	Leather
Clasp Type	Tang Buckle
Battery Type	1 Lithium Metal battery
Product Dimensions	7.87 x 5.91 x 3.94 inches (packaging); 3.53 ounces

## Warranty and Support

---

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Zeppelin website. Keep your proof of purchase for any warranty claims.

If you experience any issues not covered in this manual, please contact an authorized Zeppelin service center or your retailer for assistance.