

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Haier](#) /

› [Haier HUF168PB Full-Size Frost-Free Freezer User Manual](#)

Haier HUF168PB

Haier HUF168PB Full-Size Frost-Free Freezer User Manual

Model: HUF168PB

[Safety Information](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your Haier HUF168PB Full-Size Frost-Free Freezer. Please read this manual thoroughly before using your appliance to ensure safe and efficient operation. Keep this manual for future reference.



Image: Exterior view of the Haier HUF168PB Full-Size Frost-Free Freezer. This image shows the appliance's overall design, including the door handle and white finish.

IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your freezer, follow these basic precautions:

- Read all instructions before using the appliance.
- **DANGER:** Risk of child entrapment. Before you throw away your old refrigerator or freezer, take off the doors. Leave the shelves in place so that children may not easily climb inside.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Connect to properly grounded outlets only.
- Do not repair or replace any part of the freezer or attempt any servicing unless specifically recommended in this manual.
- Unplug the freezer before cleaning or making repairs.
- Ensure proper ventilation around the appliance.

SETUP AND INSTALLATION

Unpacking

Remove all packaging materials, including foam and adhesive tape. Inspect the freezer for any damage during transit. Keep packaging materials out of reach of children.

Location and Leveling

Place the freezer on a strong, level floor. Ensure there is adequate space around the freezer for proper air circulation (at least 4 inches on sides and back, 12 inches at the top). Avoid direct sunlight or heat sources. The freezer is equipped with casters for easier movement; ensure they are locked or the unit is stable once positioned. Level the freezer by adjusting the leveling legs if necessary to prevent vibrations and ensure proper door sealing.

Electrical Connection

Connect the freezer to a dedicated, grounded 115V, 60Hz AC outlet. Do not use extension cords or adapter plugs. Ensure the electrical circuit is protected with a fuse or circuit breaker.

Door Reversal

The freezer door is reversible, allowing the hinge to be attached on either the left or right side. Refer to the detailed instructions in the separate door reversal guide (if provided) or contact customer support for assistance. This feature provides flexibility for placement in various spaces.

OPERATING INSTRUCTIONS

Initial Startup

After plugging in the freezer, allow it to operate empty for 2-3 hours to reach its operating temperature before loading food. The interior light will illuminate when the door is opened.

Temperature Control

The freezer features an adjustable thermostat control. Locate the thermostat dial, typically inside the freezer compartment. Turn the dial to adjust the temperature setting. A mid-range setting is usually sufficient for most freezing needs. Allow several hours for the temperature to stabilize after making adjustments.

Loading the Freezer

The freezer has a capacity of 16.8 cubic feet, capable of storing approximately 588 lbs. of frozen food. Utilize the 5 door shelves, 3 full-width wire shelves, and 1 slide-out storage basket for organized storage. Distribute food evenly to allow for proper air circulation.

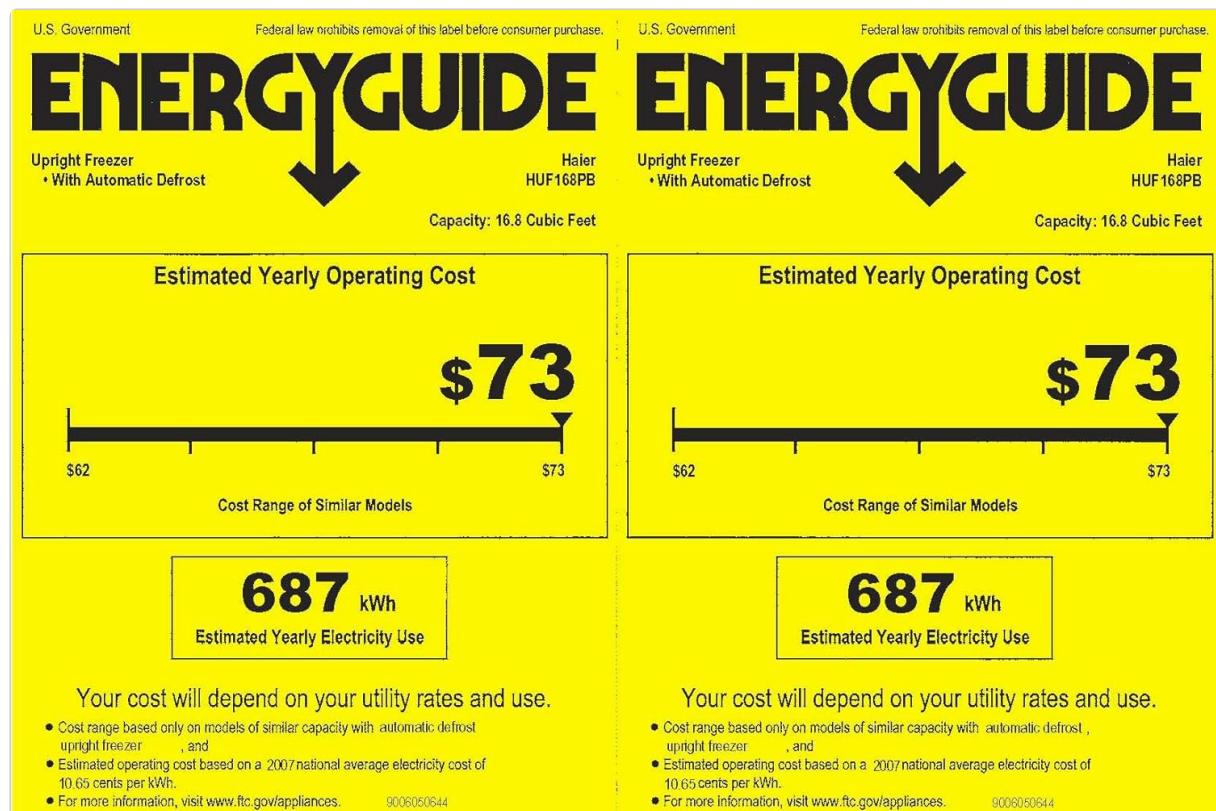


Image: Interior view of the Haier HUF168PB freezer, showing various food items stored on the door shelves, wire shelves, and in the slide-out basket. This illustrates the internal storage configuration.

Security Lock and Key

Your freezer is equipped with a security lock and key. Use this feature to secure the contents of your freezer. Keep the key in a safe place, out of reach of children.

Frost-Free Operation

This freezer is designed with a frost-free system, which automatically prevents ice buildup. Manual defrosting is not required under normal operating conditions.

CARE AND MAINTENANCE

Cleaning the Interior

Unplug the freezer before cleaning. Wash the interior surfaces with a solution of two tablespoons of baking soda to one quart of warm water. Rinse and dry thoroughly. Do not use abrasive cleaners or harsh detergents.

Cleaning the Exterior

Clean the exterior with a mild detergent and warm water. Wipe dry with a soft cloth. For stainless steel models (if applicable), use a stainless steel cleaner. The freezer features a "Never-Clean Condenser," meaning the condenser coils do not require regular cleaning under normal household use.

Power Outage

In case of a power outage, keep the freezer door closed to maintain the internal temperature for as long as possible. Avoid opening the door unnecessarily. If the outage is prolonged, consider transferring food to another freezer or consuming perishable items.

Vacation Care

For short vacations, leave the freezer operating. For long vacations, remove all food, unplug the freezer, clean it, and leave the door ajar to prevent odors and mold growth.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Freezer does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; reset circuit breaker; check household power supply.
Temperature is not cold enough.	Thermostat set too warm; door opened too frequently; large amount of warm food added; poor ventilation.	Adjust thermostat to a colder setting; minimize door openings; allow time for new food to freeze; ensure adequate clearance around freezer.
Excessive noise.	Freezer not level; objects vibrating against the freezer; normal operating sounds.	Level the freezer; ensure nothing is touching the back or sides; gurgling or humming sounds are normal.
Door does not close completely.	Food packages obstructing; gasket dirty or damaged; freezer not level.	Rearrange food; clean or replace gasket; level the freezer.

If the problem persists after checking these solutions, contact qualified service personnel.

PRODUCT SPECIFICATIONS

Model: HUF168PB

Brand: Haier

Capacity: 16.8 Cubic Feet

Approximate Food Storage: 588 lbs.

Defrost Type: Automatic (Frost-Free)

Installation Type: Freestanding

Color: White

Item Weight: 194 pounds

Product Dimensions (W x D x H): 31.31 x 33.31 x 62.81 inches (79.5 x 84.6 x 159.5 cm)

Material Type: Steel

Shelves: 3 Full-Width Wire Shelves

Door Storage: 5 Door Shelves

Additional Storage: 1 Slide-Out Storage Basket

Features: Interior Light, Security Lock and Key, Adjustable Thermostat Control, Reversible Door, Casters Included, Never-Clean Condenser, UL Commercial Rated.

WARRANTY AND CUSTOMER SUPPORT

Warranty Information

This product comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, service inquiries, or to order replacement parts, please contact Haier customer support. Contact information can typically be found on the manufacturer's website or in your warranty documentation. When contacting support, please have your model number (HUF168PB) and serial number ready.