

GE 15077

GE 7-Day Programmable Power Strip User Manual

Model: 15077

INTRODUCTION

This user manual provides detailed instructions for the operation, programming, and maintenance of your GE 7-Day Programmable Power Strip. This device is designed to automate the power supply to various electronic devices and appliances, offering convenience and energy efficiency through its timed and always-on outlets.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of electric shock, fire, or injury:

- For indoor use only. Do not expose to rain or water.
- Do not exceed electrical ratings: 15 Amps, 1800 Watts, 120 VAC.
- Fully insert plug into outlet.
- Do not use with appliances that require continuous supervision, such as coffee makers, toasters, or heaters.
- Do not connect to another relocatable power tap.
- Keep children away from the power strip and outlets.
- Unplug the power strip from the wall outlet before cleaning.

PACKAGE CONTENTS

- GE 7-Day Programmable Power Strip
- User Manual

PRODUCT FEATURES AND COMPONENTS

The GE 7-Day Programmable Power Strip features a robust design with both timed and always-on outlets, controlled by an integrated digital timer. The unit is equipped with a digital display and intuitive buttons for easy programming.





Image: The GE 7-Day Programmable Power Strip, showcasing its digital timer and eight grounded outlets.



Image: A detailed view of the power strip's outlets, indicating the four timed outlets on the left and four always-on outlets on the right. Each outlet features a twist-to-lock safety cover.



3ft. cord length



Daily or weekly settings



Twist-to-lock safety covers



Backup battery saves settings



SAVE ENERGY, SAVE MONEY

Image: A diagram illustrating the power strip's features, including its 3-foot cord, 7-day programming capability, twist-to-lock safety covers, and a backup battery to preserve settings during power outages.

Key Components:

- **Digital Display:** Shows current time, day, and program status.
- **Control Buttons:** CLK (Clock), MODE, PRG (Program), DAY, HOUR, MIN for setting and programming.
- **Timed Outlets (4):** Located on the left side, these outlets are controlled by the digital timer.
- **Always-On Outlets (4):** Located on the right side, these outlets provide continuous power, independent of the timer.
- **Reset Button:** Resets the unit to factory defaults.
- **Twist-to-Lock Safety Covers:** Protect unused outlets.
- **Backup Battery:** Maintains programmed settings during power interruptions.

SETUP

1. Initial Setup and Battery Activation

Before first use, locate the battery compartment on the back of the unit. Remove any plastic pull-tabs to activate the internal backup battery. This battery preserves your programmed settings in case of a power outage.

2. Setting the Clock

1. Press and hold the **CLK** button.
2. While holding **CLK**, press the **DAY** button repeatedly until the correct day of the week is displayed.
3. While holding **CLK**, press the **HOUR** button repeatedly to set the correct hour (note AM/PM).
4. While holding **CLK**, press the **MIN** button repeatedly to set the correct minute.
5. Release the **CLK** button. The clock is now set.

3. Connecting Devices

Plug the power strip into a standard 120V wall outlet. Connect devices you wish to control with the timer to the four timed outlets on the left side. Connect devices requiring continuous power to the four always-on outlets on the right side. Ensure all plugs are fully inserted.

OPERATING INSTRUCTIONS

Understanding Operating Modes

The power strip has several operating modes, cycled by pressing the **MODE** button:

- **ON:** All timed outlets are continuously ON.
- **OFF:** All timed outlets are continuously OFF.
- **AUTO:** Timed outlets operate according to your programmed ON/OFF settings. This is the standard mode for automated operation.
- **RANDOM:** Timed outlets turn ON and OFF randomly within a set period, providing a security feature.

Programming ON/OFF Times

The power strip allows for up to 8 ON/OFF programs. Each program controls all four timed outlets simultaneously.

Program 1

ON at 6:30 P.M.,
OFF at 10:00 P.M.,
Monday — Friday



Program 1 ON



Program 1 OFF

Program 2

ON at 4:15 A.M.,
OFF at 2:15 P.M.,
every Sunday



Program 2 ON



Program 2 OFF

UP TO 8 ON/OFF PROGRAMS

Image: Visual examples of how to set Program 1 (ON at 6:30 PM, OFF at 10:00 PM, Monday-Friday) and Program 2 (ON at 4:15 AM, OFF at 2:15 PM, every Sunday).

1. Press the **PRG** button once to enter Program 1 ON setting. The display will show "1 ON".
2. Press **DAY** repeatedly to select the desired day(s) for this program (e.g., MO, TU, WE, TH, FR, SA, SU, or combinations like MO-FR, SA-SU, MO-SA, etc.).
3. Press **HOUR** to set the ON hour.
4. Press **MIN** to set the ON minute.
5. Press **PRG** again to enter Program 1 OFF setting. The display will show "1 OFF".
6. Repeat steps 2-4 to set the OFF time and day(s) for Program 1.
7. Continue pressing **PRG** to cycle through Program 2 ON/OFF, Program 3 ON/OFF, up to Program 8 ON/OFF.
8. After setting all desired programs, press the **MODE** button until "AUTO" is displayed. This activates your programmed settings.

Manual Override

While in AUTO mode, pressing the**MODE** button will cycle through ON, OFF, AUTO, and RANDOM modes. This allows for temporary manual control of the timed outlets without erasing programmed settings. To return to automated operation, press **MODE** until "AUTO" is displayed.

Using Always-On Outlets

The four outlets on the right side of the power strip are always active when the power strip is plugged into a live wall outlet. These outlets are not affected by the digital timer's settings and are suitable for devices that require continuous power.

MAINTENANCE

- **Cleaning:** Unplug the power strip from the wall outlet before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or abrasive chemicals.
- **Storage:** When not in use, store the power strip in a cool, dry place away from direct sunlight and moisture.
- **Battery Replacement:** If the display becomes dim or settings are lost frequently during power interruptions, the internal backup battery may need replacement. Refer to the manufacturer's guidelines for battery type and replacement procedure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Timed outlets are not turning ON/OFF as programmed.	Unit is not in AUTO mode. Incorrect program settings.	Press the MODE button until "AUTO" is displayed. Double-check all ON/OFF times and selected days for your programs. Ensure the plastic pull-tab for the backup battery was removed.
Display is blank or dim.	Power strip is unplugged or not receiving power. Backup battery is low or dead.	Ensure the power strip is securely plugged into a live wall outlet. Replace the internal backup battery if necessary.
Cannot set the clock or programs.	Buttons not being pressed correctly. Unit needs a reset.	Ensure you are holding the CLK button while setting time, or pressing PRG to enter programming mode. Press the RESET button with a pointed object (e.g., pen tip) to clear all settings and try again.
Devices plugged into always-on outlets are not working.	Power strip is not receiving power. Device is faulty.	Check if the power strip is plugged in and the wall outlet is live. Test the device in another known working outlet.

SPECIFICATIONS

Feature	Detail
Model Number	15077
Product Dimensions	1 x 5 x 11 inches (2.54 x 12.7 x 27.94 cm)
Item Weight	1.12 pounds (0.51 kg)
Total Power Outlets	8 (4 Timed, 4 Always On)
Voltage	120 Volts AC
Current Rating	15 Amps
Power Rating	1800 Watts
Cord Length	3 feet (0.91 meters)
Color	Black



36.0"
(91.44cm)

11.0"
(27.94cm)

5.0"(12.7cm)

1.0"(2.54cm)

Image: Detailed dimensions of the GE programmable power strip, showing length, width, and thickness in both inches and centimeters.

WARRANTY AND SUPPORT

This GE product is manufactured by Jasco Products Company, LLC. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or visit the official GE or Jasco Products Company website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question