

Kerbl 2998

Kerbl Electric Insect Killer Model 2998 User Manual

1. INTRODUCTION

Thank you for purchasing the Kerbl Electric Insect Killer Model 2998. This device is designed to effectively control flying insects in indoor environments. Please read this manual carefully before installation and operation to ensure safe and efficient use of the product. Keep this manual for future reference.

The Kerbl Electric Insect Killer Model 2998 is an electrical insect and fly killer, also referred to as Model 2138, and is CE certified. It features low energy consumption, operating at a maximum of 40 watts, suitable for areas up to 200 m². Constructed from lightweight aluminum, it is designed to be effective and practical.

2. SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in electric shock, fire, or serious injury.

- This appliance is for indoor use only. Do not use outdoors or in wet conditions.
- Keep out of reach of children and pets.
- Do not insert fingers or any other objects into the device while it is connected to power.
- Always unplug the device before cleaning or performing any maintenance.
- Do not use near flammable liquids or gases.
- Ensure the voltage rating on the device matches your local power supply.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Do not attempt to repair or modify the device yourself. Contact qualified service personnel.

3. SETUP AND INSTALLATION

The Kerbl Electric Insect Killer Model 2998 is designed for easy setup. Follow these steps for optimal performance:

1. **Unpacking:** Carefully remove the device from its packaging. Inspect for any damage during transit.

2. Placement:

- Place the insect killer in a central location within the area to be protected, away from direct sunlight and strong air currents.
- For best results, position the device at a height of 1.5 to 2 meters (5 to 6.5 feet) from the floor.
- Ensure there is a clear path for insects to fly towards the device.
- Do not place the device directly above food preparation areas.

3. **Power Connection:** Plug the power cord into a standard electrical outlet. Ensure the outlet is easily accessible.

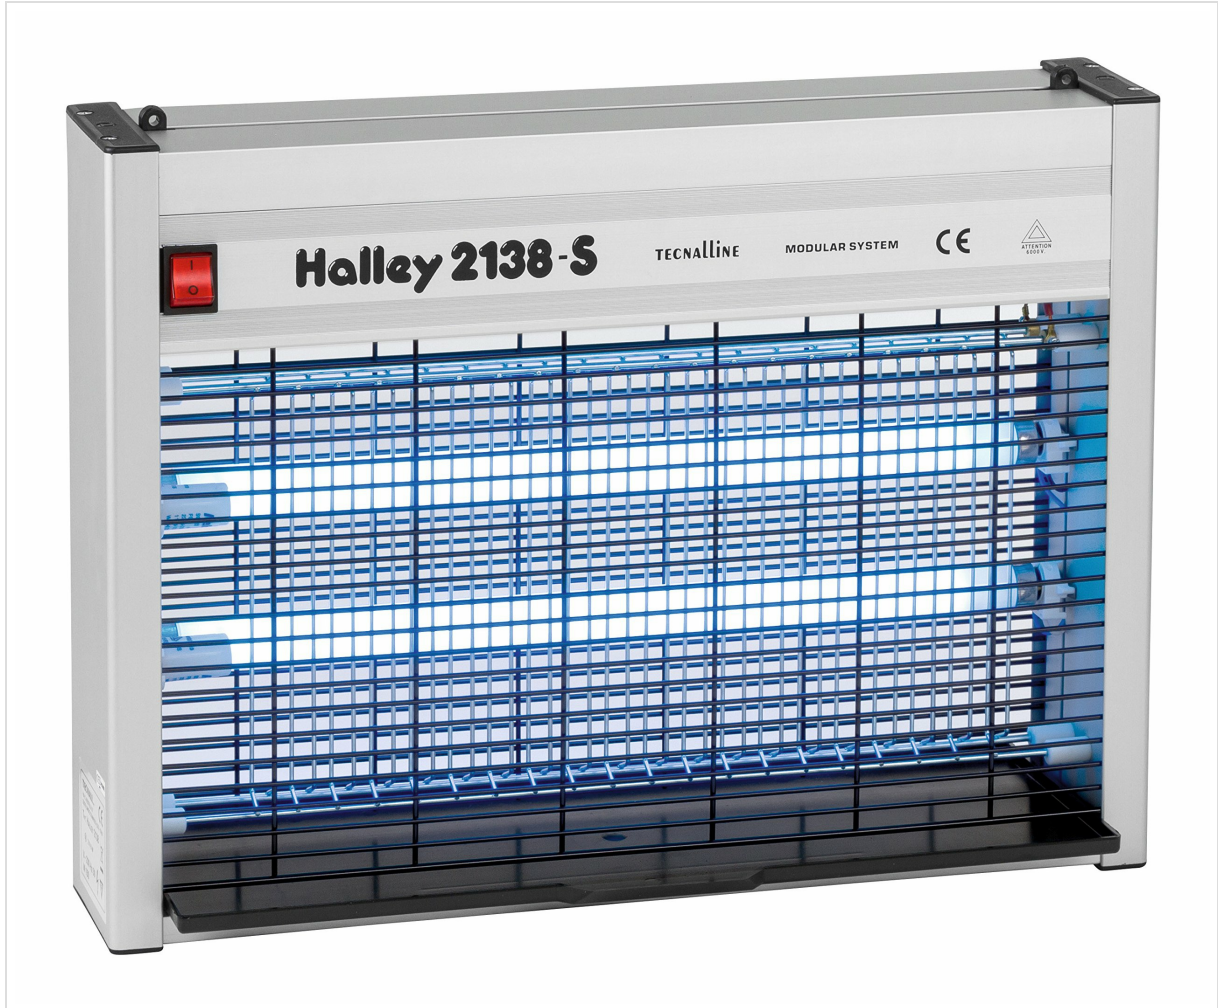


Figure 1: Kerbl Electric Insect Killer Model 2998. This image shows the overall design of the insect killer, highlighting its compact and functional structure.

4. OPERATING INSTRUCTIONS

Operating the Kerbl Electric Insect Killer is straightforward:

1. **Power On:** Once plugged in, the device will automatically turn on, and the UV lamps will illuminate.
2. **Operation:** The UV lamps attract flying insects, which are then eliminated upon contact with the electrified grid.
3. **Continuous Use:** For best results, operate the insect killer continuously during periods of high insect activity.
4. **Power Off:** To turn off the device, simply unplug it from the electrical outlet.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your insect killer.

- **Cleaning the Collection Tray:**

- Always unplug the device before cleaning.*
- Locate the removable collection tray at the bottom of the unit.
- Slide out the tray and empty the collected insects.
- Clean the tray with a damp cloth and mild detergent if necessary. Ensure it is completely dry before reinserting.

- **Cleaning the Grid:**

- Ensure the device is unplugged and has been off for at least 5 minutes to allow any residual charge to dissipate.*
- Use a small, non-metallic brush (e.g., a soft paintbrush) to gently remove any insect debris from the electrified grid.
- Do not use water or cleaning solutions directly on the grid.

- **Lamp Replacement:**

The UV lamps have a limited lifespan and their effectiveness diminishes over time, even if they still light up. Replace lamps annually for optimal performance.

- Unplug the device and allow it to cool down.*
- Refer to the specific lamp replacement instructions provided with your replacement lamps or consult the manufacturer's website.
- Handle new lamps carefully, avoiding touching the glass directly with bare hands.

6. TROUBLESHOOTING

If you encounter issues with your Kerbl Electric Insect Killer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Not plugged in. Power outlet malfunction. Damaged power cord. Blown fuse/tripped circuit breaker.	Ensure the device is securely plugged into a working outlet. Test the outlet with another appliance. Inspect the power cord for damage. If damaged, contact customer support. Check your home's fuse box or circuit breaker.
Lamps are on, but no insects are being killed.	Grid is dirty or obstructed. Lamps are old and less effective. Device placement is not optimal.	Unplug the device and clean the grid as per maintenance instructions. Replace the UV lamps (refer to Maintenance section). Relocate the device to a more central and unobstructed position.

Problem	Possible Cause	Solution
Device makes a buzzing sound.	Normal operation (high voltage grid). Large insect caught in grid.	A slight buzzing is normal. Unplug the device and carefully remove any large insect debris from the grid using a non-metallic brush.

If the problem persists after trying these solutions, please contact Kerbl customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	2998 (also referred to as Model 2138)
Brand	Kerbl
Material	Aluminum
Power Consumption	Max. 40 Watts
Effective Area	Up to 200 m ²
Product Weight	7550 Grams
Electrical	Yes

8. WARRANTY AND SUPPORT

Kerbl products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Kerbl website. Keep your proof of purchase for any warranty claims.

For technical support, spare parts, or service inquiries, please contact Kerbl customer service through their official channels. Contact information can typically be found on the product packaging or the manufacturer's website.