

[Manuals.plus](#) /

› [Calvin Klein](#) /

› Calvin Klein K7731120 Men's Quartz Chronograph Watch User Manual

Calvin Klein K7731120

Calvin Klein K7731120 Men's Quartz Chronograph Watch User Manual

Model: K7731120

INTRODUCTION

This manual provides essential instructions for the proper use, setup, and maintenance of your Calvin Klein K7731120 Men's Quartz Chronograph Watch. Please read this guide thoroughly to ensure optimal performance and longevity of your timepiece.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Calvin Klein K7731120 watch.



Figure 1: Front View. This image displays the watch face, including the silver dial, hour markers, hands, and chronograph subdials. The watch features a black leather strap with a buckle closure.

- **Crown:** Used for setting the time. Located on the right side of the watch case.
- **Pushers:** Buttons located above and below the crown, used to operate the chronograph functions.
- **Dial:** The watch face displaying time and chronograph measurements.
- **Hands:** Hour, minute, and second hands for timekeeping, plus additional hands for chronograph functions.
- **Subdials:** Smaller dials on the main dial, typically used for chronograph minutes, seconds, or 24-hour display.
- **Strap:** Black leather strap with a tang buckle for secure fastening.



Figure 2: Side View. This image highlights the crown and the two pushers on the right side of the watch case, which are used for time adjustment and chronograph operation.





Figure 3: Case Back. This image shows the stainless steel case back with engravings indicating "all stainless steel", "Calvin Klein", "Swiss made", "sapphire crystal", and "water resistant 30m/100ft".

SETUP

Setting the Time

1. Pull the crown out to position 2 (the outermost position). The second hand will stop.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Once the correct time is set, push the crown back into position 1 (normal operating position). The second hand will resume movement.

Strap Adjustment

The leather strap is equipped with a tang buckle. To adjust, simply insert the pin into the desired hole on the strap to achieve a comfortable and secure fit on your wrist.

OPERATING THE CHRONOGRAPH

Your Calvin Klein K7731120 watch features a chronograph function for measuring elapsed time.

- Starting the Chronograph:** Press the upper pusher (A) to start the chronograph. The chronograph second hand will begin to move.
- Stopping the Chronograph:** Press the upper pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
- Resetting the Chronograph:** After stopping the chronograph, press the lower pusher (B) to reset all chronograph hands to their zero positions.
- Split Time Function (if applicable):** Some chronographs allow for split time measurement. Consult the specific movement manual if this feature is desired and not covered here.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and crystal with a soft, dry cloth. For the leather strap, avoid excessive moisture and harsh chemicals. If the strap becomes wet, allow it to air dry naturally.

Water Resistance

Your watch is water resistant up to 30 meters (3 ATM / 100 feet). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Ensure the crown is fully pushed in before any contact with water.

Battery Replacement

The watch is powered by a quartz movement, requiring a battery. When the battery needs replacement, it is recommended to take your watch to an authorized Calvin Klein service center or a qualified watchmaker to ensure proper sealing and water resistance integrity.

TROUBLESHOOTING

- Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- Incorrect time:** Refer to the "Setting the Time" section to re-adjust the time.
- Chronograph hands not resetting to zero:** This may require a specific calibration procedure. Consult an authorized service center.

SPECIFICATIONS

Feature	Detail
Model Number	K7731120
Movement Type	Quartz
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	41 mm

Feature	Detail
Case Thickness	12 mm
Dial Color	Silver (multi-colour)
Crystal Material	Sapphire Crystal
Band Material	Synthetic (Leather)
Band Width	21 mm
Water Resistance Depth	30 Meters (3 ATM / 100 Feet)
Special Feature	Chronograph
Item Weight	80 Grams

WARRANTY AND SUPPORT

Your Calvin Klein K7731120 watch comes with a manufacturer's warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official Calvin Klein website. For technical support or service inquiries, please contact an authorized Calvin Klein service center.

You can find more information about Calvin Klein watches at their official store: [Calvin Klein Store](#).

