

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Haier](#) /

› [Haier HLP21N Pulsator 1-Cubic-Foot Portable Washer Instruction Manual](#)

Haier HLP21N

Haier HLP21N Pulsator 1-Cubic-Foot Portable Washer Instruction Manual

INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and efficient operation of your Haier HLP21N Pulsator 1-Cubic-Foot Portable Washer. Please read all instructions carefully before use and retain this manual for future reference.

Key Features:

- Portable design with a 1-cubic-foot stainless-steel tub, suitable for loads up to 6 pounds.
- Features 3 water levels and 3 wash cycles, controlled electronically with LED indicators.
- Designed for quiet operation, includes cycle-status lights, an end-of-cycle signal, and an adjustable leveling leg.
- Equipped with smooth-rolling casters for easy mobility and an easy-installation kit with a quick-connect sink adapter.
- Compact dimensions: approximately 17-1/4 inches (D) by 17-3/5 inches (W) by 30 inches (H).

SETUP

Unpacking and Placement:

1. Carefully remove all packaging materials and inspect the washer for any damage.
2. Place the washer on a firm, level surface. Use the adjustable leveling leg to ensure stability and prevent excessive vibration during operation.
3. Attach the smooth-rolling casters to the bottom of the unit for easy movement.

Water Connection:

1. Connect the provided quick-connect sink adapter to your faucet.
2. Attach the water inlet hose from the washer to the quick-connect adapter. Ensure a secure connection to prevent leaks.
3. Position the drain hose into a sink or suitable drain. Ensure the hose is securely placed to prevent it from dislodging during draining.



Image: The Haier HLP21N Portable Washer, shown with its top-loading design and control panel. The unit is white and features casters for mobility. The water inlet and drain hoses are visible, ready for connection to a sink.

OPERATING INSTRUCTIONS

Washing a Load:

- Load Clothes:** Open the top lid and place clothes loosely into the stainless-steel tub. Do not overload the washer; the maximum capacity is 6 pounds. Overloading can lead to unbalanced loads and reduced cleaning performance.
- Add Detergent:** Add the appropriate amount of laundry detergent directly into the tub with the clothes.
- Select Water Level:** Use the electronic controls to select one of the 3 available water levels (High, Medium, Low) based on your load size.
- Select Wash Cycle:** Choose one of the 3 wash cycles using the electronic controls.
- Start Cycle:** Close the lid and press the 'Start' button. The washer will begin to fill with water and agitate.
- Adding Fabric Softener:** If using liquid fabric softener, add it during the rinse cycle. The washer will typically pause or signal when it's time for the rinse water to fill, allowing you to add the softener.

7. **End of Cycle:** The washer will signal when the cycle is complete. Remove clothes promptly to prevent wrinkles.

MAINTENANCE

Cleaning the Washer:

- Regularly wipe down the exterior of the washer with a soft, damp cloth.
- Clean the stainless-steel tub periodically to prevent residue buildup. A washer cleaning tablet or a mixture of vinegar and baking soda can be used for this purpose.
- Inspect the water inlet and drain hoses for any signs of wear or damage. Replace if necessary.

Winterizing (for cold climates):

If the washer will be stored in an unheated area during freezing temperatures, it is important to winterize it to prevent damage from frozen water. Consult your product documentation for specific winterization steps.

TROUBLESHOOTING

Common Issues and Solutions:

- **Thumping Sound / Excessive Vibration:** If you hear a thumping sound or the washer vibrates excessively, the wash load may be unbalanced. Pause the washer and redistribute items evenly in the wash basket.
- **No Power:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household circuit breaker or fuse box.
- **Water Not Filling:** Verify that the water supply faucet is fully open and that the water inlet hose is not kinked or blocked.
- **Water Not Draining:** Check the drain hose for kinks or blockages. Ensure the drain hose is positioned correctly in the sink or drain.
- **Lid Alarm:** If the lid is opened during operation, an alarm will sound. Close the lid to resume the cycle.

For issues not listed here, or if troubleshooting steps do not resolve the problem, please contact Haier customer support.

SPECIFICATIONS

Specification	Detail
Brand Name	Haier
Model Number	HLP21N
Item Weight	43 pounds
Capacity	1 Cubic Feet (approx. 6 pounds of laundry)
Water Consumption	2 Gallons per Flush
Max Spin Speed	1200 RPM
Noise Level	8 Sones
Form Factor	Top-loading
Special Features	Electronic Controls

Color	White
Control Console	Push Button
Standard Cycles	3
Access Location	Top Load
Fuel Type	Electric
Material Type (Tub)	Stainless Steel
Product Dimensions	17.25"D x 17.6"W x 30"H

WARRANTY AND SUPPORT

For detailed warranty information, including coverage periods and terms, please refer to the warranty card or documentation included with your Haier HLP21N Portable Washer at the time of purchase. For customer support, technical assistance, or to inquire about service, please visit the official Haier website or contact their customer service line as provided in your product's packaging.

© 2023 Haier. All rights reserved. Information in this manual is subject to change without notice.