

- Manuals.plus /
- › Lionsgate /
- › Precious DVD Instruction Manual

Lionsgate LGT27239DVD

Precious DVD Instruction Manual

Model: LGT27239DVD

- Setup & Playback
- Operating Instructions
- Care & Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

INTRODUCTION

This manual provides essential instructions for the proper use and care of your Precious DVD. Please read this guide thoroughly to ensure an optimal viewing experience and longevity of your disc.

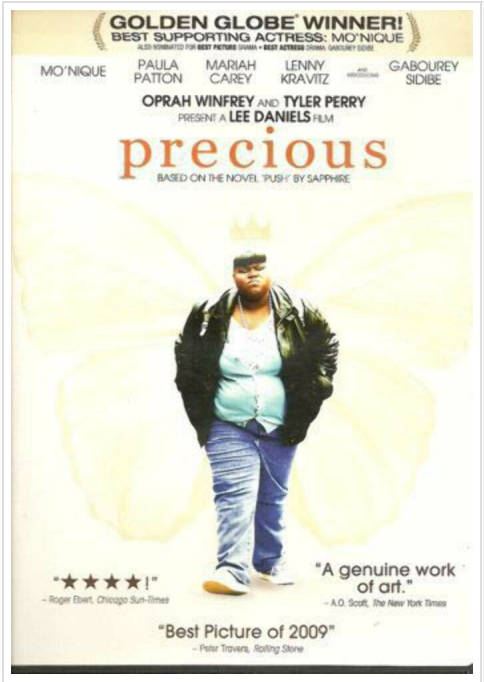


Image: Front cover of the Precious DVD, depicting the main character.

SETUP & PLAYBACK

Follow these steps to set up and play your Precious DVD:

1. **Insert Disc:** Gently insert the Precious DVD into your DVD or Blu-ray player with the label side facing up.
2. **Power On:** Turn on your DVD/Blu-ray player and your television or display device.
3. **Select Input:** Use your TV remote to select the correct input source (e.g., HDMI 1, AV) that your DVD player is connected to.
4. **Automatic Playback:** The DVD should automatically start playing or display the main menu.
5. **Manual Playback:** If the disc does not start automatically, select "Play Movie" or a similar option from the on-screen menu using your player's remote control.

OPERATING INSTRUCTIONS

Navigate the DVD menu and features using your remote control:

- **Main Menu:** Access options such as "Play Movie," "Scene Selection," "Languages," and "Special Features."
- **Scene Selection:** Choose specific chapters or scenes to watch.
- **Languages:** Select your preferred audio track. The DVD supports English audio and French dubbing.
- **Subtitles:** Enable or disable subtitles. Available subtitle languages include English and Spanish.
- **Pause/Play:** Use the **Play** and **Pause** buttons to control playback.
- **Fast Forward/Rewind:** Use the **FF** and **RW** buttons to quickly move through the movie.

CARE & MAINTENANCE

Proper care ensures the longevity and performance of your DVD:

- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole to avoid touching the playing surface.
- **Cleaning:** If the disc becomes dirty, gently wipe the playing surface with a soft, lint-free cloth in a straight line from the center to the outer edge. Do not use abrasive materials or harsh chemicals.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Prevent scratches by keeping the disc in its case when not in use and avoiding contact with rough surfaces.

TROUBLESHOOTING

If you encounter issues while playing your Precious DVD, consider the following solutions:

- **Disc Not Playing:**
 - Ensure the disc is inserted correctly with the label side up.
 - Check if the disc is clean and free of scratches or smudges. Clean if necessary.
 - Verify that your player is compatible with DVD format.
 - Try playing another DVD to confirm your player is functioning correctly.
- **Skipping or Freezing:**
 - Clean the disc thoroughly as described in the "Care & Maintenance" section.
 - Check for visible damage on the disc surface.

- **No Sound or Picture:**
 - Ensure all cables connecting your DVD player to your TV are securely connected.
 - Check your TV's input selection to ensure it matches the input your DVD player is connected to.
 - Verify that your TV's volume is not muted or set too low.

SPECIFICATIONS

Title	Precious
Model Number	LGT27239DVD
Media Format	AC-3, Closed-captioned, Color, Dolby, Multiple Formats, NTSC, Subtitled, Widescreen
Run Time	1 hour and 49 minutes
Release Date	March 9, 2010 (DVD) / November 6, 2009 (Initial Release)
Director	Lee Daniels
Actors	Gabourey Sidibe, Mo'Nique
Studio	Lionsgate
Language	English (Audio), French (Dubbed)
Subtitles	English, Spanish
MPAA Rating	R (Restricted)
Number of Discs	1
Product Dimensions	0.7 x 7.5 x 5.4 inches; 2.72 ounces

WARRANTY & SUPPORT

Information regarding warranty and customer support for this product is not available in the provided data. For any issues or inquiries, please refer to the contact information provided on the DVD packaging or the official Lionsgate website.

© 2010 Lionsgate. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B002VECM4A>

More documents and user manuals: <https://manuals.plus/>