

## Verizon DECT 6.0

# Verizon DECT 6.0 Cordless Phone System User Manual

Model: DECT 6.0

## INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Verizon DECT 6.0 Cordless Phone System. This system includes two handsets and is designed for clear, interference-free communication. Key features include a 4-line backlit LCD on each handset, a 2-way navigation key, a keypad lock, a handset speakerphone, and compatibility with hearing aids.



Image: Two Verizon DECT 6.0 cordless phone handsets, each resting in its respective charging base. The handsets feature a backlit LCD displaying 'J. Smith', '555-555-1234', and 'Quiet'. Keypad buttons for dialing, speakerphone, voicemail, mute, flash, end call, intercom/hold, and redial/pause are visible. The DECT 6.0 logo is present on the left base unit.

## SETUP

### 1. Unpacking

Carefully remove all components from the packaging. Ensure you have the following items: two cordless handsets, two charging cradles, two AC power adapters, one telephone line cord, and this user manual.

### 2. Battery Installation

1. Locate the battery compartment cover on the back of each handset.
2. Slide the cover off.
3. Insert the rechargeable battery pack, ensuring the polarity matches the markings inside the compartment.
4. Replace the battery compartment cover.

### 3. Connecting the Base Unit

1. Plug one end of the telephone line cord into the TEL LINE jack on the back of the main charging cradle.
2. Plug the other end of the telephone line cord into a telephone wall jack.
3. Plug one end of an AC power adapter into the DC IN jack on the back of the main charging cradle.

4. Plug the other end of the AC power adapter into a standard electrical outlet.
5. Repeat step 3 and 4 for the secondary charging cradle, connecting it to an electrical outlet. The secondary cradle does not require a telephone line connection.

## 4. Initial Charging and Handset Registration

Place each handset into its respective charging cradle. The handsets will automatically register with the base unit. Allow the handsets to charge for at least 12-16 hours before initial use to ensure optimal battery performance.

## OPERATING INSTRUCTIONS

### Making a Call

1. Pick up a handset from its cradle or press the **TALK** button.
2. Dial the desired phone number.
3. Press the **END** button to hang up.

### Receiving a Call

When the phone rings, pick up the handset or press the **TALK** button to answer the call.

### Using the Speakerphone

During a call, press the **SPEAKER** button (often indicated by a speaker icon) to activate the speakerphone function. Press it again to return to handset mode.

### Caller ID (CID)

When an incoming call is received, the caller's name and number will be displayed on the 4-line backlit LCD screen, provided you subscribe to Caller ID service from your telephone provider.

### Phonebook / Directory

Your phone system supports a 70 name/number directory. Use the 2-way navigation key (up/down arrows) to scroll through entries. Refer to the detailed manual for adding, editing, and deleting contacts.

### Mute Function

During a call, press the **MUTE** button to temporarily silence your microphone. The other party will not hear you, but you can still hear them. Press **MUTE** again to resume speaking.

### Flash Button

The **FLASH** button is used to answer a call waiting or to transfer a call if you have multiple lines or a PBX system. Consult your telephone service provider for specific usage.

### Redial / Pause

Press the **REDIAL/PAUSE** button to redial the last number called. When entering a number, press **REDIAL/PAUSE** to insert a pause in the dialing sequence.

### Intercom / Hold (Int Hold)

Use the **INT HOLD** button for internal communication between handsets or to place an external call on hold. Refer to the full manual for detailed intercom procedures.

## Voice Mail Access

Press the **VOICE MAIL** button to quickly access your voicemail service. This feature requires a subscription to voicemail service from your telephone provider.

## Keypad Lock

To prevent unintentional dialing, your handset features a keypad lock. Consult the full manual for instructions on how to activate and deactivate this function.

## MAINTENANCE

### Cleaning

Wipe the phone and charging cradles with a soft, slightly damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the phone is unplugged from the power outlet before cleaning.

### Battery Care

- Always use the specified rechargeable battery pack.
- If the handset will not be used for an extended period, remove the battery to prevent leakage.
- Dispose of old batteries responsibly according to local regulations.

## TROUBLESHOOTING

- **No Dial Tone:**

Ensure the telephone line cord is securely connected to both the wall jack and the main charging cradle. Check if the AC power adapter is properly plugged into the main cradle and a working electrical outlet.

- **Handset Not Charging:**

Verify that the handset is correctly seated in the charging cradle. Check the power connection to the charging cradle. Clean the charging contacts on both the handset and the cradle with a dry cloth.

- **Poor Sound Quality / Static:**

Move the handset closer to the main base unit. Avoid placing the base unit near other electronic devices (e.g., microwaves, Wi-Fi routers) that may cause interference. Check the telephone line cord for damage.

- **Display is Blank:**

Ensure the battery is properly installed and charged. Place the handset in the charging cradle for several minutes. If the issue persists, the battery may need replacement.

## SPECIFICATIONS

- **Technology:** DECT 6.0
- **Handsets Included:** 2 (expandable to 6)
- **Caller Identification:** Yes
- **Phonebook Capacity:** 70 name/number directory
- **Display:** 4-line backlit LCD on handset

- **Speakerphone:** Handset speakerphone
- **Conference Call Capability:** 2-way
- **Hearing Aid Compatible:** Yes
- **Package Dimensions:** 9.8 x 7.2 x 3.2 inches
- **Item Weight:** 1.85 pounds
- **UPC:** 827003005517
- **Manufacturer:** Verizon




## WARRANTY AND SUPPORT




For warranty information and technical support, please refer to the documentation included with your purchase or contact Verizon customer service directly. Keep your proof of purchase for warranty claims.

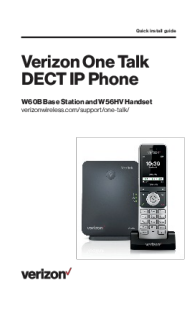

© 2023 Verizon. All rights reserved.

### Related Documents - DECT 6.0

	<p><a href="#">Verizon One Talk DECT IP Phone W60B Base Station and W56HV Handset Quick Install Guide</a></p> <p>Quick installation guide for the Verizon One Talk DECT IP Phone, covering setup, packaging contents, handset registration, and basic operations for the W60B Base Station and W56HV Handset.</p>
	<p><a href="#">One Talk T74LTE Smart Desk Phone Quick Start Guide</a></p> <p>A quick start guide for the Verizon One Talk T74LTE Smart Desk Phone, covering package contents, assembly, device features, basic call operations, customization, and regulatory information.</p>
	<p><a href="#">One Talk T64LTE 4G Desk Phone Quick Start Guide</a></p> <p>A comprehensive quick start guide for the Verizon One Talk T64LTE 4G Desk Phone, detailing package contents, assembly instructions, device features, basic call functions, touch screen usage, control center navigation, and essential safety and regulatory information.</p>

	<p><a href="#">One Talk T77LTE Smart Desk Phone Quick Start Guide</a></p> <p>A quick start guide for the Verizon One Talk T77LTE Smart Desk Phone, covering setup, basic features, customization, and regulatory information.</p>
	<p><a href="#">One Talk T54W IP Desk Phone User Guide</a></p> <p>Comprehensive user guide for the One Talk T54W IP Desk Phone by Verizon, covering setup, basic call functions, advanced features, safety instructions, and technical support.</p>
	<p><a href="#">Fios Digital Voice User Guide</a></p> <p>Comprehensive user guide for Verizon's Fios Digital Voice service, detailing features like call forwarding, voicemail, caller ID, and online management via My Verizon.</p>