

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Rocketfish](#) /
- › [Rocketfish 1080p 4-Port HDMI Switch-Switcher with Remote User Manual](#)

Rocketfish 1080p 4-Port HDMI Switch-Switcher

Rocketfish 1080p 4-Port HDMI Switch-Switcher

USER MANUAL

Introduction

This manual provides instructions for the installation, operation, and maintenance of your Rocketfish 1080p 4-Port HDMI Switch-Switcher. This device allows you to connect up to four HDMI source devices to a single HDMI input on your display, simplifying your home entertainment setup.



Figure 1: Rocketfish 4-Port HDMI Switch-Switcher with included remote control. The switch features multiple HDMI input ports and a single HDMI output port.

Setup

1. **Unpack the Device:** Carefully remove the HDMI switch, remote control, and power adapter from the packaging.
2. **Connect HDMI Output:** Connect one end of an HDMI cable (not included) to the HDMI OUT port on the switch and the other end to an HDMI input port on your television or display.
3. **Connect HDMI Sources:** Connect your HDMI source devices (e.g., Blu-ray player, game console, cable box) to the HDMI IN 1, HDMI IN 2, HDMI IN 3, or HDMI IN 4 ports on the switch using HDMI cables (not included).
4. **Connect Power:** Plug the included power adapter into the DC 5V port on the HDMI switch, then plug the adapter into a standard electrical outlet. The power indicator light on the switch should illuminate.
5. **Power On:** Turn on your television and all connected HDMI source devices. Select the HDMI input on your television that is connected to the HDMI switch.

Operating Instructions

The Rocketfish HDMI switch offers both manual and automatic input switching.

- **Automatic Switching:** The switch is designed to automatically detect and switch to the most recently activated HDMI

source device. If you turn on a device connected to an input, the switch will automatically select that input.

- **Manual Switching (Front Panel):** Press the "SELECT" button on the front panel of the HDMI switch to cycle through the available HDMI input sources (HDMI IN 1, 2, 3, 4). The corresponding LED indicator will light up to show the currently selected input.
- **Manual Switching (Remote Control):** Use the included remote control to directly select an HDMI input. Press the corresponding number button (1, 2, 3, or 4) on the remote to switch to that input. Ensure the remote has working batteries and is pointed towards the front of the HDMI switch.

Maintenance

- **Cleaning:** Disconnect the power adapter before cleaning. Use a soft, dry cloth to wipe the exterior of the switch. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the device for an extended period, disconnect all cables and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Management:** Ensure HDMI cables are not excessively bent or strained, as this can affect signal quality.

Troubleshooting

Problem	Possible Solution
No picture or sound.	<ul style="list-style-type: none">• Ensure all HDMI cables are securely connected to both the source devices, the switch, and the display.• Verify the HDMI switch is powered on and its power indicator light is illuminated.• Confirm the correct HDMI input is selected on your television.• Try cycling through the inputs on the HDMI switch manually.• Test the HDMI source device by connecting it directly to the television.• Restart the HDMI switch by unplugging and replugging the power adapter.
Picture is distorted or colors are incorrect.	<ul style="list-style-type: none">• Check HDMI cable connections for looseness or damage.• Try a different HDMI cable.• Restart the HDMI switch and source devices.• Ensure your display supports the resolution output by your source device.
Remote control is not working.	<ul style="list-style-type: none">• Ensure there are fresh batteries in the remote control.• Point the remote directly at the front panel of the HDMI switch.• Remove any obstructions between the remote and the switch.
Automatic switching is not functioning.	<ul style="list-style-type: none">• Some source devices may not provide the necessary signal to trigger automatic switching. In such cases, use manual switching via the front panel button or remote control.• Ensure only one source device is active at a time for optimal automatic switching.

Specifications

- **Model:** 1080p 4-Port HDMI Switch-Switcher
- **Brand:** Rocketfish
- **Connector Type:** HDMI
- **Number of Ports:** 4 HDMI Inputs, 1 HDMI Output

- **Supported Resolution:** Up to 1080p
- **Compatible Devices:** Blu-Ray Player, DVD Player, Game Consoles, Cable Boxes, etc.
- **Power:** DC 5V (via included power adapter)
- **ASIN:** B002VL92D2
- **UPC:** 600603122996

Warranty Information

Specific warranty details for this Rocketfish product are typically provided with the original purchase documentation or can be found on the official Rocketfish website. Please refer to those resources for comprehensive warranty terms and conditions.

Customer Support

For technical assistance, troubleshooting beyond this manual, or inquiries regarding your Rocketfish 1080p 4-Port HDMI Switch-Switcher, please visit the official Rocketfish support website or contact their customer service department. Contact information is usually available in the product packaging or on the manufacturer's website.

