

Moen 141002

Moen 141002 Kitchen Faucet Escutcheon Deckplate Instruction Manual

Brand: Moen | **Model:** 141002

1. PRODUCT OVERVIEW

The Moen 141002 Kitchen Faucet Escutcheon Deckplate is designed to provide a clean and finished look for kitchen faucet installations, particularly when converting from a three-hole sink setup to a single-hole faucet. This chrome-finished deckplate effectively covers unused sink holes, ensuring a seamless integration with your countertop and faucet. It is an authentic Moen replacement part, engineered for compatibility and durability.

2. KEY FEATURES

- **Chrome Finish:** Features a highly reflective, mirror-like chrome finish that complements various kitchen decor styles.
- **Authentic Moen Part:** Ensures compatibility and quality as a genuine Moen replacement component.
- **Hole Coverage:** Specifically designed to cover additional, unused holes in the sink or countertop, providing a neat appearance.
- **Easy Installation:** Engineered for straightforward and hassle-free installation.
- **Durability:** Constructed from metal for long-lasting performance.

3. SPECIFICATIONS

Attribute	Detail
Brand	Moen
Model Number	141002

Attribute	Detail
Recommended Uses	Kitchen Faucet Installation
Mounting Type	Deck Mount
Finish Type	Chrome
Material	Metal
Product Dimensions	10.25 x 2.38 x 3.5 inches
Item Weight	2.72 ounces
Installation Type	Single Hole (for faucet, covers 3-hole sink)

4. SETUP AND INSTALLATION

The Moen 141002 Escutcheon Deckplate is designed to simplify the installation of a single-hole kitchen faucet on a sink or countertop that has three pre-drilled holes. It provides a stable and aesthetically pleasing base for your new faucet while concealing the two outer unused holes.

Installation Steps:

- 1. Prepare the Surface:** Ensure the sink or countertop surface around the faucet holes is clean, dry, and free of debris.
- 2. Position the Gasket:** Place the included rubber gasket (seal) directly onto the sink or countertop, aligning its holes with the existing faucet holes. This gasket helps create a watertight seal and protects the surface.
- 3. Place the Deckplate:** Carefully position the Moen 141002 Escutcheon Deckplate on top of the gasket, ensuring the central hole of the deckplate aligns with the central hole of the gasket and the sink. The deckplate should sit flat and cover the two outer holes completely.
- 4. Install the Faucet:** Proceed with the installation of your single-hole kitchen faucet according to its specific instructions. The faucet's mounting hardware will typically pass through the central hole of the deckplate and gasket, securing the entire assembly to the sink or countertop. Ensure the faucet is centered and tightened securely, but do not overtighten, which could damage the deckplate or sink.
- 5. Check for Stability:** After installation, gently test the faucet and deckplate for any wobbling. If loose, re-tighten the faucet's mounting nut from underneath the sink.



Image 1: The Moen 141002 Escutcheon Deckplate (top, chrome) and its accompanying rubber gasket (bottom, white). The gasket is crucial for a proper seal during installation.

5. USAGE AND FUNCTIONALITY

Once installed, the Moen 141002 Escutcheon Deckplate serves a dual purpose: it provides a stable and level mounting surface for your single-hole kitchen faucet, and it aesthetically conceals the two outer holes of a standard three-hole sink or countertop. This creates a streamlined and modern appearance, enhancing the overall look of your kitchen sink area. The deckplate does not require active operation; its function is passive, providing structural support and visual appeal.

6. MAINTENANCE AND CARE

To maintain the pristine chrome finish and extend the life of your Moen 141002 Escutcheon Deckplate, follow these care instructions:

- **Regular Cleaning:** Clean the deckplate regularly with a soft, damp cloth and mild soap. Rinse thoroughly with clean water and dry with a soft towel to prevent water spots.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, scouring pads, ammonia-based cleaners, or any cleaners containing bleach, acids, or harsh chemicals. These can damage the chrome finish and void the warranty.

- **Prevent Water Spots:** In areas with hard water, wipe the deckplate dry after each use to minimize mineral buildup and water spots.
- **Inspect Gasket:** Periodically check the rubber gasket underneath the deckplate for any signs of wear or deterioration. While durable, replacing a worn gasket can prevent potential leaks.

7. TROUBLESHOOTING

If you encounter any issues with your Moen 141002 Escutcheon Deckplate, consider the following common problems and solutions:

- **Water Pooling Around Deckplate:**
 - *Cause:* Improperly seated gasket or insufficient tightening of the faucet.
 - *Solution:* Ensure the rubber gasket is correctly positioned beneath the deckplate. Check that the faucet's mounting nut is securely tightened from underneath the sink, ensuring the deckplate is firmly pressed against the gasket and sink surface.
- **Deckplate Appears Loose or Wobbly:**
 - *Cause:* Faucet mounting nut is not tight enough.
 - *Solution:* Access the underside of the sink and carefully tighten the mounting nut that secures the faucet. This nut typically holds the deckplate in place as well.
- **Finish Discoloration or Damage:**
 - *Cause:* Exposure to harsh chemicals, abrasive cleaning, or prolonged water exposure.
 - *Solution:* Refer to the "Maintenance and Care" section. Avoid using inappropriate cleaning products. For significant damage, replacement may be necessary.

8. WARRANTY AND SUPPORT

The Moen 141002 Kitchen Faucet Escutcheon Deckplate is backed by Moen's One Year Limited Warranty. This warranty covers defects in material and manufacturing under normal use and service.

For detailed warranty information, claims, or technical support, please refer to the official Moen website or contact Moen customer service. When contacting support, please have your product model number (141002) and purchase information readily available.

For more information, you can visit the official Moen store: [Moen Store on Amazon](#).

© 2025 Moen Inc. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question