

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PROSCAN](#) /

› [Sylvania SRCD243 Portable CD Player with AM/FM Radio, Boombox \(Blue\) User Manual](#)

PROSCAN SRCD243M-BLUE

PROSCAN SRCD243 Portable CD Player with AM/FM Radio Boombox User Manual

Model: SRCD243M-BLUE

PRODUCT OVERVIEW

This PROSCAN SRCD243 Portable CD Player with AM/FM Radio Boombox offers versatile audio playback. It features an AM/FM radio, a CD player compatible with CD-R discs, skip and search functions, and a 20-track programmable memory. The unit can be powered by AC or batteries.



Description: Front view of the PROSCAN SRCD243 Portable CD Player with AM/FM Radio Boombox in blue, showcasing its dual speakers and central control panel.

WHAT'S IN THE BOX

- Sylvania SRCD243 Portable CD Player with AM/FM Radio, Boombox (Blue)

SETUP

Powering the Unit

The SRCD243 can be powered in two ways:

- **AC Power:** Connect the included AC adapter to the AC IN jack on the back of the unit and plug it into a standard 120V/60Hz wall outlet.
- **Battery Power:** For portable use, insert 8 'C' (UM-2) size batteries into the battery compartment located on the bottom of the unit. Ensure correct polarity.



Description: This image displays the rear of the boombox, highlighting the AC power input and the battery compartment area. It also shows the product's manufacturing details and a Proposition 65 warning.

OPERATING INSTRUCTIONS

CD Playback

To play a CD:

1. Lift the CD compartment lid located on the top of the unit.
2. Place a CD or CD-R disc onto the spindle, label side up.
3. Close the CD compartment lid securely.
4. Slide the FUNCTION switch (located on the side) to the "CD" position.
5. Press the PLAY/PAUSE button to begin playback.
6. Use the SKIP/SEARCH buttons to navigate between tracks or fast-forward/rewind within a track.

7. Press the STOP button to halt playback.
8. The unit features a 20-track programmable memory and Repeat 1/All functions.



Description: This image shows the top of the boombox with the CD lid open, illustrating how to insert a compact disc for playback. The central control panel is also visible.

AM/FM Radio

To listen to the radio:

1. Slide the FUNCTION switch (located on the side) to the "RADIO" position.
2. Extend the telescopic antenna for optimal FM reception.
3. Use the TUNING dial (located on the side) to select your desired AM or FM station.



Description: This image provides a side view of the boombox, clearly showing the manual tuning dial used for selecting AM/FM radio frequencies.

Auxiliary Input

The Aux In jack allows you to connect external audio devices (e.g., MP3 players, smartphones) to play music through the boombox speakers.

1. Connect one end of a 3.5mm audio cable (not included) to the Aux In jack on the side of the boombox.
2. Connect the other end of the cable to the headphone jack or audio output of your external device.
3. Slide the FUNCTION switch to the "AUX IN" position (if available, otherwise ensure it's not on CD or Radio).
4. Adjust the volume using the VOLUME control on the boombox and your external device.



Description: This image displays the side of the boombox, featuring the auxiliary input jack and the function switch for selecting different audio sources.

Controls Overview

The front panel features an LED display and various control buttons:

- **POWER:** Turns the unit on/off.
- **STOP:** Stops CD playback.
- **PROG (Program):** Used for programming CD tracks.
- **PLAY/PAUSE:** Starts or pauses CD playback.
- **SKIP/SEARCH (<< / >>):** Skips tracks or fast-forwards/rewinds.
- **REP (Repeat):** Repeats the current track or all tracks.
- **VOLUME (Side Dial):** Adjusts the overall sound level.
- **FUNCTION (Side Switch):** Selects between CD, OFF, and RADIO modes.



Description: This image provides a detailed front view of the boombox, highlighting the central control panel with its buttons for playback, programming, and the LED display.

MAINTENANCE

Cleaning

Wipe the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. For the CD lens, use a specialized CD lens cleaner.

Storage

If storing the unit for an extended period, remove batteries to prevent leakage and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adapter not connected or batteries depleted/incorrectly inserted.	Check AC connection or replace/reinsert batteries.
CD not playing or skipping	CD is dirty, scratched, or inserted incorrectly. Unit is on an unstable surface.	Clean CD, reinsert correctly. Place unit on a stable, flat surface.
Poor radio reception	Antenna not extended or unit is in an area with weak signal.	Extend and adjust the telescopic antenna. Try relocating the unit.
No sound	Volume too low or incorrect function selected.	Increase volume. Ensure FUNCTION switch is set to CD, RADIO, or AUX IN as desired.




SPECIFICATIONS




Feature	Detail
Brand	PROSCAN
Model Number	SRCD243M-BLUE
Product Dimensions	10 x 9 x 5.7 inches
Item Weight	2.64 pounds
Power Source	AC 120V/60Hz or 8 x 'C' (UM-2) batteries
CD Compatibility	CD, CD-R
Radio Bands	AM/FM
Connectivity	Auxiliary Input (3.5mm)

IMPORTANT SAFETY INFORMATION

This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

Related Documents - SRCD243M-BLUE

 <p>PROSCAN PORTABLE BLU-RAY DISC™/DVD PLAYER USER MANUAL PDVD1187</p>	<p>Proscan PDVD1187 Portable Blu-ray/DVD Player User Manual</p> <p>Comprehensive user manual for the Proscan PDVD1187 portable Blu-ray and DVD player, covering setup, operation, features, specifications, and troubleshooting.</p>
 <p>PROSCAN NOSTALGIA 6 IN 1 TURNTABLE RADIO MODEL: PRCD838BT INSTRUCTION MANUAL PLEASE READ CAREFULLY BEFORE OPERATION</p>	<p>PROSCAN Nostalgia 6-in-1 Turntable Radio PRCD838BT Instruction Manual</p> <p>Comprehensive instruction manual for the PROSCAN Nostalgia 6-in-1 Turntable Radio (Model PRCD838BT), covering safety, operation of turntable, CD, radio, cassette, and Bluetooth functions, connections, troubleshooting, and specifications.</p>
 <p>PROSCAN AMZ UNDERCABINET MUSIC SYSTEM WITH BLUETOOTH MODEL: PKCR2713 INSTRUCTION MANUAL</p>	<p>Proscan PKCR2713 AMZ Undercabinet Music System with Bluetooth Instruction Manual</p> <p>This manual provides instructions for operating the Proscan PKCR2713 AMZ Undercabinet Music System with Bluetooth, including setup, controls, radio, CD, and Bluetooth functions.</p>

	<p>PROSCAN PRCD682BT Portable CD Player with Bluetooth Radio Owner's Manual</p> <p>Owner's manual for the PROSCAN PRCD682BT portable CD player. This document provides detailed information on safety instructions, power connection, battery operation, control locations, AUX IN, Bluetooth, radio, and CD playback modes. It also includes specifications and warranty information for the device.</p>
	<p>Proscan PRCD682BT Portable CD Player: AM/FM Radio, Bluetooth - Owner's Manual</p> <p>Get detailed instructions for your Proscan PRCD682BT portable CD player. This manual covers setup, operation of AM/FM radio, Bluetooth streaming, and CD playback for this versatile audio device.</p>
	<p>ProScan PELTDV1029 User Manual</p> <p>User manual for the ProScan PELTDV1029 tablet, covering safety precautions, features, basic operation, DVD playback, camera function, Wi-Fi connection, mirror cast connection, text input, file transfer, battery use, specifications, troubleshooting, and warranty information.</p>