

PROSCAN SRCD243M-SILVER

Sylvania SRCD243 Portable CD Player with AM/FM Radio, Boombox

Model: SRCD243M-SILVER | Brand: PROSCAN

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Sylvania SRCD243 Portable CD Player with AM/FM Radio. Please read this manual thoroughly before using the unit to ensure proper function and longevity.

KEY FEATURES

- Portable CD Boombox with AM/FM Radio
- CD-R compatible CD player
- Skip/Search Function for easy track navigation
- Repeat 1/All Function for continuous playback
- 20 track programmable memory
- Clear LED Display
- Aux In Jack for connecting external audio devices
- Operates on AC power (adapter included) or 8 x 'C' (UM-2) size batteries

SETUP

Powering the Unit

The SRCD243 can be powered using the included AC wall adapter or by batteries for portable use.

- ****AC Power:**** Insert the small end of the AC adapter into the DC IN jack located on the back of the unit. Plug the other end into a standard AC 120V/60Hz wall outlet.
- ****Battery Power:**** Open the battery compartment on the bottom of the unit. Insert 8 x 'C' (UM-2) size batteries, ensuring correct polarity (+/-). Close the battery compartment securely.

Connecting External Devices (Aux In)

To play audio from an external device (e.g., smartphone, MP3 player), connect a 3.5mm audio cable (not included) from the device's headphone jack to the AUX IN jack on the side of the boombox. Switch the FUNCTION selector to 'AUX IN'.



Figure 1: Front view of the Sylvania SRCD243 Portable CD Player. This image shows the two front speakers, the central control panel with an LED display, and various buttons for CD and radio functions. A carrying handle is visible at the top.

OPERATING INSTRUCTIONS

CD Playback

1. Open the CD compartment door by gently lifting the lid.
2. Place a CD (or CD-R) onto the center spindle with the label side facing up.
3. Close the CD compartment door firmly until it clicks.
4. Set the FUNCTION selector (located on the side) to 'CD'.
5. Press the PLAY/PAUSE button to begin playback. The track number will appear on the LED display.
6. To pause playback, press PLAY/PAUSE again. Press it once more to resume.
7. To stop playback, press the STOP button.
8. ****Skip/Search:**** Press the SKIP buttons (forward or backward) to skip to the next or previous track. Press and hold the SKIP buttons to search rapidly through the current track.
9. ****Repeat:**** Press the REP button once to repeat the current track. Press it again to repeat all tracks on the CD. Press a third time to cancel repeat mode.
10. ****Program Play:**** While in STOP mode, press the PROG button. The display will show "P01". Use the SKIP buttons to select your desired track. Press PROG again to confirm. Repeat for up to 20 tracks. Press PLAY/PAUSE to start programmed playback.



Figure 2: Top view of the Sylvania SRCD243 Portable CD Player. This image highlights the top-loading CD compartment with the Sylvania logo and "DIGITAL COMPACT DISC PLAYER PORTABLE CD STEREO RADIO SYSTEM" text. The carrying handle is also visible.

AM/FM Radio Operation

1. Set the FUNCTION selector (located on the side) to 'RADIO'.
2. Select the desired band (AM or FM) using the AM/FM switch.
3. Rotate the TUNING knob (located on the side) to select your desired radio station. Extend the FM telescopic antenna for better FM reception. For AM reception, rotate the unit for best signal.

Volume Control

Adjust the volume using the VOLUME slider located on the side of the unit. Slide towards 'MAX' for louder sound and 'MIN' for softer sound.

MAINTENANCE

- **Cleaning the Unit:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. Store CDs in their cases when not in use.
- **Laser Lens Care:** Do not touch the laser lens inside the CD compartment. If it becomes dirty, use a standard CD lens cleaner.
- **Storage:** If storing the unit for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	AC adapter not connected properly or batteries are dead/incorrectly inserted.	Check AC adapter connection. Replace batteries or ensure correct polarity.
CD Skipping/Not Playing	CD is dirty, scratched, or inserted incorrectly. Unit is on an unstable surface.	Clean or replace CD. Ensure CD is placed correctly. Place unit on a stable, flat surface.
Poor Radio Reception	Antenna not extended or unit position is poor.	Fully extend the FM telescopic antenna. Rotate the unit for optimal AM reception.
No Sound	Volume is too low or muted. Incorrect function selected.	Increase volume. Ensure FUNCTION selector is set to CD, RADIO, or AUX IN as desired.

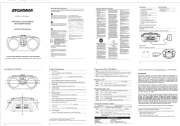

SPECIFICATIONS




- **Model Number:** SRCD243M-SILVER
- **Brand:** PROSCAN
- **Manufacturer:** Curtis
- **Product Dimensions:** 9.73 x 10.21 x 16.86 inches
- **Item Weight:** 2.7 pounds
- **Connectivity Technology:** Auxiliary
- **Color:** Silver/Black
- **Power Source:** Electric (AC 120V/60Hz) or 8 x 'C' (UM-2) batteries
- **Date First Available:** September 25, 2009

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer, Curtis, directly. Refer to the product packaging or the manufacturer's official website for the most current contact details and warranty terms.

Related Documents - SRCD243M-SILVER

	SYLVANIA SRCD243M User Manual and Warranty Information Official user manual and warranty details for the SYLVANIA SRCD243M, including service assistance contact information and warranty terms from Curtis International Ltd.
	PROSCAN PRCD682BT Portable CD Player with Bluetooth Radio Owner's Manual Owner's manual for the PROSCAN PRCD682BT portable CD player. This document provides detailed information on safety instructions, power connection, battery operation, control locations, AUX IN, Bluetooth, radio, and CD playback modes. It also includes specifications and warranty information for the device.

<div data-bbox="124 118 300 349"><p>PROSCAN</p><p>PORTABLE BLU-RAY DISC™/DVD PLAYER</p><p>USER MANUAL</p><p>PDVD1187</p><p>The product has been manufactured and sold under the responsibility of CURTIS INTERNATIONAL LTD. and the PROSCAN logo are trademarks and other marks to CURTIS INTERNATIONAL LTD. or their subsidiaries. All other product, service, company, trademarks, trade or product names and signs referred herein are the property of their respective owners.</p></div>	<p>Proscan PDVD1187 Portable Blu-ray/DVD Player User Manual</p> <p>Comprehensive user manual for the Proscan PDVD1187 portable Blu-ray and DVD player, covering setup, operation, features, specifications, and troubleshooting.</p>
<div data-bbox="124 701 261 779"><p>尺寸105*148mm 80g书纸 黑白印刷</p></div>	<p>Proscan Elite 13.3" Swivel Screen Portable DVD Player User Manual</p> <p>This user manual provides comprehensive instructions for the Proscan Elite 13.3" Swivel Screen Portable DVD Player (Model No.: PEDVD1332), covering setup, operation, features, troubleshooting, and warranty information.</p>
<div data-bbox="124 1014 288 1245"><p>PROSCAN</p><p>PPS1339 DG</p><p>Bluetooth Speaker</p><p>USER MANUAL</p><p>Model No.: PPS1339 DG</p><p>Version: 1.0</p><p>Copyright © 2014 Curtis International Ltd.</p><p>Proscan, PPS1339 DG, and the PROSCAN logo are trademarks and other marks to CURTIS INTERNATIONAL LTD. or their subsidiaries.</p><p>All other product, service, company, trademarks, trade or product names and signs referred herein are the property of their respective owners.</p></div>	<p>PROSCAN PPS1339 DG Bluetooth Speaker User Manual</p> <p>User manual for the PROSCAN PPS1339 DG Bluetooth Speaker, detailing safety instructions, features like Bluetooth 5.0 and AUX input, operation, charging, troubleshooting, and warranty information from Curtis International Ltd.</p>
<div data-bbox="124 1328 304 1402"></div>	<p>Proscan PSB3205 Bluetooth TV Soundbar Speaker User Manual</p> <p>User manual for the Proscan PSB3205 Bluetooth TV Soundbar Speaker. Learn about setup, features, specifications, and troubleshooting for enhanced audio.</p>