

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Briggs & Stratton](#) /
- › [Briggs & Stratton 494409 Check Valve Seat Instruction Manual](#)

## Briggs & Stratton 494409

# Briggs & Stratton 494409 Check Valve Seat Instruction Manual

Model: 494409

---

## 1. INTRODUCTION

This manual provides essential information for the proper installation, function, and care of your Briggs & Stratton 494409 Check Valve Seat. This genuine Briggs & Stratton part is designed to maintain the peak performance of your outdoor power equipment by ensuring correct fuel system operation. Using genuine parts helps ensure compliance with applicable EPA emission regulations and guarantees a precise fit.

## 2. PRODUCT OVERVIEW



An image showing the Briggs & Stratton 494409 Check Valve Seat, a small metal component designed for engine fuel systems. This part is crucial for regulating fuel flow within the engine.

The Briggs & Stratton 494409 Check Valve Seat is a critical component within the fuel system of compatible Briggs & Stratton engines. Its primary function is to allow fuel to flow in one direction while preventing backflow, which is essential for maintaining proper fuel pressure and engine priming. This part is manufactured to exact OEM standards to ensure reliability and compatibility.

### 3. INSTALLATION

**Safety First:** Before beginning any installation, ensure the engine is turned off, cooled, and disconnected from any power source (e.g., spark plug wire removed). Wear appropriate safety gear, including gloves and eye protection.

1. **Preparation:** Locate the existing check valve seat within your engine's fuel system. This typically requires disassembling certain engine components, such as the carburetor or fuel pump assembly. Refer to your specific engine's service manual for detailed disassembly instructions.
2. **Removal of Old Part:** Carefully remove the old check valve seat. Note its orientation and position for correct installation of the new part. Inspect the surrounding area for any debris or damage.
3. **Installation of New Part:** Insert the new Briggs & Stratton 494409 Check Valve Seat into its designated position. Ensure it is seated correctly and securely. The check valve seat must be installed with the

correct orientation to function properly.

4. **Reassembly:** Reassemble all engine components that were removed during the process, ensuring all connections are tight and secure.
5. **Testing:** After reassembly, perform a functional test of the engine to ensure proper operation and that the fuel system is priming correctly. Check for any fuel leaks.

For detailed, model-specific installation instructions, consult your engine's official service manual or a qualified service technician.

## 4. OPERATING PRINCIPLES

The Briggs & Stratton 494409 Check Valve Seat is a passive component that facilitates the one-way flow of fuel. When installed correctly, it allows fuel to be drawn into the engine's carburetor or fuel pump while preventing it from flowing back towards the fuel tank. This mechanism is vital for maintaining consistent fuel delivery and ensuring the engine can be easily primed and started. There are no user-adjustable operating controls for this component; its function is entirely dependent on correct installation and the overall integrity of the fuel system.

## 5. MAINTENANCE

The check valve seat itself is not a serviceable or maintainable part; it is designed for replacement. Regular maintenance of your engine's fuel system, however, is crucial for its longevity and performance. This includes:

- **Fuel Quality:** Always use fresh, clean fuel. Stale or contaminated fuel can lead to deposits that impair check valve function.
- **Fuel Filter:** Regularly inspect and replace your engine's fuel filter to prevent debris from reaching and potentially damaging the check valve seat.
- **Visual Inspection:** During other engine maintenance, visually inspect the check valve seat area for signs of wear, cracks, or blockages. If any damage or significant wear is observed, replace the check valve seat.

If the engine exhibits symptoms of fuel delivery issues, consider inspecting or replacing the check valve seat as part of a comprehensive fuel system check.

## 6. TROUBLESHOOTING

A faulty check valve seat can lead to various fuel system problems. Here are common symptoms and troubleshooting steps:

### Common Symptoms of a Faulty Check Valve Seat:

- **Engine Won't Prime:** If your engine's primer bulb does not draw fuel or feels soft and ineffective, the check valve seat may not be holding pressure.
- **Fuel Starvation:** Inconsistent fuel delivery to the carburetor, leading to rough running or stalling.
- **Hard Starting:** Difficulty starting the engine, especially after it has been sitting for a period, due to fuel draining back from the carburetor.

### Troubleshooting Steps:

1. **Visual Inspection:** After safely accessing the check valve seat, inspect it for any visible damage, cracks, or debris that might be preventing it from sealing properly.
2. **Fuel Flow Test:** If possible, test the one-way flow function of the check valve. It should allow flow in one

direction only.

- 3. Replacement:** If symptoms persist after checking other fuel system components (fuel filter, lines, carburetor), or if the check valve seat shows signs of damage, replacement with a genuine Briggs & Stratton 494409 part is recommended.

## 7. SPECIFICATIONS

Specification	Detail
Model Number	494409
Brand	Briggs & Stratton
Material	Metal
Item Weight	0.8 ounces
Product Dimensions (L x W x H)	1 x 7 x 8 inches
Inlet Connection Type	Flange
Outlet Connection Type	NPT
Number of Ports	2
Specification Met	EPA
UPC	024847845921

## 8. WARRANTY INFORMATION

Briggs & Stratton genuine parts are designed and manufactured to high-quality standards. While specific warranty details may vary by region and product, Briggs & Stratton typically provides a limited warranty against defects in material and workmanship for its genuine replacement parts. Please retain your proof of purchase. For complete warranty terms and conditions, refer to the official Briggs & Stratton website or contact their customer support.

## 9. SUPPORT

If you require further assistance with the installation, troubleshooting, or have questions regarding your Briggs & Stratton 494409 Check Valve Seat, please contact Briggs & Stratton customer support or visit their official website. You can find more information and contact details at the [Briggs & Stratton Store](#).