

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Murray](#) /

> [Murray 6219MA Snowblower Electric Starter Power Cord User Manual](#)

Murray 6219MA

Murray 6219MA Snowblower Electric Starter Power Cord User Manual

Model: 6219MA

[Safety Information](#)

[Product Overview](#)

[Setup & Installation](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SAFETY INFORMATION

WARNING: Always read and understand all safety instructions provided with your snowblower and this power cord before use. Failure to follow these instructions can result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the power outlet used is properly grounded and matches the voltage requirements of your snowblower's electric starter. Do not use extension cords that are not rated for outdoor use and heavy-duty appliances.
- **Cord Inspection:** Before each use, inspect the power cord for any signs of damage, including cuts, fraying, or exposed wires. **Do not use a damaged cord.** Replace it immediately with a genuine Murray replacement part.
- **Handling:** Always grasp the plug, not the cord, when connecting or disconnecting from the power source. Keep the cord away from moving parts of the snowblower, hot surfaces, and sharp objects.
- **Storage:** Store the power cord in a dry, safe place, away from extreme temperatures and direct sunlight, when not in use.
- **Personal Protective Equipment:** Wear work gloves when handling the power cord and operating the snowblower to protect against potential hazards.
- **Proposition 65 Warning:** This product may expose you to chemicals known to the State of California to cause cancer and reproductive harm. For more information, visit www.P65Warnings.ca.gov.

2. PRODUCT OVERVIEW

The Murray 6219MA Electric Starter Power Cord is a genuine Original Equipment Manufacturer (OEM) replacement part designed specifically for Murray snowblowers equipped with an electric starter. This cord provides the necessary electrical connection to power the snowblower's electric starting mechanism, offering a convenient and reliable way to start your equipment.



Image 1: Murray 6219MA Snowblower Electric Starter Power Cord. This image shows the black power cord with a standard three-prong plug on one end and a specialized connector on the other, designed to interface with a snowblower's electric starter port.

3. SETUP & INSTALLATION

Follow these steps to properly connect the Murray 6219MA Electric Starter Power Cord to your snowblower:

1. **Ensure Snowblower is Off:** Before connecting the power cord, ensure your snowblower's engine is completely off and the ignition key (if applicable) is removed.
2. **Locate Starter Port:** Identify the electric starter port on your Murray snowblower. This is typically a three-prong receptacle located near the engine.
3. **Connect to Snowblower:** Firmly insert the specialized connector end of the 6219MA power cord into the snowblower's electric starter port. Ensure it is fully seated and secure.
4. **Connect to Power Outlet:** Plug the standard three-prong end of the power cord into a grounded 120V AC electrical outlet. Ensure the outlet is suitable for outdoor use and protected by a Ground Fault Circuit Interrupter (GFCI) if required by local codes.
5. **Verify Connection:** Double-check that both ends of the power cord are securely connected before attempting to start the snowblower.

4. OPERATION

Once the power cord is securely connected, you can use the electric starter feature of your snowblower:

1. **Prepare Snowblower:** Follow your snowblower's specific instructions for starting, which may include priming the engine or setting the choke.
2. **Engage Starter:** Press and hold the electric starter button on your snowblower. The engine should begin to crank.
3. **Release Button:** Once the engine starts, release the electric starter button immediately. Do not hold the button down after the engine has started.
4. **Disconnect Cord:** After the snowblower has started, disconnect the power cord from both the snowblower and the electrical outlet. Store the cord safely.

Note: The electric starter is intended for initial engine startup. Once the engine is running, the power cord should be disconnected.

5. MAINTENANCE

Proper maintenance of your Murray 6219MA power cord ensures its longevity and safe operation:

- **Regular Inspection:** Periodically inspect the entire length of the cord, including the plugs and connectors, for any signs of wear, damage, or corrosion.
- **Cleaning:** Keep the cord clean and free of dirt, oil, and debris. Use a dry cloth to wipe it down. Do not immerse the cord in water or use harsh chemicals.
- **Proper Storage:** When not in use, coil the cord loosely and store it in a cool, dry place, protected from direct sunlight and physical damage. Avoid kinking or tightly wrapping the cord.
- **Replacement:** If any damage is found, immediately discontinue use and replace the cord with a genuine Murray 6219MA replacement part.

6. TROUBLESHOOTING

If your snowblower's electric starter does not operate when using the 6219MA power cord, consider the following:

Problem	Possible Cause	Solution
Electric starter does not engage.	Cord not fully plugged in.	Ensure cord is securely connected at both ends.
	No power from outlet.	Test the outlet with another appliance or check circuit breaker/GFCI.
	Damaged power cord.	Inspect cord for damage; replace if necessary.
	Snowblower engine issue.	Consult your snowblower's manual for engine-specific troubleshooting.
Cord feels hot during use.	Overload or faulty connection.	Immediately disconnect power. Inspect cord and connections.
	Damaged cord.	Discontinue use and replace the cord.

If problems persist after following these steps, contact Murray customer support or a qualified service technician.

7. SPECIFICATIONS

- **Model Number:** 6219MA
- **Part Type:** Electric Starter Power Cord
- **Compatibility:** Designed for Murray snowblowers with electric start capability.
- **Item Weight:** Approximately 1.1 pounds
- **Package Dimensions:** Approximately 9.5 x 8.4 x 2.9 inches
- **Manufacturer:** Murray

8. WARRANTY & SUPPORT

Warranty Information

Specific warranty details for the Murray 6219MA Electric Starter Power Cord are typically provided with the product packaging or can be found on the official Murray website. As an OEM part, it is generally covered by the manufacturer's standard warranty for replacement parts. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, replacement parts, or warranty inquiries, please contact Murray customer support. Refer to your snowblower's main manual or the Murray official website for current contact information.

- **Online Resources:** Visit the official Murray website for FAQs, product registration, and service center locators.
- **Service Centers:** For professional service or repairs, locate an authorized Murray service center in your area.