

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Memorex MI4290P-BLKUK

# Memorex MI4290P Apple Docking Alarm Clock Radio

User Manual



## INTRODUCTION

Thank you for purchasing the Memorex MI4290P Apple Docking Alarm Clock Radio. This device is designed to provide high-quality audio playback from your Apple iPhone or iPod, along with FM radio functionality and dual alarm clock features. It also conveniently syncs the day and time from your docked Apple device. Please read this manual thoroughly to ensure proper setup and operation of your new device.

## SAFETY INFORMATION

To reduce the risk of electric shock, fire, or injury, always follow these basic safety precautions:

- Do not expose this appliance to rain or moisture.
- Do not place objects filled with liquids, such as vases, on the appliance.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this appliance during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

## PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Memorex MI4290P Docking Alarm Clock Radio
- AC Power Adapter
- Remote Control (CR2025 battery not included)
- User Manual (this document)
- Docking Adapters for various iPhone/iPod models

## PRODUCT OVERVIEW

Familiarize yourself with the main components of your Memorex MI4290P unit.



**Figure 1:** Front view of the Memorex MI4290P with an iPhone docked. This image highlights the main display, the iPod/iPhone docking cradle, and the primary control buttons on the top panel.



**Figure 2:** Angled view of the Memorex MI4290P, providing a better perspective of the unit's sleek design and the placement of the side speakers and top-mounted controls.



Figure 3: The retail packaging for the Memorex Clock Radio, illustrating the product's branding and key features as presented on the box.

#### Front Panel:

- **Digital Display:** Shows time, alarm status, and radio frequency.
- **Speakers:** Integrated stereo speakers for audio output.

#### Top Panel:

- **iPod/iPhone Dock:** Connector for your Apple device.
- **Snooze/Dimmer Button:** Activates snooze function or adjusts display brightness.
- **Volume Up/Down Buttons:** Adjusts audio volume.
- **Function/Mode Button:** Switches between iPod/iPhone, FM Radio, and AUX modes.
- **Alarm 1/Alarm 2 Buttons:** Sets and activates individual alarms.
- **Tune/Skip Buttons:** Navigates radio frequencies or skips tracks on docked device.
- **Play/Pause Button:** Controls playback for docked device.

#### Rear Panel:

- **DC IN Jack:** For connecting the AC power adapter.
- **AUX IN Jack (3.5mm):** For connecting external audio devices.
- **FM Antenna:** For improved radio reception.

## SETUP

---

### 1. Power Connection

1. Insert the DC plug of the AC power adapter into the DC IN jack on the rear of the unit.
2. Plug the AC power adapter into a standard wall outlet.
3. The unit will power on and the display will illuminate.

### 2. Initial Time and Date Setup

The MI4290P can sync its time and date from a docked iPhone or iPod. Ensure your Apple device has the correct time and date set.

1. Select the appropriate docking adapter for your iPhone/iPod model and place it in the docking cradle.
2. Carefully dock your iPhone or iPod onto the connector.
3. The unit will automatically attempt to sync the time and date from your docked device.
4. If syncing does not occur, ensure your iPhone/iPod is properly seated and powered on.

### 3. FM Antenna Setup

Extend the FM wire antenna fully for optimal radio reception. Adjust its position if reception is poor.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

- Press the **Power** button (usually integrated with the Function button) to turn the unit on or off.

### 2. Adjusting Volume

- Press the **Volume Up (+)** or **Volume Down (-)** buttons to adjust the listening volume.

### 3. Playing from iPhone/iPod

1. Ensure your iPhone/iPod is properly docked.
2. Press the **Function/Mode** button repeatedly until "iPod" or "iPhone" appears on the display.
3. Use the **Play/Pause** button to start or pause playback.
4. Use the **Skip Forward** or **Skip Backward** buttons to navigate tracks.

### 4. FM Radio Operation

1. Press the **Function/Mode** button repeatedly until "FM" appears on the display.
2. **Manual Tuning:** Press the **Tune Up** or **Tune Down** buttons briefly to adjust the frequency step by step.
3. **Auto Scan:** Press and hold the **Tune Up** or **Tune Down** buttons to automatically scan for the next available station.
4. **Setting Presets:**
  - a. Tune to your desired station.
  - b. Press and hold the **Preset** button (if available, or a combination of Tune/Memory button) until the preset number flashes.
  - c. Use the **Tune Up/Down** buttons to select the desired preset number (P01-P10).
  - d. Press the **Preset** button again to confirm.
5. **Recalling Presets:** Briefly press the **Preset** button to cycle through saved stations.

### 5. Setting Alarms (Alarm 1 & Alarm 2)

The unit features two independent alarms.

1. Press and hold the **Alarm 1** or **Alarm 2** button until the alarm time flashes on the display.
2. Use the **Tune Up/Down** buttons to set the desired alarm hour, then press the **Alarm** button again to confirm.
3. Repeat for minutes.
4. After setting the time, you can select the alarm source (iPod/iPhone, FM Radio, or Buzzer) using the **Tune Up/Down** buttons. Press the **Alarm** button to confirm.
5. To activate/deactivate an alarm, briefly press the corresponding **Alarm 1** or **Alarm 2** button. An indicator will appear on the display when the alarm is active.

## 6. Snooze Function

- When an alarm sounds, press the large **Snooze** button to temporarily silence the alarm for approximately 9 minutes.

## 7. Display Dimmer

- Press the **Snooze/Dimmer** button (when alarm is not sounding) to cycle through different display brightness levels.

## 8. Using the Remote Control

The included remote control allows for convenient operation from a distance. Insert a CR2025 battery (not supplied) into the remote before use.

- The remote control duplicates most functions available on the unit's top panel, including Power, Volume, Mode, Play/Pause, Skip, and Alarm settings.

## MAINTENANCE

---

### Cleaning the Unit:

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

### Battery Replacement (Remote Control):

- When the remote control's range decreases or it stops responding, replace the CR2025 lithium battery.
- Follow the instructions on the remote control to open the battery compartment and replace the battery, observing correct polarity.

## TROUBLESHOOTING

---

If you experience issues with your Memorex MI4290P, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected; Power outlet not active.	Ensure AC adapter is securely plugged into the unit and a working wall outlet.
No sound from iPhone/iPod	iPhone/iPod not properly docked; Volume too low; Unit in wrong mode.	Re-seat iPhone/iPod; Increase volume; Press Function/Mode button to select iPod/iPhone mode.
Poor FM radio reception	FM antenna not extended or positioned correctly.	Fully extend and reposition the FM wire antenna for better reception.
Alarm does not sound	Alarm not activated; Alarm volume too low; Incorrect alarm time set.	Ensure alarm indicator is on; Increase volume; Verify alarm time and source.

Problem	Possible Cause	Solution
Remote control not working	Battery depleted or incorrectly inserted; Obstruction between remote and unit.	Replace CR2025 battery; Ensure clear line of sight to the unit's sensor.

## SPECIFICATIONS

Feature	Detail
Model Number	MI4290P-BLKUK
Brand	Memorex
Power Source	AC Power Adapter
Compatibility	Apple iPhone, iPod (via docking connector), devices with 3.5mm audio output (via AUX IN)
Radio Tuner	FM
Alarm Features	Dual Alarms, Snooze Function, Wake to iPod/iPhone, FM Radio, or Buzzer
Display	Digital LED with Dimmer
Dimensions (L x W x H)	34.6 x 27.4 x 12.8 cm (approx. 13.6 x 10.8 x 5.0 inches)
Weight	1.2 Kilograms (approx. 2.65 lbs)
UPC	749720018857

## WARRANTY AND SUPPORT

Memorex products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Memorex website. Please have your model number (MI4290P-BLKUK) and proof of purchase ready when contacting support.

For the most up-to-date support information, please visit: [www.memorex.com/support](http://www.memorex.com/support) (Note: This is a placeholder URL as specific support links are not provided in the input data).