

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [iRiver](#) /

› [iRiver E150 8 GB Digital Media Player User Manual](#)

iRiver E150

iRiver E150 8 GB Digital Media Player User Manual

Model: E150

INTRODUCTION

The iRiver E150 is an 8 GB digital media player designed for portable entertainment. It features a 2.4-inch TFT LCD display, supports various audio and video formats, includes an FM radio tuner, voice recording capabilities, and offers up to 5 hours of video playback. This manual provides essential information for setting up, operating, and maintaining your device.



Image: Front view of the iRiver E150 Digital Media Player.

SETUP

1. Charging the Device

Before first use, fully charge your iRiver E150. Connect the device to a computer's USB port or a compatible USB wall adapter using the provided USB cable. The battery indicator on the screen will show charging status. A full charge typically takes a few hours.

2. Connecting to a Computer and Transferring Files

1. Connect the iRiver E150 to your computer using the USB cable.
2. The device will appear as a removable disk drive on your computer.
3. Drag and drop your desired audio (MP3, FLAC, OGG), video (MPEG, WMV9, XVID, AVI, MOV), or image files into the appropriate folders on the device.

4. For video files, use the included conversion software to optimize them for the E150's screen if necessary. This can reduce file size and ensure compatibility.
5. Safely eject the device from your computer before disconnecting the USB cable.



Image: Side view of the iRiver E150, highlighting connectivity ports.

OPERATING INSTRUCTIONS

1. Basic Controls and Navigation

The iRiver E150 features intuitive controls for easy navigation. Use the directional buttons and the central selection button to move through menus and confirm selections. The device's interface is designed for straightforward access to its various functions.



Image: iRiver E150 interface showing main menu options like Music and Video.

2. Playing Music

- From the main menu, select "Music".
- Browse your music library by artist, album, genre, or all songs.
- Select a track to begin playback.
- Use the directional buttons for volume control, skipping tracks, and pausing/playing.

3. Playing Videos

- From the main menu, select "Video".
- Choose the video file you wish to watch.
- The 2.4-inch TFT LCD display provides clear video playback.

4. Using FM Radio

- Select "FM Radio" from the main menu.

- Use the controls to scan for stations or manually tune to a specific frequency.
- The device supports FM recording reservation, allowing you to schedule recordings of your favorite radio programs.

5. Voice Recording

- Access the "Voice Recording" function from the main menu.
- The built-in microphone allows for clear audio capture.
- Start and stop recordings using the designated controls.

MAINTENANCE

1. Cleaning Your Device

To clean the iRiver E150, use a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents, as these can damage the device's finish or internal components.

2. Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. Charge the device regularly, but avoid leaving it fully discharged for extended periods. The internal battery provides up to 5 hours of video playback on a full charge.

TROUBLESHOOTING

Device Not Responding / Freezing

If your iRiver E150 becomes unresponsive or freezes, a soft reset may resolve the issue. Locate the small reset hole on the device (often on the back or side). Gently insert a straightened paper clip or similar thin object into the hole and press briefly. This will restart the device without erasing data.



Image: Back view of the iRiver E150, indicating the location of the reset pinhole.

File Transfer Issues

- Ensure the USB cable is securely connected to both the device and the computer.
- Try connecting to a different USB port on your computer.
- Verify that the device is recognized as a removable disk drive. If not, try restarting both the device and the computer.
- Check file formats for compatibility with the E150.

SPECIFICATIONS

Feature	Detail
Model Name	E150
Storage Capacity	8 GB
Display	2.4-inch TFT LCD
Supported Video Formats	MPEG, WMV9, XVID (with conversion software for AVI, MOV)
Supported Audio Formats	MP3, FLAC, OGG
Special Features	FM Radio, Voice Recorder, FM recording reservation
Connectivity	USB
Battery Life (Video)	Up to 5 hours
Dimensions (LxWxH)	9.5 x 4.8 x 1.3 cm
Weight	54.4 g



Image: Angled view of the iRiver E150 Digital Media Player.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official iRiver support website. Keep your proof of purchase for warranty claims.



