

Maxell MC-60

Maxell Micro Cassette MC-60 Instruction Manual

1. INTRODUCTION

This manual provides instructions for the use and care of your Maxell Micro Cassette MC-60 tapes. These microcassettes are designed for use in compatible microcassette recorders, commonly used for dictation, voice recording, and answering machines. Each cassette offers 60 minutes of recording time (30 minutes per side).



Image 1.1: Packaging for the Maxell Micro Cassette MC-60 3-pack. The image displays three individual microcassettes within their clear cases, packaged together in a green and white cardboard sleeve featuring the Maxell brand and MC-60 model number, indicating suitability for dictation and answering machines.

2. SETUP

2.1 Unpacking the Cassettes

1. Carefully remove the microcassettes from their packaging.
2. Each microcassette is housed in a clear protective case. Open the case to access the tape.

2.2 Labeling Your Cassette

Each microcassette includes a small paper insert for labeling. Use this insert to note the recording date, content, or any other relevant information. This helps in organizing and identifying your recordings.

2.3 Inserting the Cassette into a Recorder

1. Ensure your microcassette recorder is powered off or in standby mode.
2. Locate the cassette compartment on your recorder. This is typically opened by pressing a release button or sliding a latch.
3. Insert the microcassette into the compartment with the tape window facing outwards and the correct side (A or B) aligned as indicated by your recorder's instructions.
4. Gently close the cassette compartment until it clicks securely into place. Do not force it.

Your browser does not support the video tag.

Video 2.1: This video demonstrates the unboxing of microcassette tapes and their insertion into a compatible microcassette recorder. It shows the process of opening the packaging, removing a tape from its protective case, and correctly placing it into the recorder's compartment.

3. OPERATING THE MICRO CASSETTE

Once the microcassette is correctly loaded into a compatible recorder, you can begin recording or playback. Refer to your microcassette recorder's specific instruction manual for detailed operating procedures, as controls may vary between models.

3.1 Recording

- Press the **RECORD** button (often red) on your recorder. This will typically engage the **PLAY** button simultaneously.
- Speak clearly into the recorder's microphone or connect an external microphone if available.
- Monitor the recording level indicator (if present) to ensure optimal audio capture without distortion.
- To pause recording, press the **PAUSE** button. Press it again to resume.
- To stop recording, press the **STOP** button.

3.2 Playback

- Press the **PLAY** button on your recorder.
- Adjust the volume using the volume control.
- Use the **FAST FORWARD** (FFWD) and **REWIND** (REW) buttons to navigate through the tape.
- To stop playback, press the **STOP** button.

3.3 Tape Capacity

Each Maxell Micro Cassette MC-60 provides a total of 60 minutes of recording time, split evenly between side A and side B (30 minutes per side).

4. MAINTENANCE

Proper care of your microcassettes and recorder ensures optimal performance and longevity.

- **Storage:** Store microcassettes in their protective cases when not in use. Keep them away from direct sunlight, high temperatures, humidity, and strong magnetic fields (e.g., speakers, televisions, magnets), which can erase or damage recordings.
- **Handling:** Avoid touching the exposed tape. Handle cassettes by their edges.
- **Recorder Maintenance:** Regularly clean the tape heads, capstan, and pinch roller of your microcassette recorder using a specialized tape head cleaning kit. Dirty components can lead to poor sound quality or tape damage.
- **Rewinding:** Always rewind tapes fully to one end before storing them to prevent tension issues.

5. TROUBLESHOOTING

If you encounter issues with your microcassettes, consider the following common solutions:

- **Poor Sound Quality:** This is often caused by dirty tape heads on the recorder. Clean the heads as described in the maintenance section. Also, ensure the tape is fully inserted and the recorder's volume and tone settings are appropriate.
- **Tape Not Moving or Jammed:** Check if the cassette is inserted correctly. If the tape is visibly tangled or creased, it may be damaged and require careful manual adjustment or replacement. Do not force the tape.
- **No Recording:** Ensure the recorder is in record mode and the microphone is properly connected and functioning. Check the battery level of your recorder.
- **Tape Erased Accidentally:** Microcassettes have small erase protection tabs. If a tab is broken off, the tape can be recorded over. To prevent accidental erasure, cover the tab opening with a small piece of adhesive tape.

For persistent issues, consult the instruction manual for your specific microcassette recorder or contact the recorder's manufacturer for support.

6. SPECIFICATIONS

Feature	Detail
Brand	Maxell
Model	MC-60
Type	Micro Cassette
Recording Time	60 minutes (30 minutes per side)
Package Dimensions	6.42 x 2.44 x 0.43 inches
Item Weight	1.97 ounces
Date First Available	September 9, 2009

7. WARRANTY AND SUPPORT



[Maxell Ultra Short Throw LCD Projectors: MC-TW3506, MC-TW3006, MC-AW3506, MC-AW3006, MC-AX3506, MC-AX3006](#)

Maxell's Ultra Short Throw LCD Projectors deliver vivid images in bright classrooms and meeting rooms. Featuring advanced technologies like ACCENTUALIZER, IMAGE OPTIMIZER, HDCR, and DICOM Simulation Mode, these projectors provide excellent visual quality. They offer versatile connectivity, network features, and interactive capabilities, making them ideal for educational and business environments. Models include MC-TW3506, MC-TW3006, MC-AW3506, MC-AW3006, MC-AX3506, and MC-AX3006.