

Rayovac PS3

Rayovac PS3 Multi All Size Charger Instruction Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Rayovac PS3 Multi All Size Charger. Please read this manual thoroughly before using the charger and retain it for future reference. This charger is designed to recharge specific types of rechargeable batteries.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of injury, charge only rechargeable batteries. Do not attempt to charge non-rechargeable batteries. Charging non-rechargeable batteries may cause them to leak, rupture, or explode, resulting in personal injury and property damage.

- **Charge only rechargeable Alkaline, Nickel Cadmium (NiCd), or Nickel Metal Hydride (NiMH) batteries.**
- **DO NOT mix battery types during charging.** For example, do not charge NiMH and Alkaline batteries simultaneously.
- **NEVER charge single-use alkaline batteries** such as Rayovac Maximum®, Energizer®, or Duracell®. These batteries are not designed for recharging and can cause severe hazards.
- **Risk of Electric Shock:** Use this charger in dry locations only. Do not expose to rain or moisture.
- **NiMH and NiCd batteries may become hot during charging.** When charging these battery types, leave the charger lid OPEN to reduce heat buildup.
- **Close the lid when charging Rechargeable Alkaline (RENEWAL®) batteries.**
- Ensure proper battery polarity. Insert batteries with the negative (-) end against the sliding metal bar and the positive (+) end facing the (+) symbol on the charger.
- Unplug the charger from the outlet when not in use.

RAYOVAC®

Charges All 3 Rechargeable Battery Types:

1. Rechargeable Alkaline (RENEWAL®)
2. Rayovac Rechargeable Nickel Metal Hydride (NiMH)
3. Rechargeable Nickel Cadmium (NiCd)

Charges up to 8 AA or AAA, or 4 C or D size batteries.

DO NOT mix battery types during charging.

NEVER charge single-use alkaline batteries like Rayovac Maximum®, Energizer®, or Duracell®.

TO INSERT BATTERIES INTO CHARGER:

Make sure the negative (-) or flat end of the battery is against the sliding metal bar and the positive (+) or nubbin end of the battery is facing the (+) symbol on the charger. The red light will be on during charging and off when charging is complete.

CAUTION: NiMH and NiCd batteries may become hot during charging. Leave this lid **OPEN** to reduce heat.

CLOSE lid when charging Rechargeable Alkaline (RENEWAL®).

Recharge les 3 types de piles rechargeables:

1. Alcalines rechargeables (RENEWAL®)
2. Rechargeables à hydrure métallique de nickel (NiMH) de Rayovac
3. Rechargeables au nickel-cadmium (NiCd)

Recharge jusqu'à 8 piles AA ou AAA ou 4 piles C ou D.

NE PAS recharger en même temps des piles de type différent.

NE JAMAIS recharger des piles alcalines jetables telles que les piles Maximum® de Rayovac, Energizer® ou Duracell®.

INSERTION DES PILES DANS LE CHARGEUR:

S'assurer que le pôle négatif (-) ou bout plat de la pile appuie contre la barre de métal coulissante et que le pôle positif (+) ou bout arrondi de la pile est face au symbole (+) sur le chargeur. Le voyant rouge sera allumé pendant la recharge et s'éteindra lorsque les piles seront pleinement chargées.


ATTENTION: Les piles NiMH et NiCd peuvent s'échauffer pendant la recharge. Laisser le couvercle **OUVERT** pour réduire la chaleur.

FERMER le couvercle pendant la recharge des piles alcalines rechargeables (RENEWAL®).

PS3

T2205733

Internal label of the Rayovac PS3 charger detailing battery types, insertion instructions, and safety warnings.

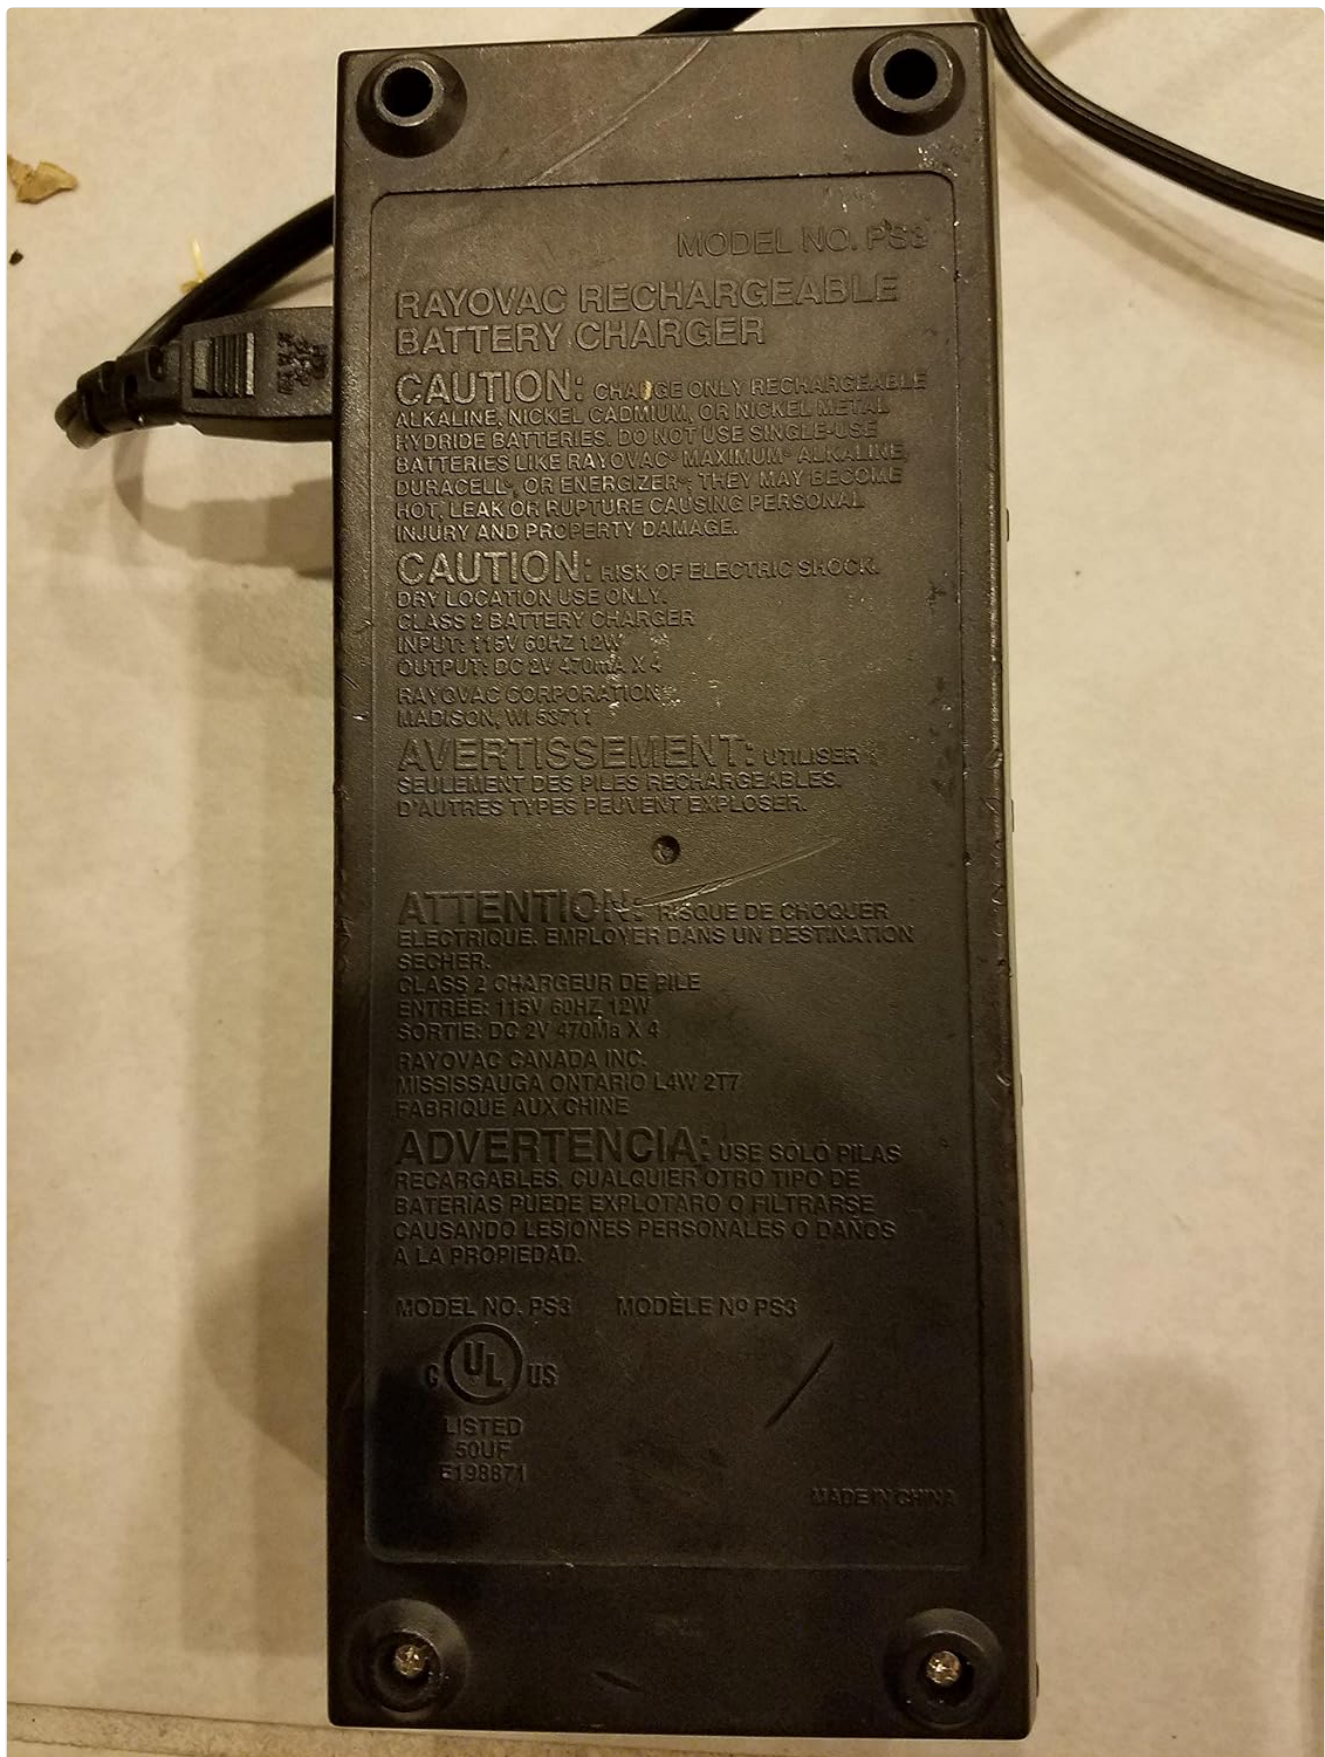

Bottom label of the Rayovac PS3 charger showing electrical specifications, safety warnings, and manufacturer information.

PRODUCT FEATURES

- Charges three types of rechargeable batteries: Rechargeable Alkaline (RENEWAL®), Nickel Metal Hydride (NiMH), and Nickel Cadmium (NiCd).
- Accommodates various battery sizes: up to 8 AA or AAA batteries, or up to 4 C or D size batteries.

- Individual charging channels for flexible battery charging.
- Red indicator light for charging status.



Rayovac PS3 Multi All Size Charger with various batteries inserted.

1. Unpack the Rayovac PS3 Multi All Size Charger from its packaging.
2. Place the charger on a stable, dry, and non-flammable surface.
3. Plug the charger's power cord into a standard 120V 60Hz AC wall outlet.

OPERATING INSTRUCTIONS

1. **Insert Batteries:** Carefully insert the rechargeable batteries into the charging slots. Ensure the negative (-) or flat end of the battery is against the sliding metal bar, and the positive (+) or nubbin end faces the (+) symbol on the charger.
2. **Observe Charging Indicator:** A red light will illuminate next to the inserted battery, indicating that charging is in progress.
3. **Lid Management:**
 - For NiMH and NiCd batteries, leave the charger lid OPEN during charging to allow for heat dissipation.
 - For Rechargeable Alkaline (RENEWAL®) batteries, close the charger lid during charging.
4. **Charging Completion:** The red light will turn off when the battery is fully charged.
5. **Remove Batteries:** Once charging is complete and the light is off, remove the batteries from the charger.

BATTERY TYPES AND SIZES SUPPORTED

The Rayovac PS3 charger is versatile and supports the following rechargeable battery chemistries and sizes:

- **Rechargeable Alkaline (RENEWAL®):** This charger is specifically designed to recharge Rayovac RENEWAL® alkaline batteries.
- **Nickel Metal Hydride (NiMH):** Commonly used in many electronic devices, NiMH batteries are fully supported.
- **Nickel Cadmium (NiCd):** Older but still common rechargeable battery type.

Supported Sizes:

- AA batteries (up to 8 simultaneously)
- AAA batteries (up to 8 simultaneously)
- C batteries (up to 4 simultaneously)
- D batteries (up to 4 simultaneously)

Important: Do not mix different battery types or brands during a single charging cycle.

MAINTENANCE


- **Cleaning:** Disconnect the charger from the power outlet before cleaning. Use a dry, soft cloth to wipe the exterior of the charger. Do not use liquid cleaners or solvents.
- **Storage:** Store the charger in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Inspection:** Periodically inspect the charger and its cord for any signs of damage. Do not use if damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Red light does not turn on when battery is inserted.	• Battery inserted incorrectly. • Battery is not rechargeable. • Battery is fully charged. • Charger not plugged in.	• Re-insert battery, ensuring correct polarity. • Verify battery is a supported rechargeable type (Alkaline RENEWAL®, NiMH, NiCd). • If battery is already charged, no light will appear. • Ensure charger is securely plugged into a live outlet.
Batteries become excessively hot during charging.	• Normal for NiMH/NiCd, but excessive heat indicates an issue. • Incorrect battery type. • Poor ventilation.	• For NiMH/NiCd, ensure lid is OPEN. If still excessively hot, discontinue use. • Ensure only supported rechargeable batteries are used. • Ensure charger is in a well-ventilated area.
Charger not working at all.	• No power to the charger. • Charger malfunction.	• Check power outlet with another device. • Ensure power cord is fully inserted. • If problem persists, discontinue use and contact customer support.

SPECIFICATIONS

- **Model Number:** PS3
- **Input:** 120V AC, 60Hz, 10W
- **Output:** 1.4V DC, 1.2A
- **Supported Battery Types:** Rechargeable Alkaline (RENEWAL®), Nickel Metal Hydride (NiMH), Nickel Cadmium (NiCd)
- **Supported Battery Sizes:** AA, AAA, C, D
- **Manufacturer:** Rayovac Corporation
- **Item Weight:** Approximately 1.95 pounds
- **Color:** Black
- **ASIN:** B002YDWSM4
- **UPC:** 012800462049

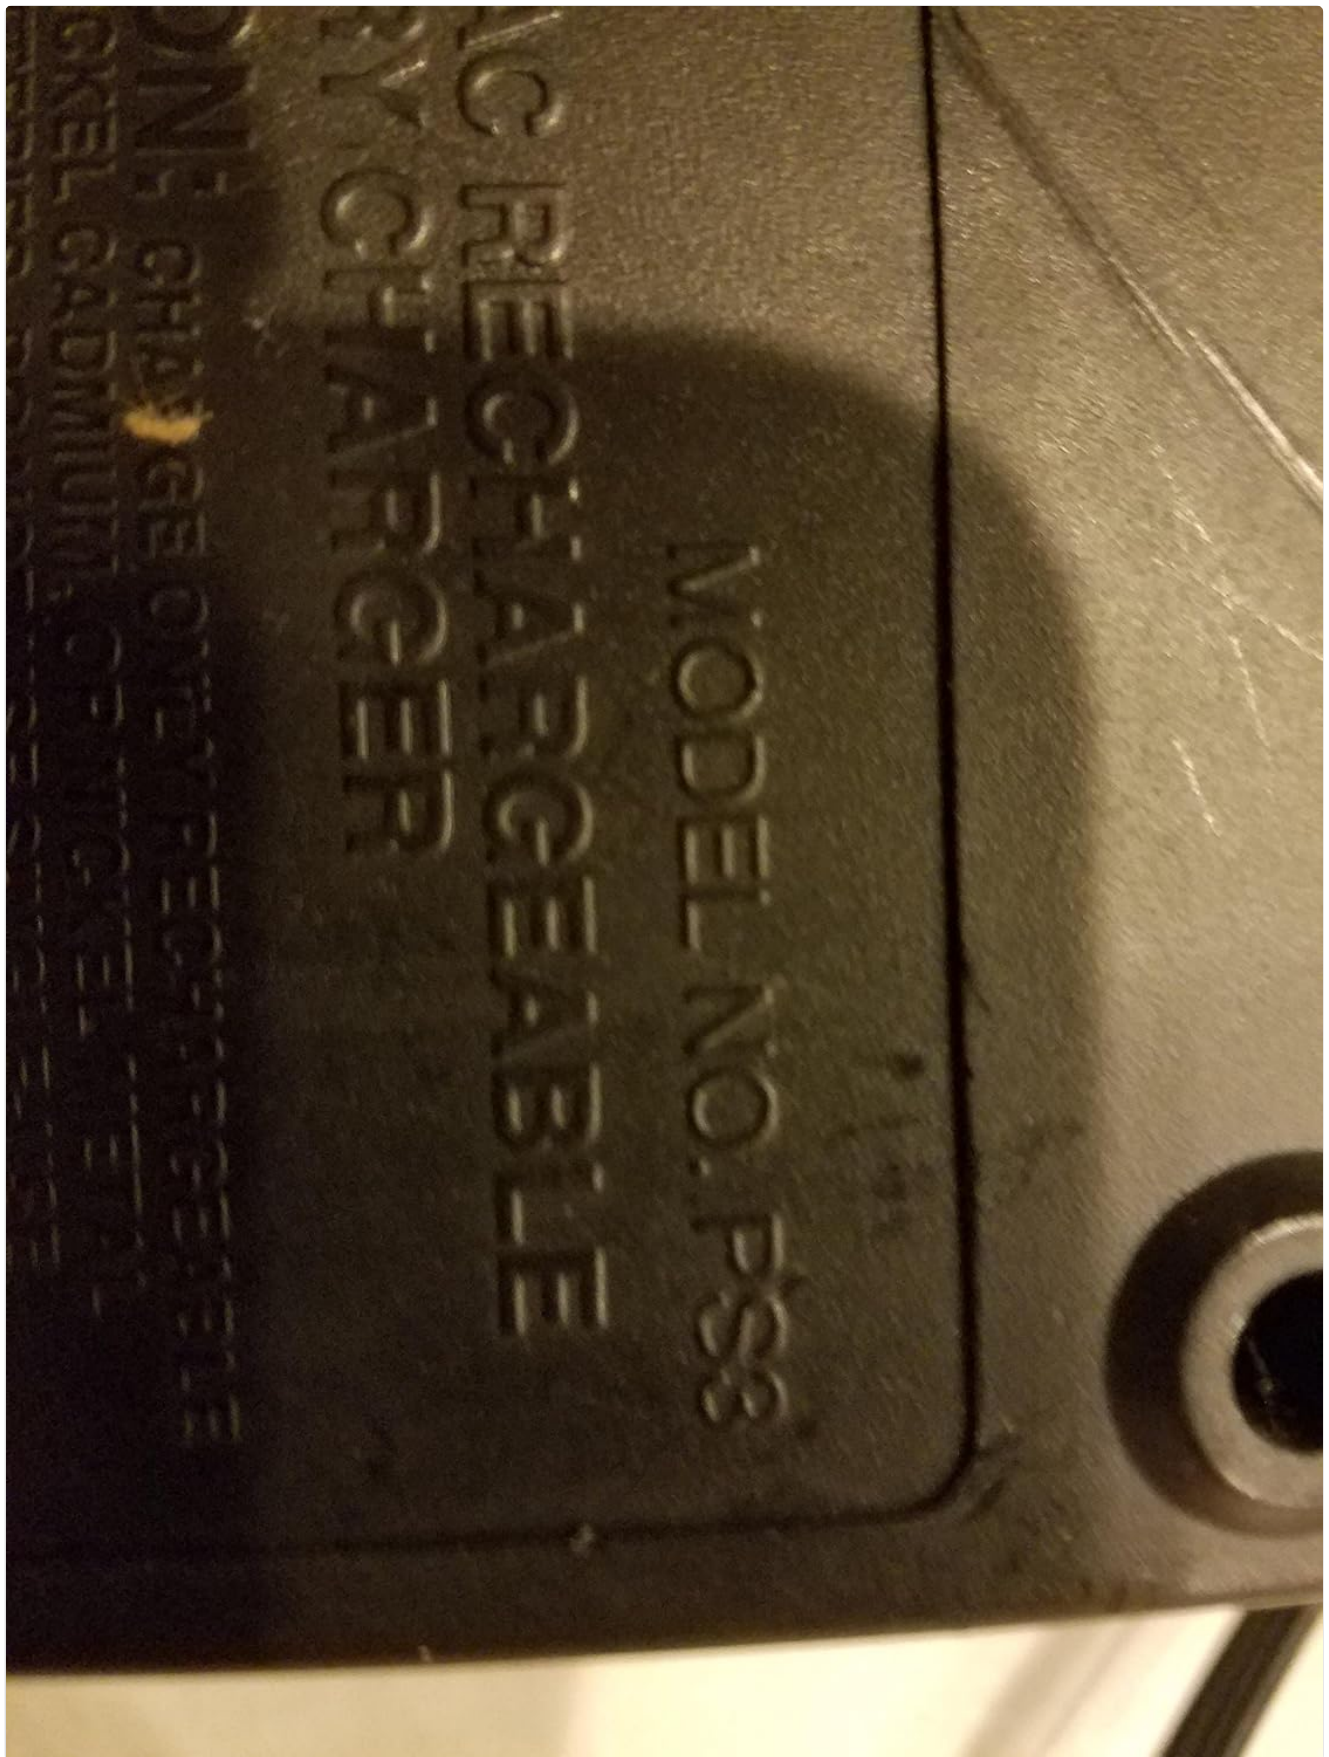

Close-up of the Rayovac PS3 model number on the charger.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Rayovac website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question