

[manuals.plus](#) /

› [Fiskars](#) /

› [Fiskars 8" All-Purpose SoftGrip Scissors Instruction Manual](#)

Fiskars 01-004761

Fiskars 8" All-Purpose SoftGrip Scissors Instruction Manual

Model: 01-004761 | UPC: 020335031227

INTRODUCTION

The Fiskars 8" All-Purpose SoftGrip Scissors are designed for a wide range of cutting tasks in both office and home environments. Featuring durable stainless steel blades and an ergonomically sculpted SoftGrip handle, these scissors provide precise control and comfort for various materials.

PRODUCT FEATURES

- All-Purpose Design:** Suitable for cutting paper, cardboard, wrapping paper, and light fabrics.
- Durable Stainless Steel Blades:** Hardened blades maintain a sharp edge for long-lasting performance and precise cuts.
- SoftGrip Handle:** Contoured, ergonomic handle with SoftGrip touchpoints enhances comfort and control during extended use.
- Versatile Use:** An essential tool for arts and crafts, office tasks, and general household cutting needs.
- Lifetime Warranty:** Guaranteed for life to maintain exceptional performance.



Image: Fiskars 8" All-Purpose SoftGrip Scissors, highlighting stainless steel blades, ergonomic handle, and SoftGrip touchpoints.

SETUP

- Unpackaging:** Carefully remove the scissors from their packaging. The packaging is designed for easy opening without requiring additional tools.
- Inspection:** Before first use, inspect the blades for any damage or manufacturing defects. Ensure the pivot screw is secure.
- First Use:** The scissors are ready for immediate use. No assembly or special preparation is required.

FISKARS®



Image: Fiskars Scissors in their retail packaging, demonstrating the ease of opening.

OPERATING INSTRUCTIONS

These scissors are designed for ambidextrous use, though the ergonomic handle may feel more natural in the right hand for some users. The SoftGrip handles provide enhanced comfort and control.

- Grip:** Place your thumb through the smaller top loop and your fingers through the larger bottom loop. The SoftGrip material will conform to your hand for a comfortable hold.
- Positioning:** Hold the material to be cut firmly with one hand. Position the scissors so the blades are aligned with your desired cutting line.
- Cutting:** Gently squeeze the handles together to close the blades, making a clean cut. Release the handles to open the blades and repeat the motion for continuous cutting.
- Material Compatibility:**
 - Paper & Cardboard:** Ideal for various paper weights, including construction paper, cardstock, and light cardboard.
 - Light Fabric:** Suitable for cutting light fabrics for crafts or minor alterations.
 - Wrapping Paper:** Provides clean, crisp edges for gift wrapping.



Image: A hand demonstrating the ergonomic grip of the Fiskars scissors while cutting paper.

MAINTENANCE

Proper care will ensure the longevity and performance of your Fiskars scissors.

- **Cleaning:** Wipe blades with a soft, damp cloth after each use, especially if cutting materials with adhesive or residue. Dry thoroughly to prevent rust.
- **Storage:** Store scissors in a dry place, preferably with blades closed, to protect the cutting edge and prevent accidental injury.
- **Sharpening:** While the stainless steel blades are designed to stay sharp, professional sharpening may be considered if performance significantly diminishes over time. Avoid attempting to sharpen blades with household tools unless specifically designed for scissors.
- **Avoid Misuse:** Do not use these scissors for heavy-duty tasks such as cutting wire, thick cardboard, or metal, as this can damage the blades and void the warranty.



FISKARS®

Stainless steel blades

hold their sharp edge for long-lasting performance

FISKARS®

Image: A close-up view of the stainless steel blades, emphasizing their quality and the importance of proper maintenance.

TROUBLESHOOTING

If you encounter issues with your Fiskars scissors, consider the following:

- **Dull Blades:** If blades feel dull, ensure they are clean. Sticky residue can sometimes mimic dullness. If still dull, consider professional sharpening or contact customer support regarding the lifetime warranty.
- **Sticky Blades:** Clean blades thoroughly with a damp cloth and mild soap if necessary, then dry completely. For stubborn adhesive, a small amount of rubbing alcohol on a cloth can be used, followed by drying.
- **Loose Pivot:** The pivot screw is factory-set. If it feels excessively loose, contact Fiskars customer support. Do not attempt to tighten it yourself unless you have the proper tools and knowledge, as overtightening can damage the scissors.

SPECIFICATIONS

Feature	Detail
Brand	Fiskars
Model Number	01-004761
Style	8" All Purpose
Color	Gray
Material	Stainless Steel (Blades), Plastic (Handle)
Blade Material	Stainless Steel
Blade Length	3.35 Inches
Blade Edge	Straight
Handle Material	Plastic
Hand Orientation	Ambidextrous
Product Dimensions	8.25" L x 3" W
Item Weight	3.2 ounces
UPC	020335031227



FISKARS®

Image: Technical drawing of Fiskars scissors with key dimensions (length and width) indicated.

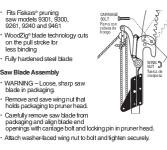
WARRANTY AND SUPPORT

Fiskars tools are designed for longevity and guaranteed to maintain exceptional performance. This product includes a **Full Lifetime Warranty**. For detailed information regarding the warranty and to access customer support, please visit the official Fiskars website or contact their customer service department.

For further assistance, please refer to the contact information provided on the product packaging or the official Fiskars website.



Related Documents - 01-004761

	<h3>Fiskars Pruning Saw Blade Replacement Guide</h3> <p>Instructions for replacing the saw blade on Fiskars pruning saw models, featuring WoodZig blade technology for efficient cutting.</p>
	<h3>Fiskars Pro Replacement Blade Instructions for Hedge Shears, Pruner, Saw, and Lopper</h3> <p>Step-by-step instructions for replacing dull blades on Fiskars Pro Hedge Shears, Pruners, Saws, and Loppers, including necessary tools and safety precautions.</p>
	<h3>Fiskars 9240 Extendable Pruning Stik Head Replacement Instructions</h3> <p>Detailed, step-by-step guide for replacing the head assembly on the Fiskars 9240 Extendable Pruning Stik. Includes required tools, safety precautions, and clear instructions with text descriptions of visuals.</p>
	<h3>Waterwheel XL & Waterwheel XL, with wheels Manual</h3> <p>User manual for the Fiskars Waterwheel XL and Waterwheel XL with wheels, providing instructions for setup, use, and maintenance in multiple languages.</p>
	<h3>Fiskars Extendable Tree Pruning Stik Pruner User Manual and Re-Threading Instructions</h3> <p>User manual and re-threading instructions for the Fiskars 7.9-12 Foot Extendable Tree Pruning Stik Pruner (model 92406935K), including details for various Fiskars pruner series.</p>
	<h3>Fiskars Gardening Catalog 2023: Tools for Every Garden Task</h3> <p>Explore the comprehensive Fiskars 2023 gardening catalog, featuring high-quality tools for pruning, cutting, planting, and maintenance. Discover innovative designs and durable solutions for every gardening enthusiast.</p>