

[Manuals.plus](#) /

> [Accutime](#) /

> Disney Mickey Mouse Analog Kids Watch with Moving Hour and Minute Hands, Classic Black Strap, Easy-Read Dial, Durable Mineral Crystal, Gift Box, Fits Wrists 5.5" to 8"

Accutime MK1006

Disney Mickey Mouse Analog Kids Watch User Manual

Model: MK1006

INTRODUCTION

This manual provides essential information for the proper use, setup, and maintenance of your Disney Mickey Mouse Analog Kids Watch. This timepiece combines classic Disney charm with practical functionality, featuring Mickey's iconic gloved hands as the hour and minute indicators, making time-telling engaging for young users.

The watch features a clean, white dial with bold, easy-to-read black numbers, housed in a durable 25mm metal case. It is equipped with a comfortable black synthetic leather strap with a buckle closure and a mineral crystal lens for durability. This officially licensed watch is designed for children and fits wrist sizes from 5.5" to 8".





Image: Front view of the Disney Mickey Mouse Analog Kids Watch, showcasing the white dial with Mickey's hands as hour and minute indicators, black numbers, and the black synthetic leather strap with white stitching and Mickey silhouette icons.

SETUP

Setting the Time

1. Locate the crown (the small knob) on the right side of the watch case.
2. Gently pull the crown outwards until you feel a distinct click. This stops the watch movement.
3. Rotate the crown clockwise or counter-clockwise to move the hour and minute hands until the desired time is displayed.

4. Once the time is accurately set, push the crown back in firmly against the watch case. The watch will resume ticking.

OPERATING INSTRUCTIONS

Wearing Your Watch

To wear the watch, place it on your wrist and thread the strap through the buckle. Adjust the strap to a comfortable and secure fit. The strap is designed to fit wrist sizes from 5.5 inches to 8 inches. Ensure the watch is not too tight to avoid discomfort or restrict circulation, nor too loose that it slides excessively on the wrist.



Image: The Disney Mickey Mouse Analog Kids Watch displayed on a child's wrist, showing the watch's size and fit.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, regularly wipe the case and strap with a soft, dry, lint-free cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish or strap material.

Water Resistance

This watch is designed for everyday wear and is resistant to minor splashes. It is not suitable for swimming, showering, or submersion in water. Prolonged exposure to water can damage the internal components.

Battery Replacement

The watch is powered by a single battery (included). If the watch stops running, it indicates that the battery needs to be replaced. For optimal performance and to ensure the watch's water resistance (if applicable) is maintained, it is recommended that battery replacement be performed by a qualified watch technician or a reputable jeweler.

TROUBLESHOOTING

- **Watch Not Running:** Ensure the crown is fully pushed in against the watch case. If the watch still does not operate, the battery may be depleted and require replacement.
- **Time Inaccurate:** Verify that the crown is securely pushed in after setting the time. If the watch consistently loses or gains time, it may require servicing by a professional watch repairer.
- **Condensation Under Crystal:** If you notice condensation inside the watch crystal, this indicates moisture has entered the watch. Immediately seek professional service to prevent further damage to the movement.

SPECIFICATIONS

Product Dimensions	3.5 x 3.2 x 2.9 inches; 4.66 ounces
Item Model Number	MK1006
Department	Girls
Batteries	1 Unknown batteries required. (included)
Date First Available	April 15, 2010
Manufacturer	Accutime Watch Corp.
ASIN	B002YK5W7U
Material	Leather (Strap)



Image: The black Disney gift box in which the Mickey Mouse Analog Kids Watch is packaged, featuring subtle Disney branding.

WARRANTY AND SUPPORT

Warranty Information

For specific details regarding the warranty coverage for your Disney Mickey Mouse Analog Kids Watch, please refer to the warranty card or documentation included within the product packaging. This documentation will outline the terms, conditions, and duration of the manufacturer's warranty.

Customer Support

Should you require assistance, have questions, or encounter any issues not covered in this manual, please contact Accutime customer service. You can typically find contact information on the manufacturer's official website or through the retailer from whom you purchased the watch.

For general inquiries, you may visit the [Accutime Store on Amazon](#).

© 2023 Accutime Watch Corp. All rights reserved. Disney elements © Disney.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question