

[Manuals.plus](#) /

› [Great Northern Popcorn Company](#) /

› Great Northern Popcorn Company 8oz Popper with Stainless-Steel Kettle, Reject Kernel Tray, Warming Light and Accessories, 8 OZ, Red Floral

Great Northern Popcorn Company 83-DT5634

Great Northern Popcorn Company 8oz Popcorn Popper

Model: 83-DT5634 / 6100 8 ounce Foundation Red

1. INTRODUCTION

Thank you for choosing the Great Northern Popcorn Company 8oz Popcorn Popper. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new popcorn machine. Please read all instructions carefully before use and retain this manual for future reference.

This deluxe model features a durable stainless-steel kettle, a convenient reject kernel tray, and a warming light to keep your popcorn fresh. Its antique-style design brings a classic cinema experience to your home or event.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Ensure the machine is placed on a stable, level surface.

3. PACKAGE CONTENTS

Your Great Northern Popcorn Company 8oz Popper package should include the following items:

- Popcorn Machine Main Unit (with 8oz Stainless-Steel Kettle)
- Popcorn Scoop
- Measuring Cups (for oil and kernels)
- Popcorn Bags (starter pack)

Accessories Included:



Image: Accessories included with your popcorn machine, such as the popcorn scoop, measuring cups, and popcorn bags.

4. SETUP

Before first use, ensure all packaging materials are removed from inside and outside the machine. Minor assembly may be required.

1. **Unpack the Machine:** Carefully remove the popcorn machine from its packaging. Inspect for any damage.
2. **Position the Machine:** Place the machine on a stable, flat, and heat-resistant surface. Ensure there is adequate ventilation around the unit. The machine dimensions are approximately 17 inches (L) x 14 inches (W) x 24 inches (H).
3. **Install Kettle:** Ensure the stainless-steel kettle is securely attached within the machine. The kettle is designed for easy cleaning and removal.
4. **Connect Power:** Plug the power cord into a standard 110-volt electrical outlet.



Image: The Great Northern Popcorn Company 8oz Popcorn Popper, ready for use.



Image: Product dimensions for placement planning.

5. OPERATING INSTRUCTIONS

Follow these steps to make delicious popcorn:

1. **Preheat Kettle:** Turn on the 'Pot Heater' switch (usually the rightmost switch) to preheat the kettle. Allow 4-5 minutes for the kettle to reach optimal temperature.
2. **Add Oil:** Once preheated, add the recommended amount of popcorn oil (e.g., 1 tablespoon for 8oz kernels) to the kettle.
3. **Add Kernels:** Immediately add 8 ounces of popcorn kernels to the kettle.
4. **Start Stirrer:** Turn on the 'Stirrer' switch (middle switch) to ensure even popping.
5. **Popcorn Production:** The popcorn will begin to pop and overflow from the kettle into the main chamber.
6. **Turn Off Kettle:** Once popping slows significantly (typically when 95% of kernels have popped), turn off the 'Pot Heater' and 'Stirrer' switches.
7. **Empty Kettle:** Carefully tilt the kettle using its handle to release any remaining popcorn.

8. **Keep Warm:** Turn on the 'Spot Light Warmer' switch (leftmost switch) to keep the popped corn warm and fresh.
9. **Serve:** Use the included popcorn scoop to serve the popcorn. The reject kernel tray at the bottom collects unpopped kernels for easy disposal.

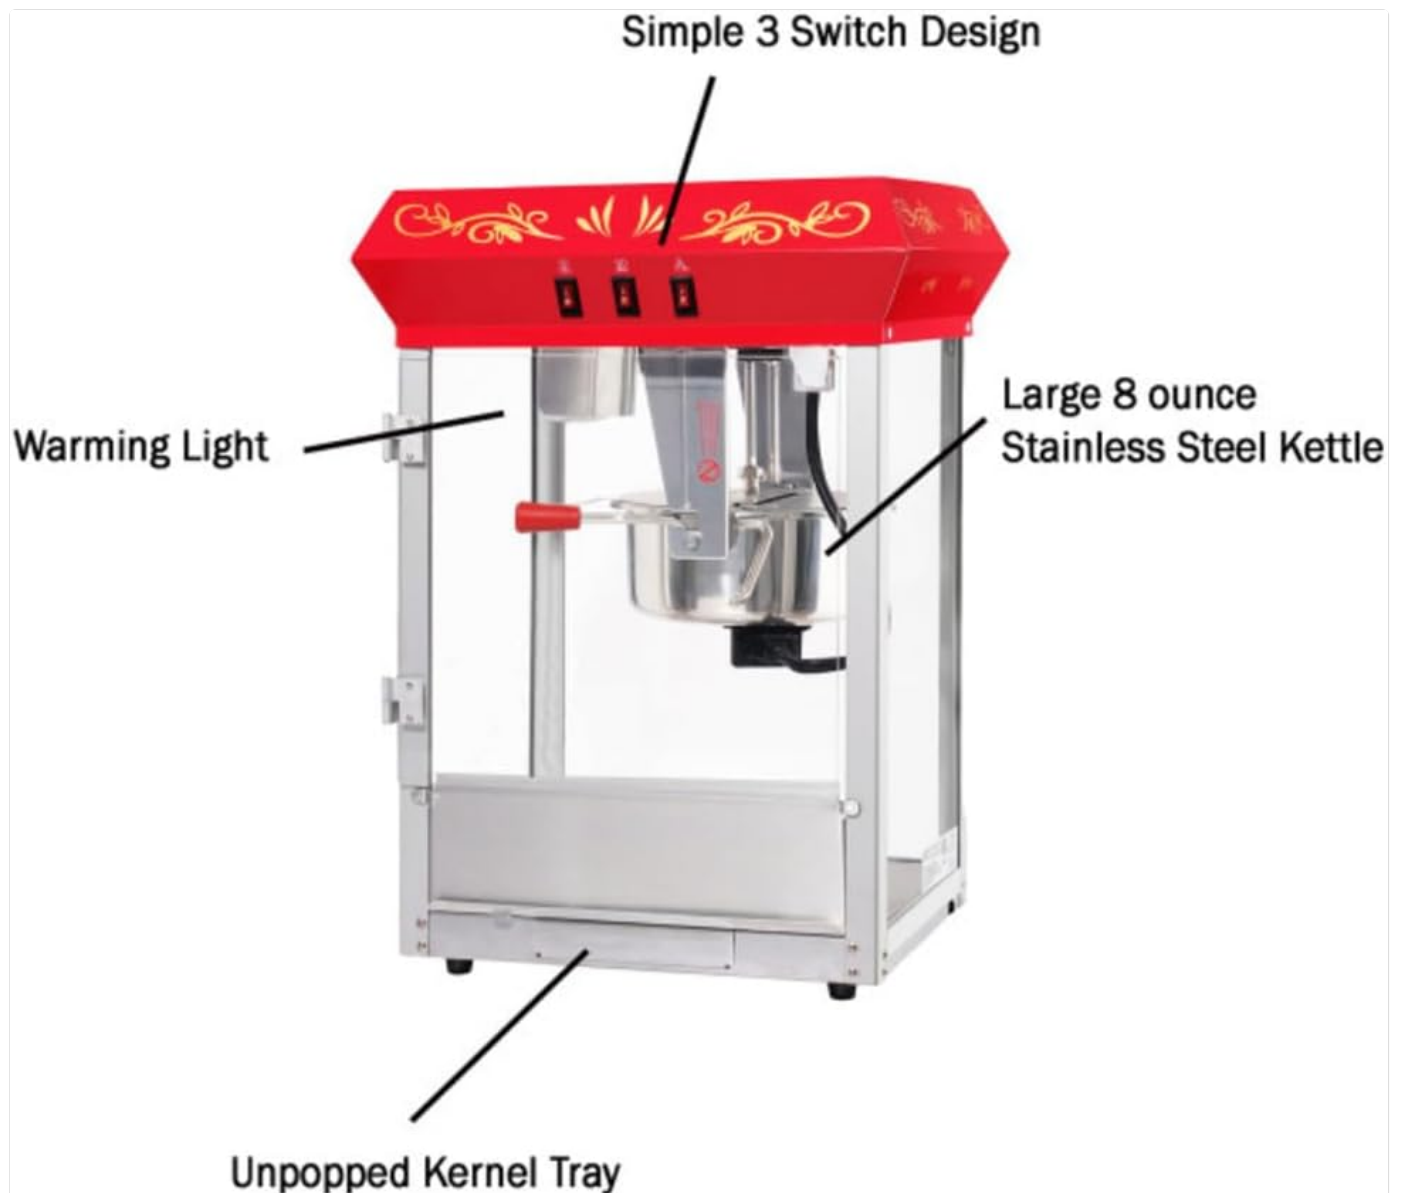


Image: Key features of the popcorn machine, including the three control switches and the kettle.

Video: Demonstration of the 8oz Popper with Stainless-Steel Kettle in operation, showing the popping process.

6. MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your popcorn machine. Always unplug the machine and allow it to cool completely before cleaning.

- **Daily Cleaning:** After each use, wipe down the inside of the cooker (kettle) on both sides with a couple of paper towels. Pull the handle down to release any loose crumbs into the reject kernel tray. Wipe the interior glass walls with a damp cloth and then dry.
- **Weekly Deep Clean:** Once a week, or as needed, remove the kettle from its mounting. Clean the kettle thoroughly with a mild detergent and warm water. Rinse well and dry completely before reattaching. Be careful not to wet the electrical cord or the area where the cord connects to the kettle.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.

- **Reject Kernel Tray:** Regularly empty and clean the reject kernel tray located at the bottom of the machine.

7. TROUBLESHOOTING

If you encounter issues with your popcorn machine, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; Power outlet malfunction; Blown fuse/tripped breaker.	Ensure plug is securely in outlet; Test outlet with another appliance; Check household fuse/breaker.
Kettle not heating.	Pot Heater switch off; Kettle not properly connected.	Ensure 'Pot Heater' switch is on; Verify kettle is securely seated and connected.
Popcorn not popping or burning.	Insufficient preheating time; Too much/too little oil; Old kernels; Kettle overloaded.	Allow 4-5 minutes preheat; Use recommended oil/kernel amounts; Use fresh kernels; Do not exceed 8oz kernel capacity.
Stirrer not rotating.	Stirrer switch off; Obstruction in kettle.	Ensure 'Stirrer' switch is on; Check kettle for blockages and clean if necessary.
Excessive unpopped kernels.	Kettle not hot enough; Old or dry kernels.	Ensure proper preheating; Use fresh, high-quality popcorn kernels.

8. SPECIFICATIONS

Feature	Detail
Brand	Great Northern Popcorn Company
Model Number	6100 8 ounce Foundation Red
Color	Red Floral
Capacity	8 ounces
Material	Tempered Glass, Stainless Steel
Product Dimensions	17"L x 14"W x 24"H
Item Weight	31.5 Pounds
Power	820-watt
Special Feature	Lightweight, Whisper Quiet Motor, Warming Deck

9. WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the documentation included with your purchase or visit the official Great Northern Popcorn Company website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Great Northern Popcorn Company customer service directly. Contact details are typically available on their official website or product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question