

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Mr. Coffee](#) /

> [Mr. Coffee Advanced Brew 5-Cup Programmable Coffee Maker \(Model JWX3-RB\) Instruction Manual](#)

Mr. Coffee JWX3-RB

Mr. Coffee Advanced Brew 5-Cup Programmable Coffee Maker (Model JWX3-RB) Instruction Manual

Your guide to setting up, operating, and maintaining your Mr. Coffee coffee maker.

1. PRODUCT OVERVIEW

The Mr. Coffee Advanced Brew 5-Cup Programmable Coffee Maker (Model JWX3-RB) is designed for convenient and reliable coffee brewing. This appliance features programmable options for delayed brewing and an auto shut-off function for safety. Its compact design makes it suitable for various kitchen spaces.

Key features include:

- **1-Hour Automatic Shut-Off:** Powers down the coffee maker after one hour of inactivity.
- **Delay Brew Timer:** Allows you to program the brewing cycle to start at a specific time.
- **Grab-A-Cup Auto Pause:** Temporarily stops the brewing cycle, enabling you to pour a cup before brewing is complete.
- **Water Window:** Provides clear visibility of the water level to prevent overfilling.
- **Removable Filter Basket:** Facilitates easy cleaning and coffee ground disposal.





Figure 1: Front view of the Mr. Coffee Advanced Brew 5-Cup Programmable Coffee Maker with a full carafe and a coffee mug.

2. SETUP

1. **Unpack:** Carefully remove all packaging materials from the coffee maker.
2. **Initial Cleaning:** Before first use, wash the carafe and the removable filter basket with warm, soapy water. Rinse thoroughly. It is recommended to run two full cycles of water through the coffee maker without coffee grounds to remove any manufacturing odors.
3. **Placement:** Place the coffee maker on a flat, stable surface away from the edge of the counter. Ensure it is near an electrical outlet.
4. **Set Clock:** Plug the coffee maker into a 110-volt AC electrical outlet. The digital display will flash. Press the **HOUR** and **MINUTE** buttons to set the current time. Hold the buttons down for rapid scrolling or press repeatedly for single increments.

3. OPERATING INSTRUCTIONS

3.1 Brewing Coffee

1. **Fill Water Reservoir:** Open the top lid and fill the water reservoir with fresh, cold water using the carafe. The water window on the side indicates the water level. Do not exceed the 5-cup maximum fill line.

2. **Add Coffee Grounds:** Place a paper filter (basket-style) into the removable filter basket. Add the desired amount of ground coffee. A general guideline is one tablespoon of coffee per cup, adjusted to personal preference.



Figure 2: Open lid revealing the filter basket with coffee grounds.

3. **Close Lid:** Close the top lid securely.
4. **Place Carafe:** Ensure the empty carafe is placed correctly on the warming plate.
5. **Start Brewing:** Press the **BREW NOW** button to begin the brewing cycle immediately. The **ON** indicator light will illuminate.
6. **Grab-A-Cup Feature:** If you need a cup before the brewing cycle is complete, carefully remove the carafe. The flow of coffee will temporarily stop. Return the carafe to the warming plate within 20 seconds to prevent overflow.
7. **After Brewing:** Once brewing is complete, the coffee maker will keep the coffee warm for 1 hour before automatically shutting off.

3.2 Using Delay Brew

1. **Prepare Coffee Maker:** Follow steps 1-4 from "3.1 Brewing Coffee".
2. **Set Delay Time:** Press the **SET DELAY** button. The display will flash. Use the **HOUR** and **MINUTE** buttons to set the desired time for brewing to start.
3. **Activate Delay Brew:** Press the **SET DELAY** button again to confirm the time. The **DELAY BREW** indicator light will illuminate, indicating the timer is set.
4. **Cancel Delay Brew:** To cancel the delay brew, press the **OFF** button.

4. MAINTENANCE

4.1 Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Wash the carafe and filter basket in warm, soapy water after each use. The carafe can also be cleaned with a dish wand for hard-to-reach areas.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not immerse the coffee maker in water or other liquids.

4.2 Descaling

Mineral deposits (calcium) can build up in your coffee maker over time, affecting performance. Descale your coffee maker regularly (e.g., monthly or every 40-80 uses, depending on water hardness).

1. Fill the water reservoir with white vinegar up to the 5-cup mark.
2. Place an empty paper filter in the filter basket and close the lid.
3. Place the empty carafe on the warming plate.
4. Press the **BREW NOW** button and allow half of the vinegar solution to brew into the carafe.
5. Press the **OFF** button and let the coffee maker soak for 30 minutes.
6. Press the **BREW NOW** button again to brew the remaining vinegar solution.
7. Once complete, discard the vinegar solution and rinse the carafe.
8. Run 2-3 full cycles of fresh, cold water through the coffee maker to flush out any remaining vinegar taste or odor.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee not brewing.	Coffee maker not plugged in; water reservoir empty; carafe not properly placed.	Ensure power cord is securely plugged in. Fill water reservoir. Verify carafe is centered on the warming plate.
Coffee is weak or too strong.	Incorrect coffee-to-water ratio; improper grind size.	Adjust the amount of coffee grounds. Use a medium grind for optimal flavor.
Coffee overflows from filter basket.	Too much coffee grounds; filter not seated correctly; clogged filter basket.	Reduce coffee grounds. Ensure filter is properly placed. Clean filter basket and descaling may be needed.
Coffee has a plastic taste.	New unit odor.	Run several cycles of plain water through the coffee maker before first use.
Coffee is not hot enough.	Mineral buildup; warming plate issue.	Perform descaling procedure. If problem persists, contact customer support.

6. SPECIFICATIONS

- **Brand:** Mr. Coffee
- **Model Number:** JWX3-RB
- **Color:** Black
- **Product Dimensions (H x W x D):** 10.51" x 5.71" x 8.58"
- **Item Weight:** 3.09 pounds
- **Capacity:** 5 Cups (approx. 25 oz)
- **Voltage:** 110 Volts
- **Special Features:** Programmable, 1-Hour Auto Shut-Off, Grab-A-Cup Auto Pause, Water Window, Permanent Filter

- **Included Components:** Coffee Maker, Glass Carafe, Filter Basket



Figure 3: Product dimensions for the Mr. Coffee Advanced Brew 5-Cup Programmable Coffee Maker.

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Mr. Coffee website. Keep your purchase receipt as proof of purchase for warranty claims.

